


NCR RealScan™ 78 Bi-Optic Scanner/Scale (7878)

Release 1.0

User Guide

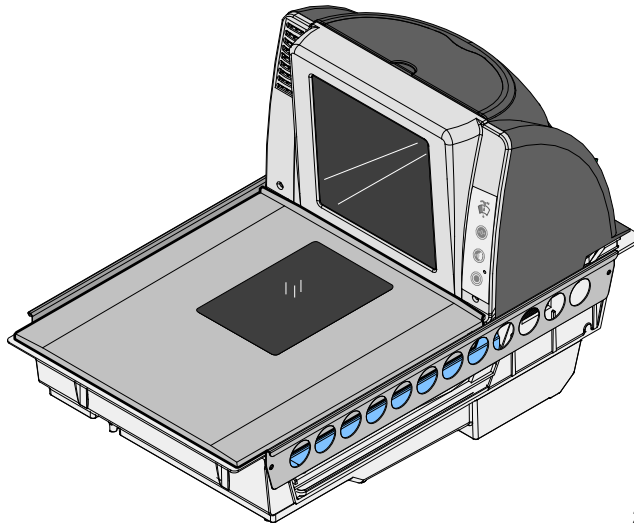

23953

B005-0000-1724

Issue N

The product described in this book is a licensed product of NCR Corporation.

NCR is a registered trademark of NCR Corporation. NCR RealScan and NCR RealPOS are trademarks of NCR Corporation in the United States and/or other countries. Other product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

IBM is a registered trademark of IBM Corporation.

Symbol is a registered trademark of Symbol Technologies Incorporated.

Metrologic is a registered trademark of Metrologic Instruments Incorporated.

Sensormatic is a registered trademark of Sensormatic Electronics Corporation.

Checkpoint is a registered trademark of Checkpoint Systems Incorporated.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

It is the policy of NCR Corporation (NCR) to improve products as new technology, components, software, and firmware become available. NCR, therefore, reserves the right to change specifications without prior notice.

All features, functions, and operations described herein may not be marketed by NCR in all parts of the world. In some instances, photographs are of equipment prototypes. Therefore, before using this document, consult with your NCR representative or NCR office for information that is applicable and current.

To maintain the quality of our publications, we need your comments on the accuracy, clarity, organization, and value of this book.

Email: FD230036@ncr.com

Copyright © 2007–2011, 2013–2014, 2017, 2019

By NCR Corporation

Global Headquarters

864 Spring St NW

Atlanta, GA 30308

U.S.A.

All Rights Reserved

Preface

Audience

This book is written for hardware installer/service personnel, system integrators, and field engineers.

Notice: This document is NCR proprietary information and is not to be disclosed or reproduced without consent.

Safety Requirements

The NCR RealScan™ 78 Bi-Optic Scanner/Scale (7878) conforms to all applicable legal requirements. To view the compliance statements refer to the *NCR RealScan™ Safety and Regulatory Information* (B005-0000-1699).

References

- *NCR RealScan™ High Performance Bi-Optic Scanner/Scale (7878) Hardware Service Guide (B005-0000-1725)*
- *NCR RealScan™ Tool Suite Guide (B005-0000-1883)*
- *NCR Scanner Programming Tags (BST0-2121-74)*
- *NCR Scanner/Scale Interface Programmer's Guide (BD20-1074-A)*
- *NCR RealScan™ Safety and Regulatory Information (B005-0000-1699)*
- *NCR K150/F150 Imaging Module Programming Guide (B005-0000-2166)*
- *NCR Imaging Assembly (7878-K150) Kit Instructions*
- *Checkpoint® Antenna (7878-K940) Kit Instructions*

Table of Contents

Chapter 1: Product Information

Available Models.....	1-2
Features and Options.....	1-3
Bi-Optic Scanning.....	1-3
Communications Protocol	1-4
Autodiscrimination.....	1-5
Remote Compact Display	1-6
Auxiliary RS232 Ports.....	1-6
USB Peripheral Ports and Main (POS) USB Communication Port	1-7
Firmware Flashing	1-7
Operator Interface.....	1-7
Voice Messages	1-7
Window Maintenance Indicator.....	1-8
Scale Zero Button.....	1-8
Volume Adjust Button	1-9
Manual Deactivation Button.....	1-10
Motion Detector	1-10
Power Supply	1-11
PACESETTER.....	1-11
PACESETTER <i>Plus</i>	1-11
PACESETTER III.....	1-12
Parameter Programming	1-13
Scan Doctor Diagnostics	1-13
Power-on Wellness Check	1-13
Ongoing Wellness Check.....	1-14
Service Diagnostics.....	1-14
Soft Power Down/Power Up.....	1-14

Chapter 2: Site Preparation

Customer Responsibilities.....	2-1
Preparing the Site	2-2
Weight.....	2-3
Scanner Dimensions.....	2-4
7878-1xxx/2xxx.....	2-4

7878–4xxx/5xxx.....	2-5
Checkstand Cutout.....	2-6
7878–1xxx/2xxx.....	2-6
7878–4xxx/5xxx.....	2-7
7878 With Side Rails, Adjustable Cutout.....	2-8
Test for Adequate ESD Ground.....	2-9
Checkstand Wiring.....	2-10
Power Considerations.....	2-11
Power Transient Protection.....	2-11
Cable Connections.....	2-11
Service Clearance.....	2-12
Environmental Considerations.....	2-13
Ventilation Requirements.....	2-13
RealScan 25 Compact Display Dimensions.....	2-14

Chapter 3: Installation

Installation Steps.....	3-1
Step 1: Verify Installation Preparation (Scanner and Checkstand).....	3-2
Reporting a Damaged Unit.....	3-2
Package Contents.....	3-2
Step 2: Cable Installation Preparation.....	3-3
Step 3: Sensormatic® Coil Installation.....	3-4
Step 4: Cable Connection.....	3-11
Step 5: 7878 Installation in Checkstand Cutout.....	3-12
Step 6: Top Plate Alignment Verification.....	3-13
Step 7: Scale Calibration.....	3-13
Perform the Calibration Procedure.....	3-14
Scale Accuracy Verification.....	3-23
Securing the Calibration Switch.....	3-26
Step 8: Sensormatic® Deactivation Setup.....	3-29
Sensormatic Tag Deactivation.....	3-29
Sensormatic® Online Offline Indication.....	3-29
Specific Function Programming.....	3-32
Power-up the System.....	3-36
Check Sensormatic® Deactivation System.....	3-36
Step 9: Operational Unit Verification.....	3-37
NCR 7878 Scanner-Only Models.....	3-37

NCR 7878 Scanner/Scale Models.....	3-37
7878 Power-On Wellness Check	3-38
Checkout Reading Operation.....	3-38
Flash Latest Firmware.....	3-38
Special Host Terminal Connections.....	3-39
Scanner Connected to IBM Terminals.....	3-39
SNI Beetle Host Terminal	3-39
Peripheral Connections	3-41
Metrologic Hand-Held Scanner	3-41
Programming the Metrologic Hand-Held Scanner if Connected through the Auxiliary RS232 Port	3-41
Programming the 7878.....	3-44
NCR 2357, NCR 7837, and Hand-Held Products (Honeywell) Type Hand-Held Scanner	3-45
Programming Hand-Held Products Scanner when Connected through the Auxiliary RS232 Port	3-45
Programming the 7878 when a Hand-Held Product Scanner is Connected through the Auxiliary RS 232 Port	3-46
Programming the NCR 2357 or NCR 7837 Hand-Held Scanner when Connected through the USB Peripheral Port.....	3-47
NCR 2356 and Symbol (Motorola) Type Hand-Held Scanner.....	3-48

Chapter 4: Operation

System Components	4-1
Operator Display Panel.....	4-2
Light Bar Status Indicator.....	4-2
Window Maintenance Indicator.....	4-3
Scale Zero Button.....	4-4
Volume Adjust Button	4-4
Manual Deactivation Button	4-5
Motion Detector	4-6
Remote Compact Display	4-6
Light Bar LED Scanner State Indicators.....	4-7
Speaker	4-8
Vertical Scan Window	4-8
Top Plate.....	4-8
Horizontal Scan Window.....	4-8
Label Orientation.....	4-9

Active Scan Zone.....	4-9
Barcode Quality.....	4-10
Multiple Reads	4-10
Operating Instructions.....	4-11
Turning the 7878 Scanner On and Off	4-11
Scanner/Scale Model	4-11
Scanner Only Model.....	4-11
Scanning Procedure	4-12
Weighing Procedure.....	4-12
Sensormatic® Security Tag Deactivation Procedure	4-13
Normal Operation	4-13
Manual Deactivation.....	4-14
Adjusting the Good Read Tone.....	4-14
Not-On-File Error	4-15
Cleaning Instructions.....	4-16
Scanner Body	4-16
Vertical Scan Window	4-16
Top Plate and Horizontal Scan Window	4-16

Chapter 5: Programming

Programming Description.....	5-1
Creating the Program	5-1
Write the Program	5-1
Enter the Program	5-2
Save the Program.....	5-2
Programming Tags	5-3
ABORT	5-3
DEFAULT	5-4
END	5-4
SPEAK BARCODES CURRENTLY ENABLED.....	5-4
SPEAK SCANNER SERIAL NUMBER.....	5-5
HEX 0–HEX F	5-5
PROGRAM MODE.....	5-6
SAVE AND RESET	5-6
Program Entry Procedure.....	5-7
Enter All Parameters	5-7
Enter Specific Parameters (Shortcut Method)	5-9

Parameter Defaults	5-11
Programming Tips.....	5-16
Program Parameter Descriptions.....	5-17
Communications Protocol	5-17
IBM Slot Scanner.....	5-17
IBM USB.....	5-17
NCR (RS-232 USB)	5-17
RS-232	5-17
Good Read Tone.....	5-18
Tone On/Off.....	5-18
Tone Frequency (Hertz).....	5-18
Tone Length (Milliseconds).....	5-18
Tone Volume	5-19
Not-On-File Volume	5-19
Timers	5-19
Lockout Time	5-19
Restart Lockout Timer	5-19
Active Time	5-20
900ms Lockout Timer Restart Limit.....	5-20
Bar Codes-1	5-20
UPC/EAN	5-20
Extend UPC-A to EAN-13.....	5-20
Extend UPC-E to UPC-A.....	5-21
Add-On Bar Codes.....	5-21
Add-On Code Length.....	5-21
Send Data.....	5-21
Set 2 Tag Label	5-21
Bar Codes-2	5-21
Code 39.....	5-21
Minimum Characters	5-22
Full ASCII	5-22
Check Digit Present.....	5-22
Transmit Check Digit.....	5-22
Allow 1- or 2-Character Tags.....	5-22
Code 39 Tone.....	5-23
Tone Length.....	5-23
Tone Frequency.....	5-23

Code 39 Halves Enable	5-23
Code 39 Stitch Enable.....	5-24
Code 39 Stitch Check Digit.....	5-24
Check Digit Length1 and Length2	5-24
Scans Required.....	5-24
Overlap Characters.....	5-24
Minimum Segment Size.....	5-24
Bar Codes–3	5-25
Interleaved 2 of 5	5-25
Bar Code Length.....	5-25
Value 1 and 2.....	5-26
Check Digit Present.....	5-26
Transmit Check Digit.....	5-26
Interleaved 2 of 5 Tone.....	5-26
Tone Length.....	5-26
Tone Frequency.....	5-27
Interleaved 2 of 5 Check Digit Length1	5-27
Interleaved 2 of 5 Check Digit Length2.....	5-27
Enable Interleaved 2 of 5 Stitching.....	5-27
Scans Required.....	5-28
Overlap Characters.....	5-28
Minimum Segment Size.....	5-28
Bar Codes–4	5-28
Code 128.....	5-28
Code 128 Tone.....	5-28
Tone Length.....	5-29
Tone Frequency.....	5-29
Code 128 Stitch Enable.....	5-29
Scans Required.....	5-29
Overlap Characters.....	5-29
Minimum Segment Size.....	5-29
Bar Codes–5	5-30
GS1 DataBar Enable	5-30
Scans Required on GS1 DataBar–14.....	5-30
Scans Required on GS1 DataBar–E	5-30
UCC–128 Emulation Mode	5-30
GS1 DataBar Expanded Application Identifier Programming Options.....	5-31

Bar Codes–6	5-33
International Standard Book Number (ISBN)	5-33
ISBN–10 and ISBN–13	5-33
ISSN	5-33
Bar Codes–7	5-34
Pharmacode Check Digit Transmission	5-34
Bar Codes–8	5-34
Codabar Check Digit	5-34
Codabar Check Digit Transmission	5-34
Codabar Tone Length	5-34
Codabar Tone Frequency	5-35
Codabar Tone	5-35
Codabar Halves	5-35
Codabar Stitch	5-35
Number of Codabar Scans Required	5-36
Label Identifiers	5-36
Identifier Type	5-36
Common Byte 1 and Common Byte 2	5-37
Bar Code Type	5-37
Common Byte	5-37
Unique Identifier	5-38
RS–232 Parameters 1	5-38
Baud Rate	5-38
Parity	5-38
Stop Bits and Character Length	5-38
Handshake	5-39
RS–232 Parameters 2	5-39
BCC Options	5-39
Interface Control	5-39
Check Digit	5-40
RS–232 Prefix Byte	5-40
Prefix Byte	5-40
ASCII Code	5-40
RS–232 Terminator Byte	5-41
Terminator Byte	5-41
ASCII Code	5-41
RS–232 Communications Options	5-41

Message Delay	5-41
Scanner/Scale Format	5-42
Good Weigh Tone.....	5-42
Scale Parameters.....	5-43
Model.....	5-43
IBM Address.....	5-43
Miscellaneous Parameters	5-43
Host Tone Control	5-43
IBM Retransmit Control	5-44
Enable/Disable Voice Messages.....	5-44
IBM-485 / IBM-USB Tag Data Format	5-45
Number System Character Parameter	5-45
Dual Cable Interface	5-46
Avery Scale Emulation.....	5-46
Programming Worksheets	5-47
Communications Protocol	5-47
Good Read Tone.....	5-48
Timers	5-49
Bar Codes-1	5-50
Bar Codes-2	5-51
Bar Codes-3	5-52
Bar Codes-4	5-53
Bar Codes-5	5-54
Bar Codes-6	5-55
Bar Codes-7	5-55
Bar Codes-8	5-56
Label Identifiers	5-57
Number System Character	5-58
Sensormatic Deactivation Tone Frequency	5-58
Sensormatic Deactivation Tone Pulse.....	5-58
RS-232 Parameters 1.....	5-59
RS-232 Parameters 2.....	5-60
RS-232 Prefix Byte	5-61
RS-232 Terminator Byte.....	5-61
RS-232 Communications Options	5-62
Scale Parameters.....	5-62
Miscellaneous Options	5-63

Miscellaneous Parameters	5-63
Code 128 Tone Length	5-63
Code 128 Tone Frequency	5-64
Code 128 Tone.....	5-64
Code 128 Minimum and Maximum Tag Length	5-64
Code 39 Tone Length	5-65
Code 128 Stitch.....	5-65
Code 39 Tone Frequency	5-65
Code 39 Tone.....	5-66
Code 39 Quiet Zone.....	5-66
Code 39 InterCharacter Gap Check	5-66
Code 39 Halves	5-66
Code 39 Stitch.....	5-66
Code 39 CD Length1	5-67
Code 39 CD Length2	5-67
Code 39 Minimum and Maximum Length	5-67
Interleaved 2 of 5 Tone Length.....	5-68
Interleaved 2 of 5 Tone Frequency	5-68
Interleaved 2 of 5 Tone.....	5-68
Interleaved 2 of 5 CD Length1	5-69
Interleaved 2 of 5 CD Length2.....	5-69
Interleaved 2 of 5 Scans Required	5-69
Interleaved 2 of 5 Overlaps	5-70
Interleaved 2 of 5 Minimum Segment Size	5-70
Enable/Disable Interleaved 2 of 5 Partials.....	5-70
GS1 DataBar Tone Length	5-71
GS1 DataBar Tone Frequency	5-71
GS1 DataBar Tone.....	5-71
GS1 DataBar–E AI 93 to Code 39 Tag Data Conversion	5-72
GS1 DataBar–E AI 94 to UCC–128 Tag Data Conversion	5-72
GS1 DataBar–E AI 94 to Code–128 Tag Data Conversion	5-72
GS1 DataBar–E AI 95 to Interleaved 2 of 5 Tag Data Conversion	5-72
Codabar Tone Length	5-73
Codabar Tone Frequency	5-73
Codabar Tone.....	5-73
Codabar Halves	5-74
Codabar Stitch.....	5-74

Codabar Require Start/Stop Match	5-74
Codabar Require Quiet Zones	5-74
Codabar Start/Stop Transmission.....	5-74
Codabar Hard Correlation	5-75
Number of Codabar Overlaps Required	5-75
Number of Codabar Scans Required	5-75
Number of Coupon Scans Required	5-76
Number of UPC/EAN Scans Required.....	5-76
Number of Code 39 Scans Required	5-76
Number of Code 128 Scans Required.....	5-77
Number of Code 39 Overlaps Required.....	5-77
Number of Minimum Code 39 Characters in Code 39 Partial.....	5-77
Number of Code 128 Overlaps Required.....	5-77
Number of Minimum Interleaved 2 of 5 Characters in Interleaved 2 of 5 Partial	5-78
Number of Minimum Code 128 Characters in Code 128 Partial	5-78
Command-type Disable	5-78
Ignore RS-232 Commands from Host Terminal	5-78
GS1 DataBar Coupon Support.....	5-79
GS1 DataBar AI 8110 coupons	5-79
EAN-13 98 coupons	5-79
EAN-13 99 coupons	5-79
Scanner Power-On State.....	5-79
ASCII Code Chart	5-80
Special Programming.....	5-81
Set Current Parameters to Default Values.....	5-81
Enable Soft Defaults	5-81
Disable Soft Defaults	5-81
Convert UPC-E Tags to EAN-13 Tags	5-82
Check Digits on Price Fields.....	5-82
Mandatory 4 Digit Price Check	5-82
Mandatory 5 Digit Price Check	5-82
Enable/Disable Code-128 Partials	5-83
Good Read Tone.....	5-83
GS1 DataBar	5-84
GS1 Databar.....	5-84
GS1 Databar-14.....	5-84

GS1 Databar–14 Stacked	5-84
GS1 Databar–Expanded.....	5-84
GS1 Databar–Expanded Stacked	5-85
Enable/Disable GS1 DataBar	5-85
Send GS1 DataBar–14 as EAN–13 Data.....	5-85
Terminal Coupon Interface Parameters.....	5-85
Terminal Coupon Select 1	5-85
Terminal Coupon Select 2	5-86
Voice Messages—Enable/Disable	5-87
Voice Volume	5-88
Volume Adjust Button	5-88
Volume Levels.....	5-88
Enable/Disable Volume Adjust Button.....	5-88
Single Volume Adjust Barcode.....	5-90
Window Maintenance Indicator	5-90
PACESETTER Functions	5-91
PACESETTER III.....	5-91
Firmware Flashing	5-92
Obtaining the Utility and New Firmware	5-92
Acquiring and Installing the RealScan Scanner Flash Tool for Windows.....	5-92
Acquiring Firmware.....	5-93
Identifying Firmware Version.....	5-93
Firmware Flashing Procedure.....	5-94
NCR RealScan Scanner Flash Drive Support	5-98
NCR RealScan Scanner Flash Drive Prep Tool.....	5-99
Scanner Cloning using Programming Tags.....	5-99

Chapter 6: Troubleshooting

7878 Diagnostics and Troubleshooting	6-1
Scale Diagnostics.....	6-1
Scale Troubleshooting Codes	6-2
Scanner Diagnostic Codes	6-3
Isolating Sensormatic® Problems	6-4

Appendix A: Imaging Assembly (K150) Kit

Introduction.....	A-1
Kit Components.....	A-2

Installation Tools Needed.....	A-2
Software Tools Needed.....	A-2
Installation Procedures.....	A-3
Remove External Components (Optics Assembly).....	A-3
Install the Imaging Assembly.....	A-3
Programming Instructions.....	A-9
Imager Module (K150) Firmware Functionalities.....	A-9
Imager Interlock.....	A-9
Laser Gate Control.....	A-9
Firmware Requirements.....	A-9
Program the 7878 for the Imager Module.....	A-9
Activate Beep sounds during HH input.....	A-11
Enable 2D Bar Codes Pass-Through.....	A-12
Enable the Imager Kit K150.....	A-13
Enable 2D Pass-Through Function of all 2D types.....	A-14
Program the Imager Module.....	A-14
Enable other Bar Code Symbolologies.....	A-15
Sample 2D Bar Codes.....	A-16

Appendix B: NCR Scanner Programming Tags

Appendix C: Additional Diagnostic Functions

Scale.....	C-1
DM-4-3 Speak Weight.....	C-1
DM-4-B Speak and Display Calibration Date.....	C-1
Scanner Service Diagnostics.....	C-2
Communication Protocol.....	C-2
Display Firmware Version.....	C-3
RS-232 Turnaround.....	C-3
Possible Bad Component.....	C-4
Toad Test.....	C-4
Possible Bad Components.....	C-4
Vibration Check.....	C-4

Appendix D: Checkpoint Antenna (K940) Kit

Introduction.....	D-1
Kit Components.....	D-1

Assembly–Checkpoint® Antenna.....	D-1
Checkpoint® Antenna Cable	D-1
Tools required	D-2
7878 Checkpoint® Installation Procedure.....	D-2
Remove the Top Plate.....	D-2
Remove the Front Bezel	D-3
Remove the Tower Cover	D-3
Remove the Bottom Electronics Cover	D-4
Install the Checkpoint Antenna	D-5
Install the Washer	D-8
Install the Tower Cover.....	D-11
Install the Front Bezel.....	D-12
Install the Top Plate	D-13
Install the Checkpoint Cable	D-13

Revision Record

Issue	Date	Remarks
A	March 30, 2007	All–First issue
B	August 13, 2007	All applicable topics–incorporated latest engineering changes for GCA release
C	November 15, 2007	Modified Scale Calibration Instructions, Installation Instructions, Top Plate, and Checkstand cutout
D	December 2008	Updated port names, cable connection drawings, scale calibration test procedures, and added Checkpoint Antenna Cable Kit installation procedure
E	April 17, 2009 June 4, 2009	Rebranding update Updated Timers worksheet
F	June 29, 2009 October 26, 2009	New PIDs Updated Environmental Considerations table and RS–232 Parameters 2 worksheet
	February 1, 2010	Updated Dual Cable Interface
	February 12, 2010	Removed “NCR 2356 and Symbol (Motorola) Type Hand–Held Scanner” section and replaced with a link to the Scanner website
	July 7, 2010	Added Check Digits on Price Fields section
	September 14, 2010	Added Scanner Cloning using Programming Tags section
	July 7, 2011	Updated Disable Volume Adjust Button procedure
G	September 14, 2011	Added Imaging Assembly (K150) information

Issue	Date	Remarks
H	November 2013	<p>Moved the Checkpoint installation procedures to Appendix D</p> <p>Revised the Checkpoint installation procedures and added washer installation</p> <p>Updated the programming sequences and changed format from artworks to tables</p> <p>Revised the Sensormatic Deactivation Setup (replaced the special function tags with the new programming sequences)</p> <p>Removed the following from Appendix: Obtaining Information Products, Technical Support, and User Feedback</p>
I	March 2014	Added 7878–4001 Scanner
J	December 2014	Added 7878–5001 Scanner/Scale
K	June 2015	Updated installation procedures for 2357 and 7837 hand-held scanners
L	August 2015	Updated the Decreasing Load Test values
M	October 2017	<p>Updates the Checkstand Cutout specifications for 7878-4xxx/5xxx</p> <p>Added procedures for setting the type of weight to use</p> <p>Added the FLS Scale Audit Counter to the Scale Calibration chapter</p> <p>Updated procedures for enabling and disabling the Pharmacode Check Digit Transmission</p>
N	November 2019	<p>Added cutout recommendations for a checkstand with an item feed belt next to the NCR 7879 (for units with side rails)</p> <p>Updated the Scale Calibration and Scale Accuracy Verification topics</p>


Chapter 1: **Product Information**

The NCR RealScan™ 78 Bi-Optic Scanner/Scale (7878) is a state-of-the-art bi-optic scanner/scale. Its primary use is in high-performance checkout areas of food distribution and general merchandise sales. The 7878 can read barcodes on all six sides of the product as it passes through the scan zone. This and other features reduce the amount of operator training and increase operator efficiency.


The 7878 is compatible with the interface protocol and checkstand cutout size of previous RealScan 70 (Class 7870), RealScan 75 (Class 7875), and RealScan 76 (Class 7876) scanners. This makes it easier to replace older units with the latest scanner technology.

Available Models


The NCR 7878 is available in several RoHS-compliant models.

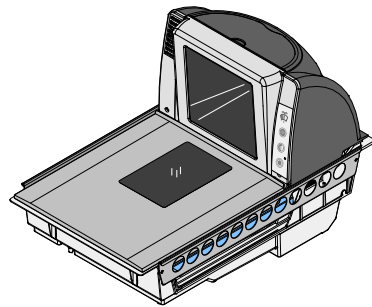

7878 - 1000/1001/1002

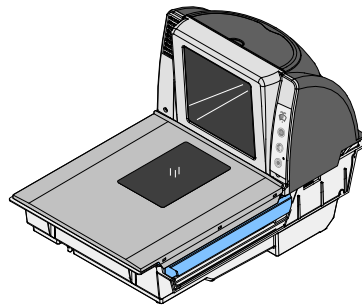

7878 - 2000/2001/2002

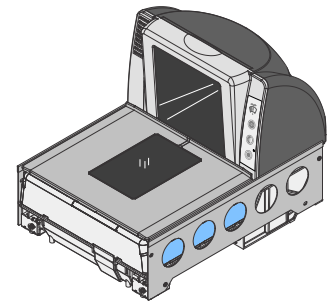

7878 - 4001/5001

Note: Side rails are an optional feature for the 7878-2xxx and 7878-4001/5001 models.

27873

The following table identifies the major models along with a brief description of each.

Model	Description
7878-1000	RealScan 78 Bi-Optic Scanner
7878-1001	RealScan 78 Bi-Optic Scanner – Release 2
7878-1002	RealScan 78 Bi-Optic Scanner – Release 2, Legacy Firmware
7878-2000	RealScan 78 Bi-Optic Scanner/Scale
7878-2001	RealScan 78 Bi-Optic Scanner/Scale – Release 2
7878-2002	RealScan 78 Bi-Optic Scanner/Scale – Release 2, Legacy Firmware
7878-4001	RealScan 78 16" Bi-Optic Scanner
7878-5001	RealScan 78 16" Bi-Optic Scanner/Scale – NCR Scale

Features and Options

The 7878 is rich in features and options which puts it in a class by itself. This section identifies the many features and options that are available.


Bi-Optic Scanning

The 7878 combines scan patterns from both horizontal and vertical planes. The combination of two scan patterns projecting from different directions permit products to be brought into the scan zone with very little orientation of the barcode. Beginner and veteran checkers learn to use the 7878 very quickly. With minimal training, users attain new levels of efficiency and productivity as they become familiar with the bi-optic scan zone.

The 7878 vertical scan window is mounted to a tower that rises above the checkstand surface. The upper console is designed to withstand constant impact from items being scanned. The horizontal scan window is flush-mounted to a stainless steel top plate, permitting users to slide a product across the top plate without lifting the product. Furthermore, loosely wrapped products cannot snag on the top plate.


Because of its expanded scan zone, the 7878 is very easy to use. It can read labels on all six sides of the product as they pass through the scan zone. Products can be read from right to left or from left to right.

The following is the scan pattern produced on both the vertical and horizontal scan windows.

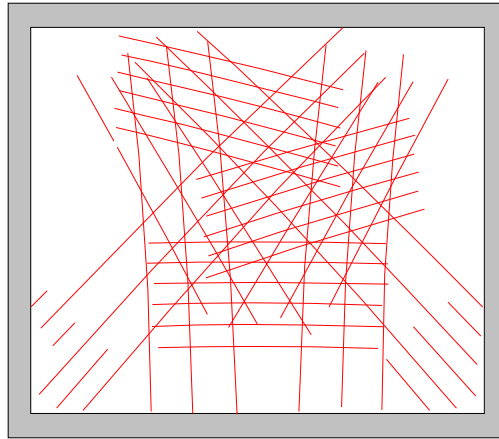

Vertical Scan Window

42 Scan Lines

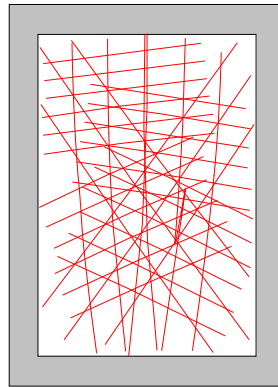

Horizontal Scan Window

36 Scan Lines

24062

Communications Protocol

The 7878 communicates with the host terminal through:


- RS-232
- USB
- IBM 46xx
- Dual-cable RS-232

Autodiscrimination

The 7878 can decode a variety of barcodes. The ability to discriminate among the different barcode types is a standard feature of the 7878. The following lists the different barcode types.

- UPC-A and UPC-E
- UPC-A and UPC-E with two-digit Add-on Symbols
- UPC-A and UPC-E with five-digit Add-on Symbols
- GS1-128 Coupon Extended Code
- Code 128 Markdown Code
- EAN-8 and EAN-13
- EAN-13 with two-digit Add-on Symbols
- EAN-13 with five-digit Add-on Symbols
- GS1 DataBar, formerly Reduced Space Symbology (RSS)
 - GS1 DataBar-14
 - GS1 DataBar-14 Stacked Omni-directional
 - GS1 DataBar Expanded
 - GS1 DataBar Expanded Stacked
- Interleaved 2 of 5
- Code 39
- Code 39 Full ASCII
- Code 128 (including GS1-128)
- Multi-Stage Dual for Japan
- Codabar
- Pharmacode
- ISBN

Remote Compact Display

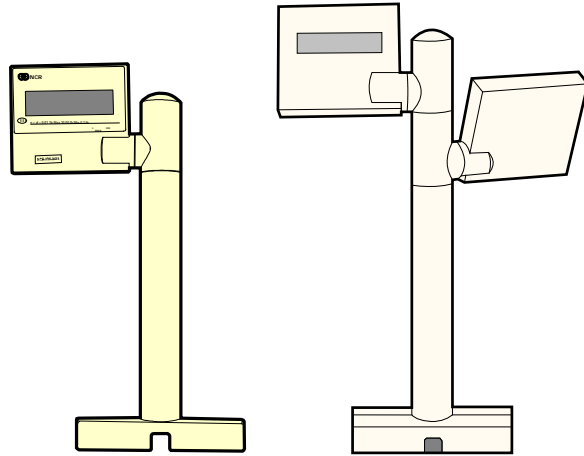

16217

The 7878 Scanner/Scale units are available with no weight display or with a remote post mounted display. When no display is used, scale information is sent to the host terminal and displayed on the terminal's customer display. However, this is not available for all host terminals, and in some countries Weight and Measures authorities do not permit this configuration.

Note: It is acceptable to use the host terminal display if the host terminal is approved to perform the live/gross scale weight. Also, most countries require that both the operator and the consumer must be able to observe the scale live/gross weight display and the sale weight platform during a weighing operation.

When a display is needed, use the RealScan 25 Remote Compact Display. It is available with one or two display modules.

Auxiliary RS232 Ports

The 7878 includes the Auxiliary RS232 Ports feature. The purpose of this feature is to permit other peripheral devices to connect to the host terminal through the 7878. This eliminates the need of the host terminal having additional RS232 ports.

A typical use of this feature is to connect a hand-held scanner for items too large to place on the checkstand. It also provides a connection for some security tag deactivation systems.

The two Auxiliary RS232 ports are both located at the back of the unit. Port 1 (located on the left side when facing the rear of the unit) is the most convenient port for connecting a hand-held scanner.

Each peripheral device using a peripheral port requires special programming.

USB Peripheral Ports and Main (POS) USB Communication Port

The 7878 includes USB Peripheral ports and a Main (POS) USB Communication Port. These ports are included to permit easy connections for peripherals and to improve the plug-and-play capabilities by permitting the devices to be hot-swappable (connecting or disconnecting devices without restarting the unit).

The USB Peripheral ports are located on the left-most side on the rear of the unit. The purpose of the USB Peripheral ports is to permit other peripheral devices with USB interfaces to connect to the host terminal through the 7878.

The Main (POS) USB Communication Port is used to connect to the host terminal.

Firmware Flashing

The 7878 includes Firmware Flashing. This permits upgrades to the firmware without replacing the actual firmware chip. You can download firmware from the NCR website (http://www5.ncr.com/support/support_drivers_patches.asp).

The software comes in two forms. The first one is free, while the other (NCR RealScan Scanner Tool Suite) provide various Enterprise functions and is sold separately.

Operator Interface

There is very little interface required between the operator and the 7878. Messages are sent from the 7878 to the operator through status indicators, audio tones, and voice messages.

Voice Messages


If the 7878 has voice enabled, certain mode changes and error conditions are alerted by synthesized voice messages. These messages give either the changed mode or the error message with the suggested corrective action. Voice is enabled and disabled in the Miscellaneous Parameter program.

The scanner/scale provides audible voice messages during the following events.

- When the scanner/scale goes online or offline
- When checking the communications protocol (Diagnostic Mode)
- When testing item tags using PACESETTER III (Diagnostic Mode)
- When certain error conditions occur
- When there is interference with the scale
- When scanning any programming tag in the Programming Mode

Window Maintenance Indicator

The 7878 has a Clean Window Indicator located on the Operator Display Panel. An icon of a wiper in wiping motion identifies the Window Maintenance Indicator.

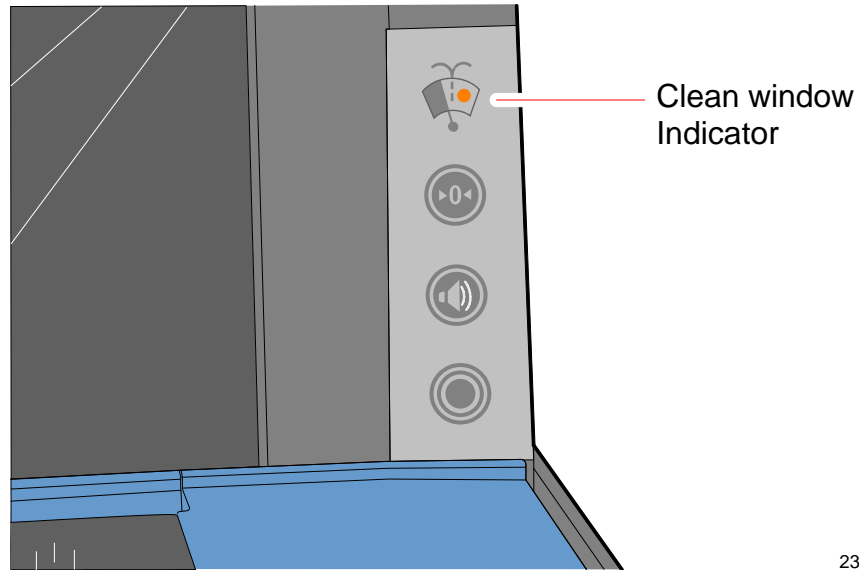


23761

When the orange light is on, this indicates that the Scan Window is dirty and needs cleaning for optimum scanner performance. It is also occasionally necessary to clean the window located under the Top Plate to remove loose debris or dust.

Scale Zero Button

The 7878 has a Scale Zero button located on the Operator Display Panel. An icon of a zero (0) in between right and left arrows identifies the Scale Zero button.

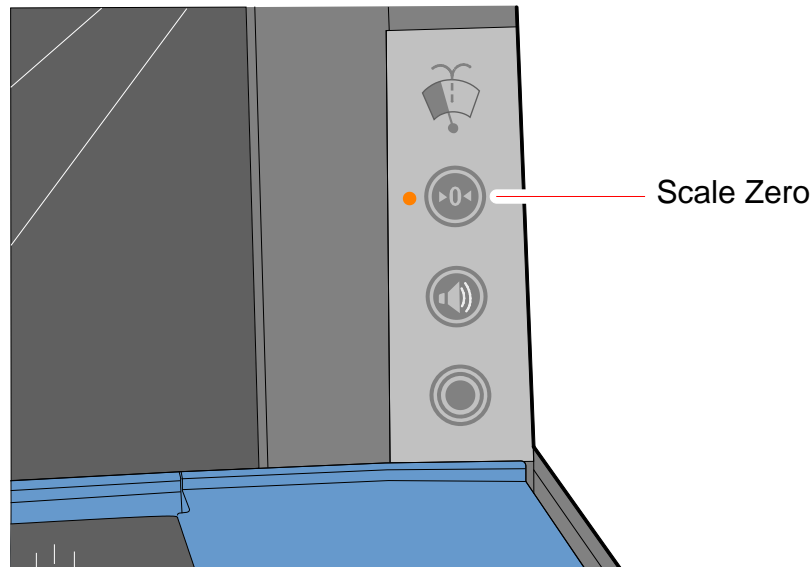


23760

The Scale Zero button resets the scale to zero within legal limits according to local Weights and Measures regulations.

Volume Adjust Button

The 7878 has a Volume Adjust button located on the Operator Display Panel. An icon of a speaker emitting sound waves identifies the Volume Adjust button.

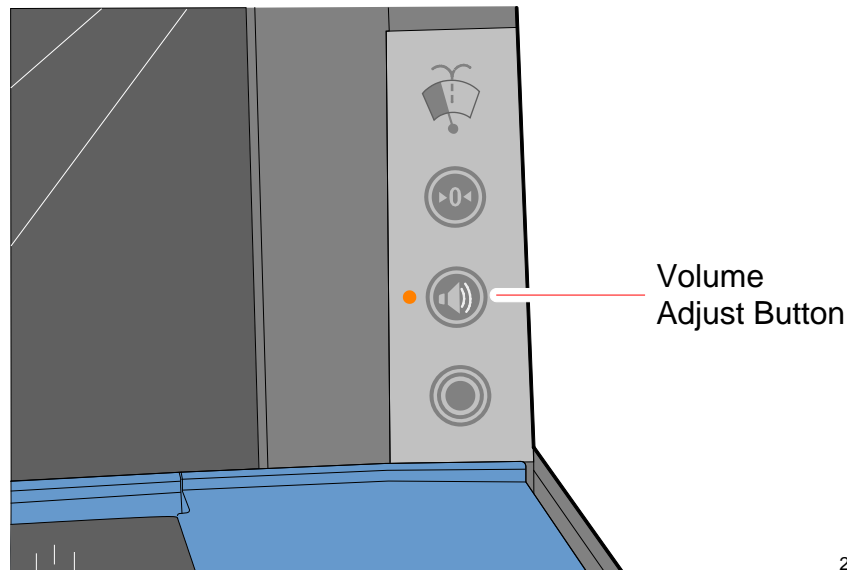


23759

The Volume Adjust button is used for two operations.

- Controlling the speaker volume. Volume is controlled by pressing and then releasing the button. Speaker sounds for each press/release of the button.
- Controlling the speaker frequency. Frequency is controlled by continuous pressing of the button. Speaker sounds and cycles through all different frequencies when button is pressed continuously.

These settings are lost on a power cycle but can be saved permanently if set up through a programming sequence or if the Reset barcode is immediately scanned after setting the desired volume with the button. Other options to configure the volume and frequency are available with programming sequences, as well. Refer to Worksheet 11 in the “Programming Worksheets” section in Chapter 5 for more information.

Manual Deactivation Button

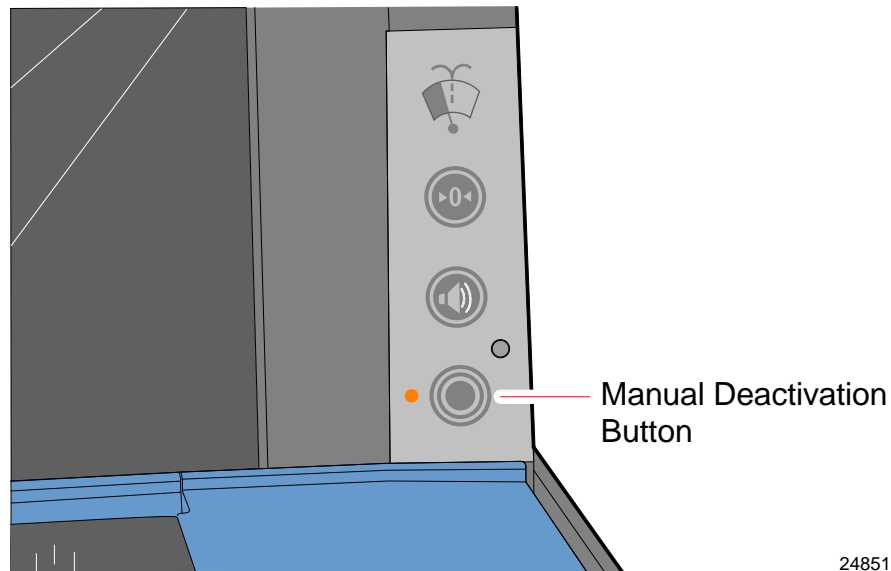


24851

The Manual Deactivation Button permits the user to disable scanning and enable the Sensormatic deactivator for three seconds with each touch of the button on the scanner display panel. It also turns off the scanner laser to prevent reading the item bar code a second time.

There is an LED indicator beside the Manual Deactivation Button used to indicate the EAS system status. When the system is connected and operating properly, the LED will be on solid. If the system is connected but not communicating the LED will be flashing. The LED is off when the EAS feature is disabled.

Motion Detector

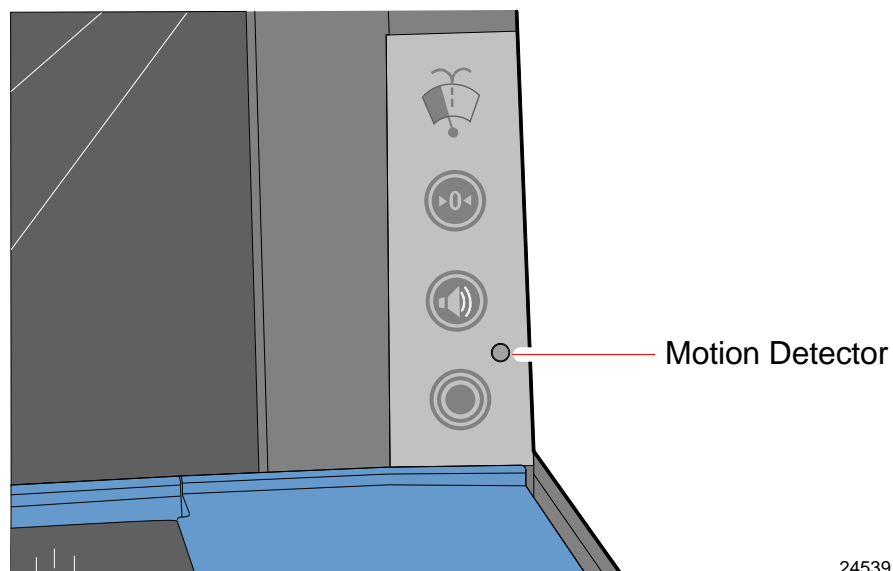

24539

The Motion Detector is located at the lower portion of the Operator Display Panel. The laser diodes and spinner motors turn off after an extended period of time of an operator activity. This prolongs the life of the 7878. The default non-active time is fifteen (15) minutes, but can be increased by programming. An item passing in front of the Motion Detector causes the 7878 to turn on. This movement is the normal item scanning movement.

Power Supply



23756

The Power Supply provides the required DC voltage of the NCR 7878. The Power Cord plugs into an electrical outlet and connects to the Power Supply. A low voltage Power Cable connects the Power Supply to the 7878. Several Power Cords are available depending on the country installation. The Power Supply input can be 90 Vac to 264 Vac at a frequency of 47 Hz to 63 Hz.

In addition, some host terminal interface types can power the 7878 without the use of this power supply. Please contact your NCR sales representative for details.

PACESETTER

NCR has continually improved its PACESETTER technology used on NCR scanner products. Starting out as PACESETTER, it progressed to PACESETTER *Plus*, and then to PACESETTER III. Vendors and printers regularly supply products with overprinted, underprinted, or truncated barcodes to the market. Some labels have missing margins. Others may be printed around the corner of packages or on media that wrinkles when picked up. PACESETTER addresses the problems caused by these unreadable labels. PACESETTER III is standard on all 7878 products.

PACESETTER *Plus*

PACESETTER *Plus* determines what is wrong with a barcode label, fixes the data, and then transfers the information to the host terminal. It provides information on possible barcode printer problems but is not a barcode specification conformity verifier.

The three models of PACESETTER Plus operation are summarized in the following paragraphs.

Mode 1–Inquiry

PACESETTER *Plus* can be used as a management tool by store personnel and chain management to monitor and report the status of label readability. Tally counters are kept for the following.

- Good reads
- No read due to lack of full label (missing bars or folded label)
- Good reads with overprinted bars
- Good reads with underprinted bars
- Missing margins
- Missing print lines

In Mode 1, the tally count displays on the RealScan 25 Remote Compact Display. The percentage of each error type to the good reads tally also displays. All tally counts can be reset to zero.

Mode 2–Demonstration Mode

In Mode 2, the scanner is offline and the scale is disabled. Each subsequent scan of a barcode causes the scanner to indicate the status of label readability. The scanner recognizes missing bars in labels, highly overprinted or underprinted labels, missing margins, or a “no read” condition.

Note: In Mode 2 the Window Maintenance Indicator light is ON.

Mode 3–Operations

Mode 3 is the normal operating mode. The scanner can be programmed to add PACESETTER III information to the decoded UPC/EAN data. This information describes the label readability. However, the host terminal software must be capable of receiving the extra data. The host terminal software should enable this at a regular interval (for example, Cashier Sign On) and check for the presence of the data if enabled.

PACESETTER III

It detects, corrects, and reports label errors discovered in UPC Number System Two and Number System Four and EAN–13 Number System Two. These label types are printed in the store and account for a significant number of unreadable labels due to failures of the in–store printing mechanism.

Parameter Programming

The NCR 7878 may need to be configured to meet specific installation needs. The 7878 uses special programming tags to modify the various programming parameters (refer to Chapter 5). This programming data may be scanned with special tags, sent from a PC with the free tools or remotely through the host terminal using the NCR RealScan Scanner Tool Suite (sold separately).

NCR does not control or specify the NCR scanner configuration required to support specific Host Terminal Software unless you are using NCR Host Terminal Software. You should consult with your Host Terminal Software vendor or reseller to determine the correct configuration for your NCR scanner.

Scan Doctor Diagnostics

Scan Doctor is the state-of-the-art diagnostic software included in every 7878. It continually monitors the unit to identify components that are not functioning correctly. It also provides inquiry capability for the host terminal to access specific diagnostic data. Scan Doctor diagnoses the 7878 each time power is applied and continually during operation. When a problem is found, it notifies the operator through patterns of color LEDs on the Light Bar (above the Vertical Window), an error code on the remote display (if attached), and voice messages. It lists the most probable causes first.

Many Scan Doctor statuses are available from the scanner using NCR RealScan Scanner Tool Suite sold separately.

Refer to the *7878 Diagnostics and Troubleshooting* section on chapter 5 for information.

Power-on Wellness Check

When power is applied to the 7878, Scan Doctor checks many of the scanner and scale components:

- RAM
- ROM
- EEPROM
- Spinner Motors
- Interface Board
- Laser Diodes
- ASICs
- Scale Hardware.

If Scan Doctor finds a problem hinders operation of the 7878, it disables the unit; otherwise the problem is identified and operation continues.

Ongoing Wellness Check

Scan Doctor runs all the time the moment 7878 is turned on. It constantly monitors RAM, the Spinner Motors, the Laser Diodes, and Scale Hardware.

Service Diagnostics

Scan Doctor includes service diagnostics for the trained service technician. These go beyond the wellness checks and are accessed through the use of special programming tags. Refer to Appendix B for more information on the Scanner Service Diagnostics Tests.

Soft Power Down/Power Up

The 7878 senses periods of scanner inactivity. The scanner's soft power down feature extends the life of the 7878 by disabling major portions of the unit, including the laser diodes, spinner motor, and associated electronics. The length of the inactive period prior to the soft power down is user-selected and programmed remotely or through tags.

Scanner power up occurs when the 7878 motion detector detects movement. This detector is located on the operator display panel, to the right of the vertical scan window. The 7878 can also be powered up when the checker signs on the host terminal. This capability assumes appropriate host terminal software.

The 7878 can also be powered up/down by the host terminal software when cashier signs in/out when using RS-232 communications.

Chapter 2: Site Preparation

Customer Responsibilities

The NCR customer is responsible in preparing the site for installation of the NCR 7878. Information is provided to help with this task.

The customer must do or provide the following.

- When required by NCR, provide the NCR Customer Services Representative with appropriate drawings that indicate the following.
 - Location of equipment
 - Site wiring (power and signal, paths, and lengths)
 - Location of other equipment capable of generating large amounts of electrical noise, electromagnetic interference, heat, and so forth
- Provide floor coverings and environmental systems that prevent static electricity build-up and discharge.
- Provide and install necessary power distribution boxes, conduits, grounds, lightning arrestors, and associated hardware.
- Ensure clear space and environmental requirements of the unit are met.
- Make all building alterations necessary to meet wiring and other site requirements.
- Ensure all applicable codes, regulations, and laws (including, but not limited to, electrical, building, safety, and health) are met.
- Provide and install all communication cables, wall jacks, special connectors, and associated hardware.
- Provide and install auxiliary power or other equipment as required.

Preparing the Site

This document contains information necessary for the preparation of a site conforming to NCR specifications. It is important that the site complies with the requirements specified in this document because, once the equipment has been installed, deficiencies in the site or the problems caused by these deficiencies are much more difficult to detect or correct. Further, failure to comply with these requirements or to take proper steps to protect equipment against risks identified in this document may cause serious damage to the equipment and to the customer's business.

In addition to the need to comply with the requirements specified, electrical wiring and mechanical systems must also comply with all relevant codes, laws, and regulations. It is important that a customer or a customer agent who is very familiar with the special requirements of electronic equipment prepare the site. The responsibility of ensuring that the site is prepared in compliance with this document remains with the customer.

For information and guidance purposes only, a list of Customer Responsibilities is provided, in general terms, of those matters for which the customer is responsible. This list is not intended to be comprehensive, and in no way modifies, alters, or limits the responsibility of the customer for all aspects of adequate site preparation.

No comment, suggestion, or advice offered or not offered about preparation of the site nor any inspection of the site whether before or after preparation is to be taken as approval of the location of the site and equipment or of its preparation, and NCR is not liable in respect of any comment, suggestion, or advice given by its staff or in respect of any failure to give advice.

Finally, only the customer can know the full extent of damage that may be caused to his business by reason of failure of the equipment that is to be installed. For this reason, it is the customer's responsibility to ascertain the extent of any such possible damage to his existing or planned business, and to effect full insurance in respect of it.

Weight

The weight of the 7878 depends on the model. The following are the installed weights of basic models.


Note: Weight of the power supply and power cord are not included.

	Model	Kilograms	Pounds
7878-1000	RealScan 78 Bi-Optic Scanner	8.01	17.65
7878-1001	RealScan 78 Bi-Optic Scanner – Release 2	6.96	15.34
7878-1002	RealScan 78 Bi-Optic Scanner – Release 2, Legacy Firmware	6.96	15.34
7878-2000	RealScan 78 Bi-Optic Scanner/Scale	8.77	19.33
7878-2001	RealScan 78 Bi-Optic Scanner/Scale – Release 2	7.72	17.02
7878-2002	RealScan 78 Bi-Optic Scanner/Scale – Release 2, Legacy Firmware	7.72	17.02
7878-4001	RealScan 78 16" Bi-Optic Scanner	5.99	13.20
7878-5001	RealScan 78 16" Bi-Optic Scanner/Scale – NCR Scale	6.74	14.86

Scanner Dimensions

The dimensions of the 7878 depend on the model.

7878-1xxx/2xxx


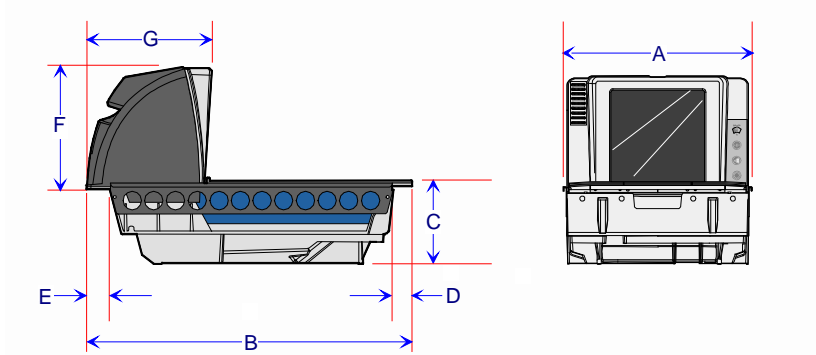


33071

Base unit measurements							
	A	B	C	D	E	F	G
	Width	Length	Depth	Front Flange	Back Flange	Tower Height	Tower Depth
	(in)	(in)	(in)	(in)	(in)	(in)	(in)
Without siderail	11.5	20.0	5.0	1.4	1.4	6.8	7.6
With siderail	12.0	20.0	5.0	1.4	1.4	6.8	7.6

	Width	Length	Depth	Front Flange	Back Flange	Tower Height	Tower Depth
	(mm)	(mm)	(mm)	(mm)	(mm)	(mm)	(mm)
Without siderail	292.1	508.0	127.0	35.1	35.1	172.7	193.0
With siderail	304.8	508.0	127.0	35.1	35.1	172.7	193.0

7878-4xxx/5xxx

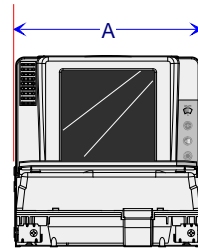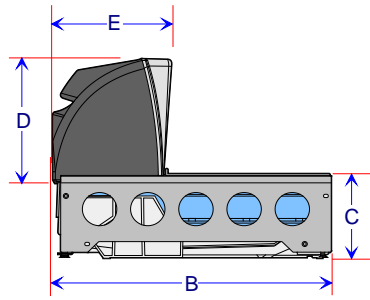

33072

Base unit measurements

	A	B	C	D	E
	Width	Length	Depth	Tower Height	Tower Depth
	(in)	(in)	(in)	(in)	(in)
Without siderail	11.5	16.0	5.0	6.8	7.6
With siderail	11.7	16.0	5.0	6.8	7.6
	Width	Length	Depth	Tower Height	Tower Depth
	(mm)	(mm)	(mm)	(mm)	(mm)
Without siderail	292.1	405.9	127.0	172.7	193.0
With siderail	296.9	405.9	127.0	172.7	193.0


Checkstand Cutout

When cutting the checkstand hole, be careful to maintain the specified dimensions, especially if the 7878 contains a scale. For proper scale operation, maintain a clearance between the leading and trailing edges of the top plate and the checkstand.

When installing an NCR 7878 in a checkstand with an item feed belt next to the NCR 7878, NCR recommends placing an adjustable plate between the leading edge of the NCR 7878 and the checkstand belt.

Note: Always treat the scanner's profile under the checkstand as a rectangular prism (a flat-sided box) when measuring the checkstand for a fit. Do not take advantage of voids or angles in the design of the scanner base as NCR reserved the right to change the profile without notice as long as the changes does not impact overall outside dimensions.

7878-1xxx/2xxx

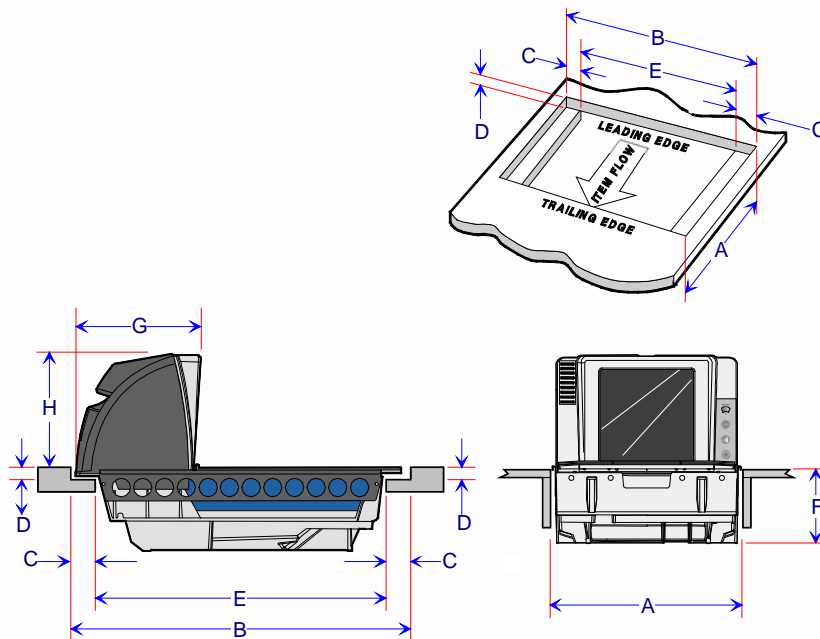


27789

Model	A	B	C	D	E	F	G	H
7878-1xxx Scanner	294.6 mm	510.5 mm	37.6 mm	9.9 mm	440.4 mm	123.9 mm	195.6 mm	175.3 mm
	11.6 in	20.1 in	1.5 in	0.4 in	17.3 in	4.9 in	7.7 in	6.9 in
7878-2xxx Scanner/Scale	307.3 mm	510.5 mm	37.6 mm	9.9 mm	440.4 mm	123.9 mm	195.6 mm	175.3 mm
	12.1 in	20.1 in	1.5 in	0.4 in	17.3 in	4.9 in	7.7 in	6.9 in

Note: Dimension **A** for a RealScan 7878-2xxx includes a spacer along each side of the unit so that it fits an existing RealScan 7870-2xxx or RealScan 7875-2xxx cutout.

7878-4xxx/5xxx

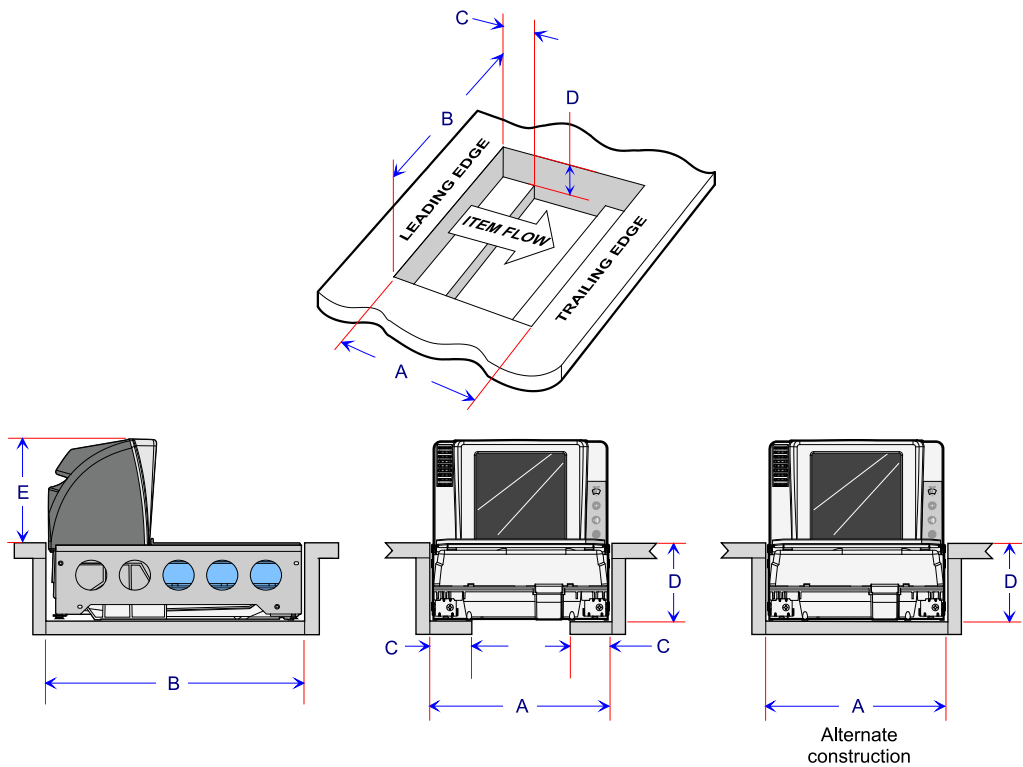

33073

A	B	C	D	E
		minimum	minimum	maximum
294.6 mm	408.9 mm	33.0 mm	127.0 mm	172.2 mm
11.6 in	16.1 in	1.3 in	5.0 in	6.8 in


Note: For the dimension **D**, the ideal depth is 127.0 mm. Any deeper than this requires the use of leveling feet.

Note: The dimension **C** is the minimum required to guarantee interface with the leveling feet. These surfaces must be structurally sound, especially for a scale installation. It is acceptable to support the scanner on a single continuous surface as shown in the alternate construction. In this case, it is required that ample space for cable egress be provided.

7878 With Side Rails, Adjustable Cutout

When installing an NCR 7878 in a checkstand with an item feed belt next to the NCR 7878, NCR recommends placing an adjustable plate between the leading edge of the NCR 7878 and the checkstand belt.

Note: Ensure that the scanner is centered in the checkstand cutout.

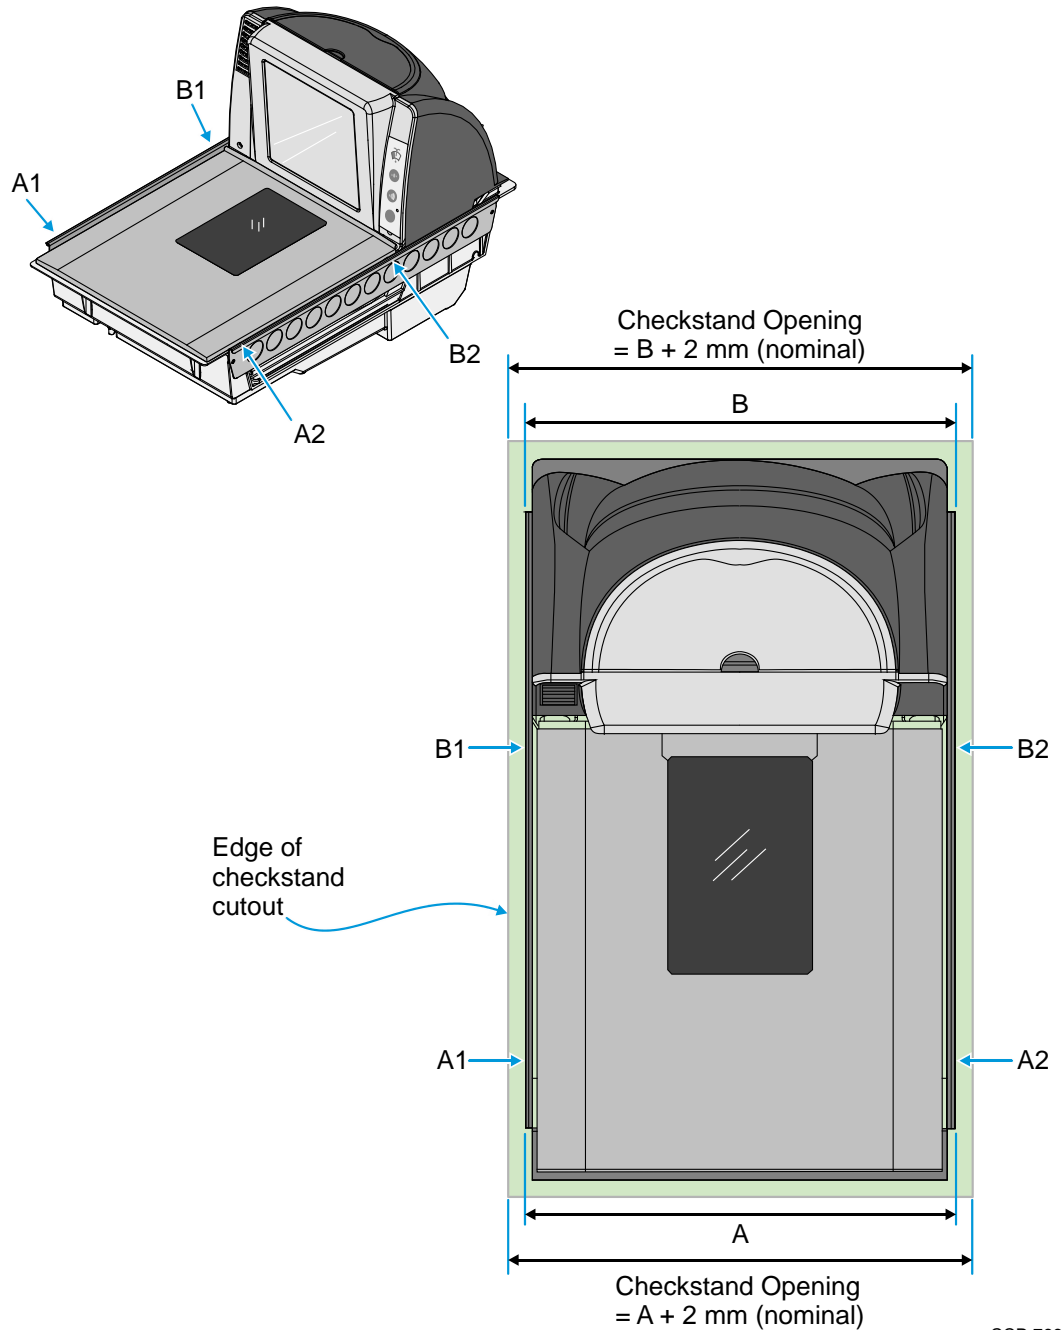

Test for Adequate ESD Ground


Note: Provide floor covering, environmental systems, and electrical grounding to prevent static electricity build-up and discharge.

Note: In an effort to eliminate a possible safety hazard and the generation of static electricity all metal parts of a metal checkstand must be electrically connected to earth ground.

Perform the following steps to test if there is adequate ESD ground for the scanner installation:

1. Remove the scanner from the checkstand.
2. Disconnect all of the communication and EAS cables from the scanner.
3. Plug the DC power cord into the scanner and the AC cord into the AC outlet.
4. Insulate the scanner from the checkstand (for example, place it on a rubber belt or similar material).
5. Measure the resistance from the scanner bucket to checkstand where the scanner was mounted.
6. If the resistance is greater than 100 Ohms, alert an electrician.

Checkstand Wiring

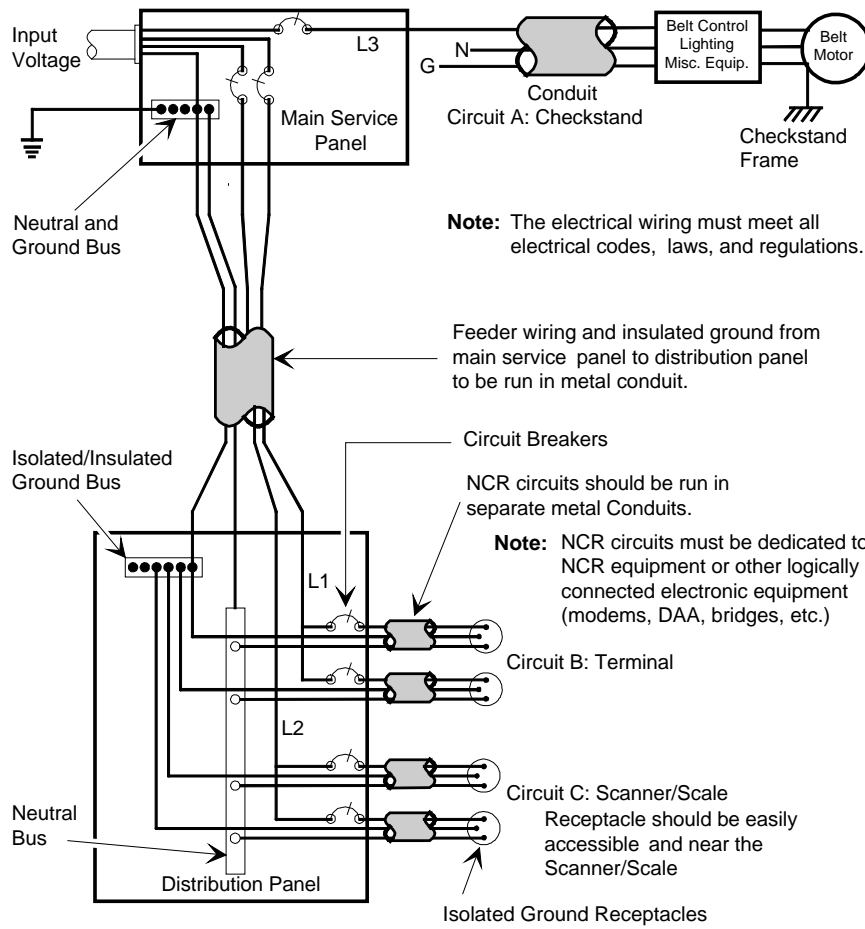

Installation Type	Input Voltage	L1, L2	Circuit Breakers
U.S., Canada, & Japan	100Vac to 120Vac	100Vac to 120Vac	Standard single-pole; value determined by type of device branch and by electrical code.
International	220Vac to 240Vac	220Vac to 240Vac	
European	220Vac	220Vac	European double-pole.

Power Considerations

The 7878 receives power from an external power supply. The power supply mounts in a remote location close to the 7878. The power supply is a 40-watt switching power supply with the following inputs.

- Voltage: 90 to 264 Vac
- Frequency: 47 to 63 Hz
- Current: 0.9 A

The 7878 has no power switch in the unit. Therefore, the checkstand must be wired to include a recessed 15A circuit breaker accessible to the operator. This circuit breaker serves as the power switch. It is also needed to reset the unit during programming and to remove power from the unit during servicing.


The power supply has a green LED which is lit when there is an AC voltage present and the power supply is functioning correctly.

Power Transient Protection

Voltage transients, surges, sags, impulses, and spikes may be experienced routinely or sporadically. When such phenomena occur, the equipment requires the use of protective devices to ensure proper operation.


Cable Connections

The following diagram shows the wiring connections located at the rear of the 7878.

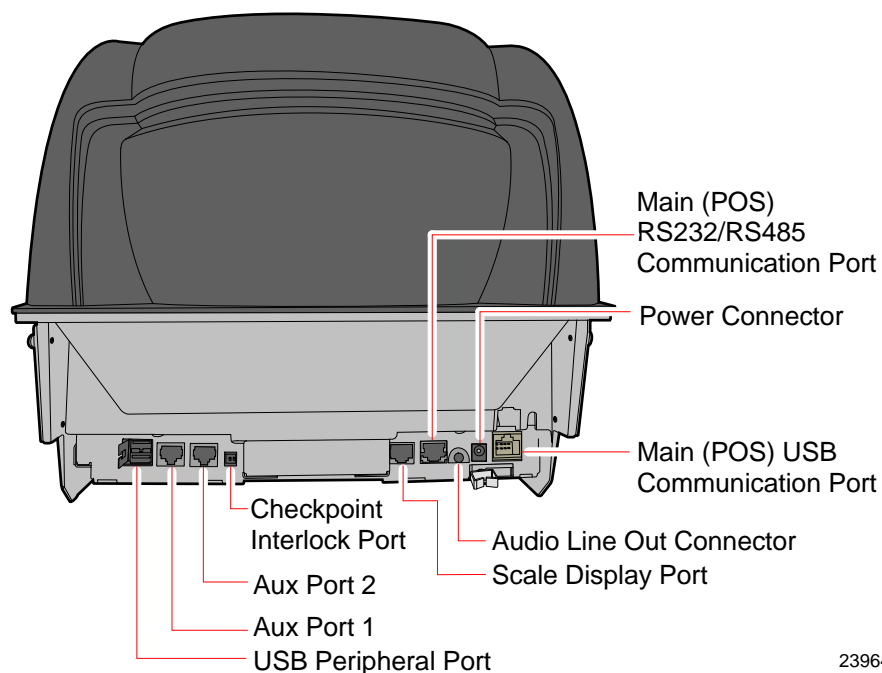

Service Clearance

Although many of the 7878 components are accessed without removing the unit from the checkstand, service clearance must be provided. Clearance is also required for cleaning the unit. Refer to the following illustration for the required clearances.

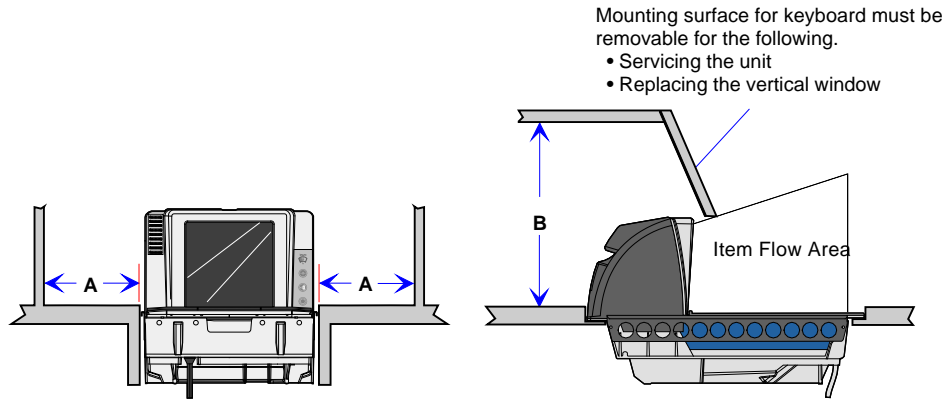

A = 203.00 mm (8.00 in) minimum if checkstand structure is not removable for servicing.
 25.00 mm (1.00 in) minimum if checkstand structure is removable for servicing.

B = 356.00 mm (14.00 in) minimum if checkstand structure is not removable for servicing.
 178.00 mm (7.00 in) minimum if checkstand structure is removable for servicing.

The 7878-1xxx/2xxx must not be supported by a bottom panel.

Environmental Considerations

The 7878 operates in most standard working environments. Temperature ranges permitted are greater when the 7878 is in storage or transit. The 7878 can operate up to one hour at extreme temperatures without suffering damage. The following table gives the various environmental requirements:

Physical Variable	Normal Operating	Extreme Operating (One Hour Maximum)	Storage	Transit
Temperature	5°C-40°C 41°F-104°F	-0°C-45°C 32°F-113°F	-10°C-55°C 14°F-131°F	-40°C-60°C -40°F-140°F
Temperature Change	10°C/hour 18°F/hour	20°C/hour 36°F/hour	20°C/hour 36°F/hour	20°C/hour 36°F/hour
Relative Humidity	5% to 95% No condensation	5% to 95% No condensation	5% to 95% No condensation	5% to 95% No condensation
Barometric Pressure	105 x 10 ³ Pa to 79.5 x 10 ³ Pa			105 x 10 ³ Pa to 74 x 10 ³ Pa
Ambient Light	200 Foot-Candles max (2152 Lux) on both scanner windows	200 Foot-Candles max (2152 Lux) on both scanner windows		
Acoustical Noise	65 dBa or less	65 dBa or less		
Vibration	3-150-3 Hz 2.5 g input Base Position	3-150-3 Hz 2.5 g input Base Position		
Shock	$\Delta V = 0.5$ m / sec (20 in / sec) 25g @ 3.75 ms Triangular Pulse	$\Delta V = 0.5$ m / sec (20 in / sec) 25g @ 3.75 ms Triangular Pulse 1 Shockbase Position		


27806

Ventilation Requirements

If the checkstand contains other heat-producing equipment, forced air may be needed to keep the temperature within the specified range. However, air coming into or leaving the checkstand **MUST NOT** enter or exit past the 7878.

RealScan 25 Compact Display Dimensions

The following are dimensions of the RealScan 25 Compact Display. The holes are spaced to align with those of the older RealScan 25 Remote Post Display and with some competitor models.

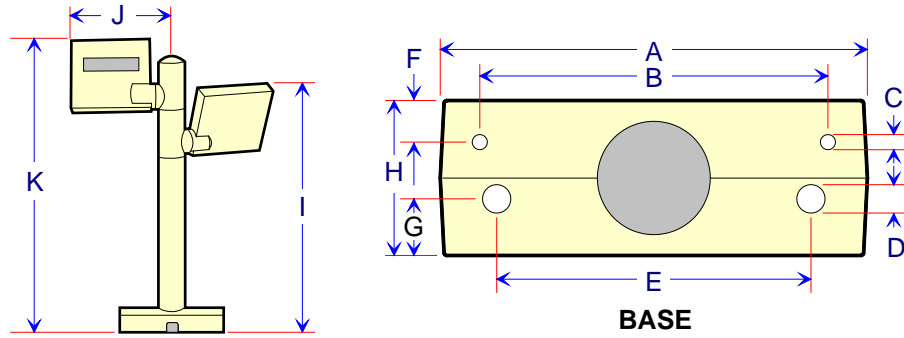

A	B	C	D	E	
115.31 mm	93.98 mm	3.96 mm	7.62 mm	84.83 mm	
4.54 in	3.70 in	0.156 in	0.30 in	3.34 in	
F	G	H	I	J	K
11.17 mm	16.25 mm	41.65 mm	266.19 mm	104.39 mm	314.96 mm
0.44 in	0.64 in	1.64 in	10.48 in	4.11 in	12.4 in

Note: Dimension I is also the height of a single-display unit.

Chapter 3: Installation

Installing the 7878 consists of nine main steps. Sometimes additional information is required depending on the installation. Information about enabling special functions is provided in *Programming* chapter.

Installation Steps

The following are the nine installation steps for installing 7878.

1. Verify installation preparation (scanner and checkstand)
2. Cable installation preparation
3. Install Sensormatic® antenna (optional)
4. Connect Cables
5. Put 7878 in checkstand cutout
6. Verify Top Plate alignment
7. Calibrate the scale
8. Setup Sensormatic® deactivation (applicable only if Sensormatic® antenna is installed)
9. Verify unit is operational

Step 1: Verify Installation Preparation (Scanner and Checkstand)

Reporting a Damaged Unit

After receiving the NCR 7878, inspect the shipping carton for damage. If the 7878 is damaged due to shipping, notify the carrier, the NCR representative, or the supplier if the unit is not purchased directly from NCR.

Package Contents

After unpacking the 7878, take inventory to ensure that all components are received.

The following list identifies the package contents.

- NCR 7878
- Power Supply (if ordered)
- Power Cord (if ordered)
- Top Plate
- Interface Cable (if ordered)
- Power Cord Documents (International Units)
- Aluminum Foil Stamping Plates (2xxx Model International Units used by local scale inspectors)
- The label identifies the model number (for example, 7878-2xxx)
- Select the correct label and place it on the outside of the unit according to the specifications
- Scale Calibration Procedure
- Customer Satisfaction Hotline Details and Scale Calibration Process
- Regulatory Information

Step 2: Cable Installation Preparation

Note: Before attempting to install the 7878, the site must be prepared in accordance with the requirements described in *Site Preparation* chapter.

Note: The 7878 is fully assembled at the factory and requires no operator assembly. The laser module is an integral part of the factory assembled device and does not have any controls that can increase the level of laser light or collateral radiation from the 7878.

Follow these steps to install the NCR 7878 in the checkstand (after installing all the cables).

1. Verify that the 7878 power receptacle switch is off. Plug the power cord into the 7878 power supply unit. Pass the power cable from the power supply through the checkstand opening.
2. Connect the communications interface cable to the host terminal. Refer to the host terminal documentation for instructions on how to connect the interface cables.

Note: Some host terminals may require a trained service technician to open the host terminal and connect the interface cables.


3. Pass the interface cables through the checkstand opening.
4. If connecting a remote display, pass the remote display cable through the checkstand opening.
5. If connecting an RS-232 peripheral device below the checkstand, pass its interface cable through the checkstand opening.
6. Place the unit so that a portion of the tower end is directly over the hole in the checkstand.

Note: Skip to step 4 when not installing a 7878 with a Sensormatic® deactivation system.

Step 3: Sensormatic® Coil Installation


To install the Sensormatic® Coil, perform the following procedure.

1. Position the 7878 facing the operator.
2. Remove the Top Plate.
 - a) Hold the front edge of the Top Plate until your fingers are underneath it.
 - b) Lift the Top Plate to remove it from the 7878.

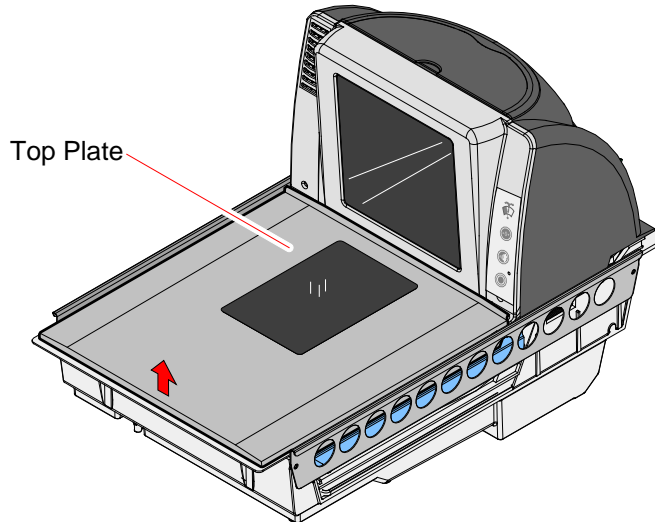


23794

3. Remove the Front Bezel.
 - a) Place one hand and slightly apply pressure on the top corner of the Bezel and use the other hand to pull the snap features at the bottom.

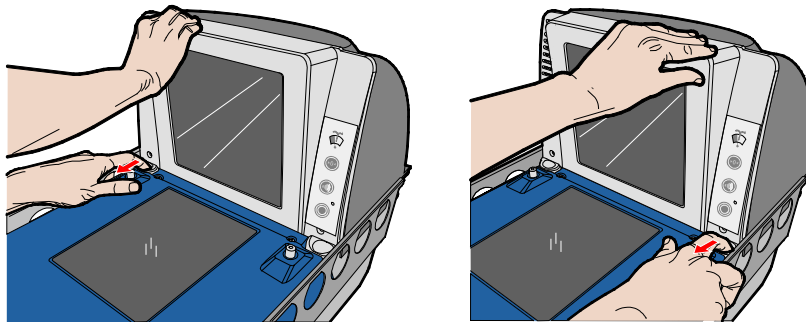

24976


b) Lift the Bezel up and set aside.

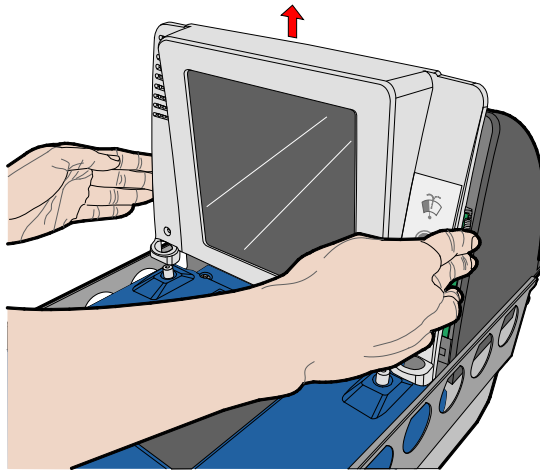

24055


4. Remove the Debris Guard.

a) Remove the four guard screws securing the Debris Guard.

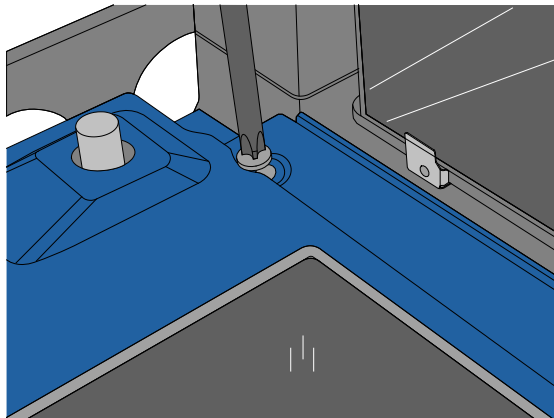

24072


b) Lift off the Debris Guard.

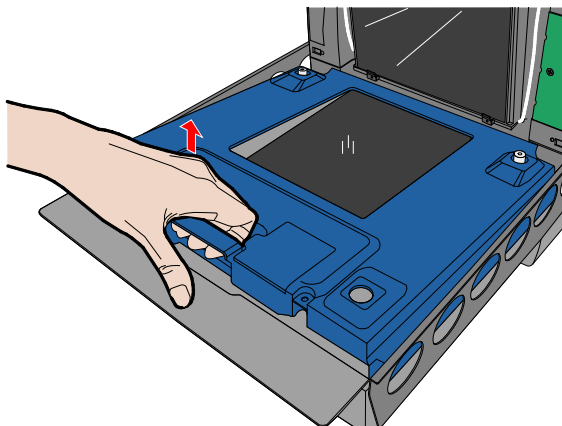

24523



5. Install the Sensormatic® Coil.

- a) Position the upper portion of the Coil along the top edge of the Vertical Window.

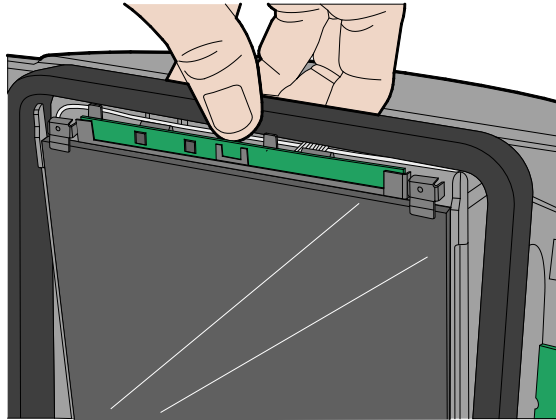



24162

- b) Lay the lower portion of the Coil down around the Horizontal Window.

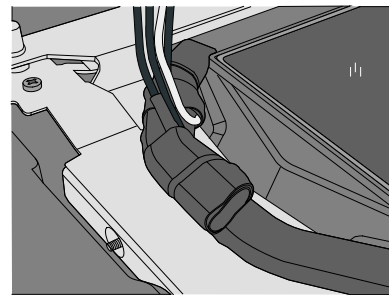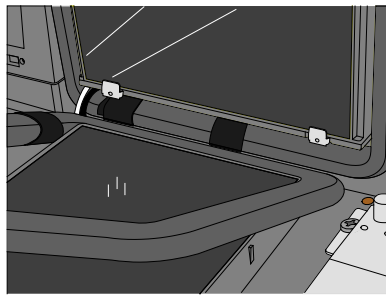


24068

- c) Route the Coil Cable through the front of the Base opening.

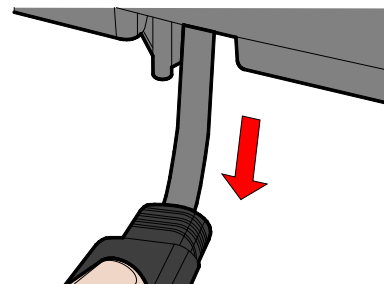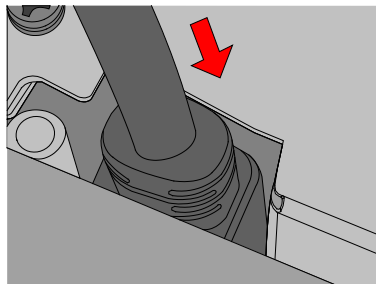



24035

- d) Ensure the wires route to the shown position.

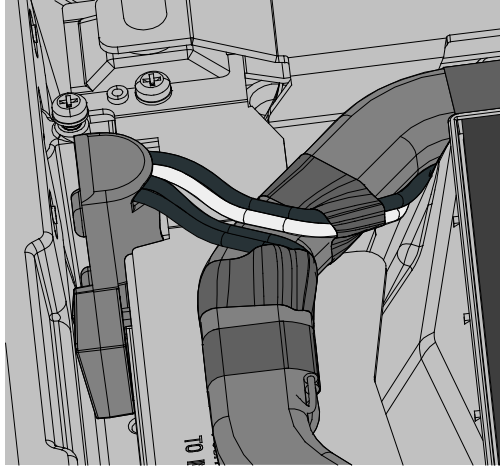


24073

- e) Mate the Cable Strain Relief Hanger to the Plastic Tab on the Horizontal Cover and snap in place.

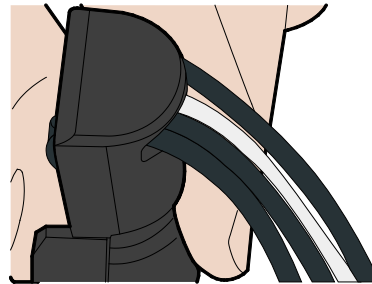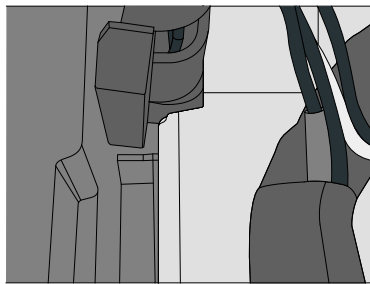


24074

- f) Ensure the wires are flat against the Coil Edge so the Debris Guard is not affected.

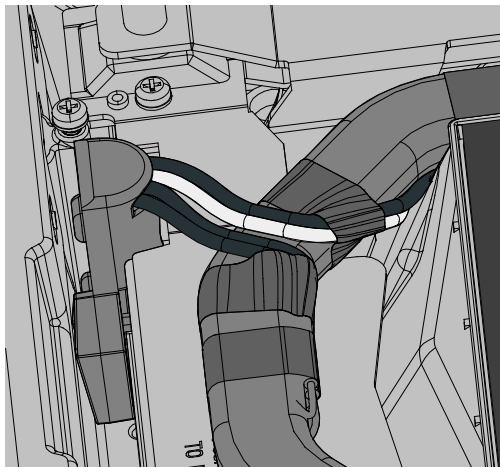


24073

- g) Ensure the Coil lays flat from front to back and the wire is recessed in the canal under the coil.

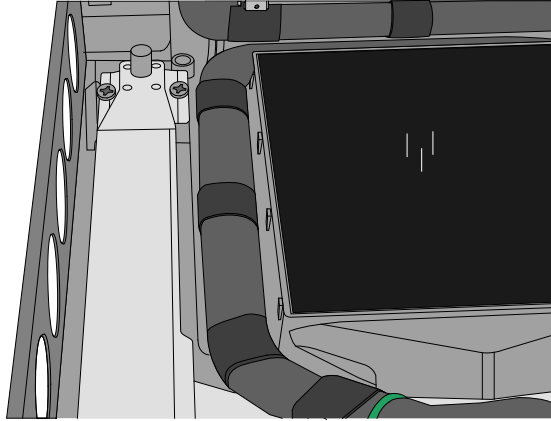


24075

- 6. Reseat the Debris Guard.

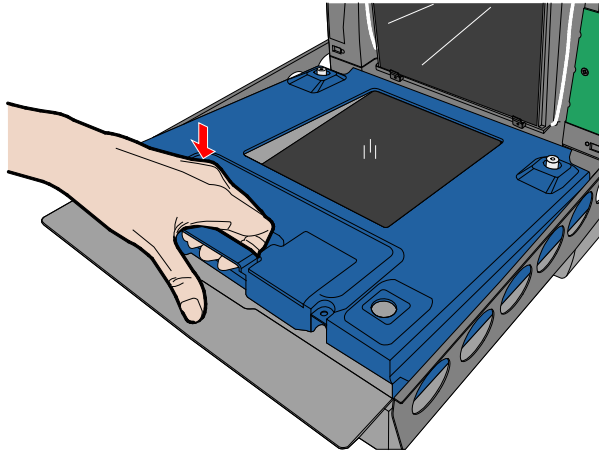


24524

- 7. Replace the four screws to secure the Debris Guard.

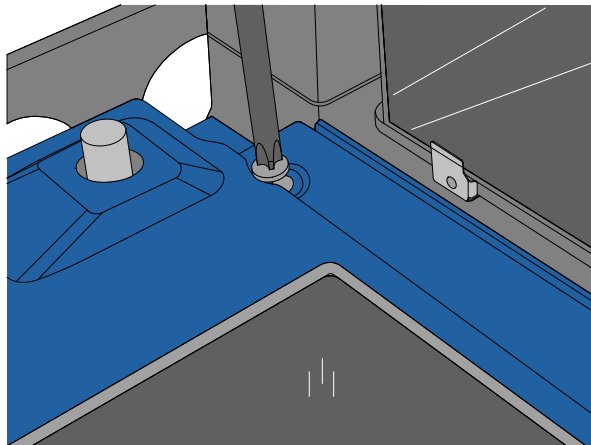


24072

8. Ensure the Cable Hanger is seated between the plastic tabs with no interference.

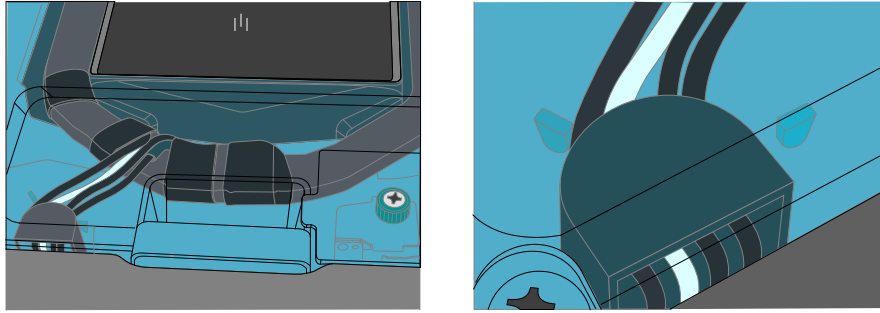


24032

9. Snap the Bezel back in place.
- a) Align the top edge of the Tower Cabinet with the top edge of the Front Bezel.

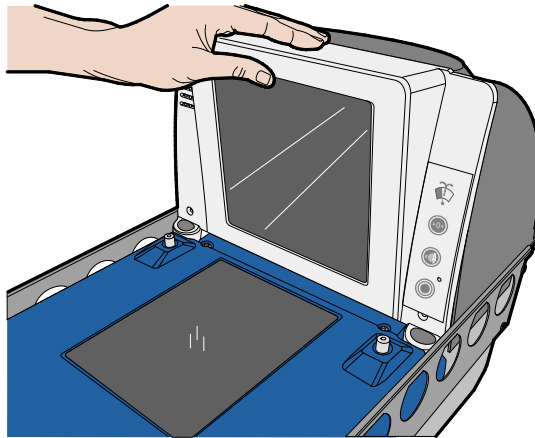

24051


- b) Apply pressure on the bottom-left and bottom-right corners of the Front Bezel to latch it in place.

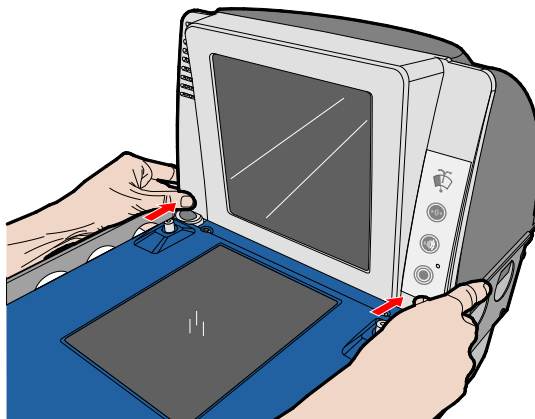

24052


10. Replace the Top Plate.

- a) Lower the back edge of the Top Plate onto the back Support Posts on the 7878.
- b) Holding the front edge, lower the front of the Top Plate onto the two front Support Posts.

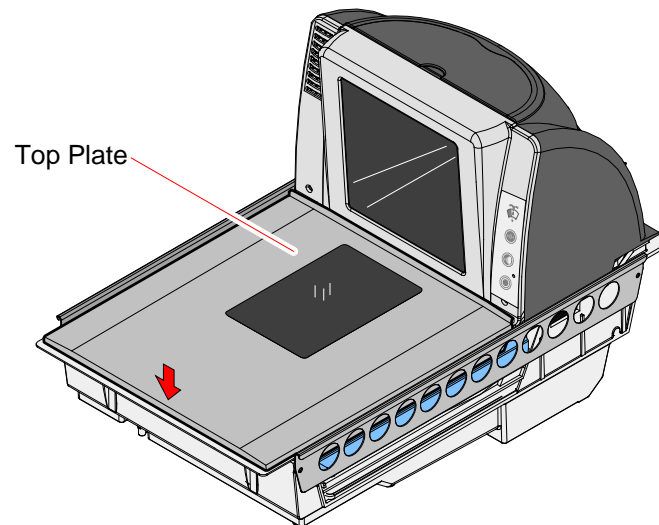

23795

Step 4: Cable Connection

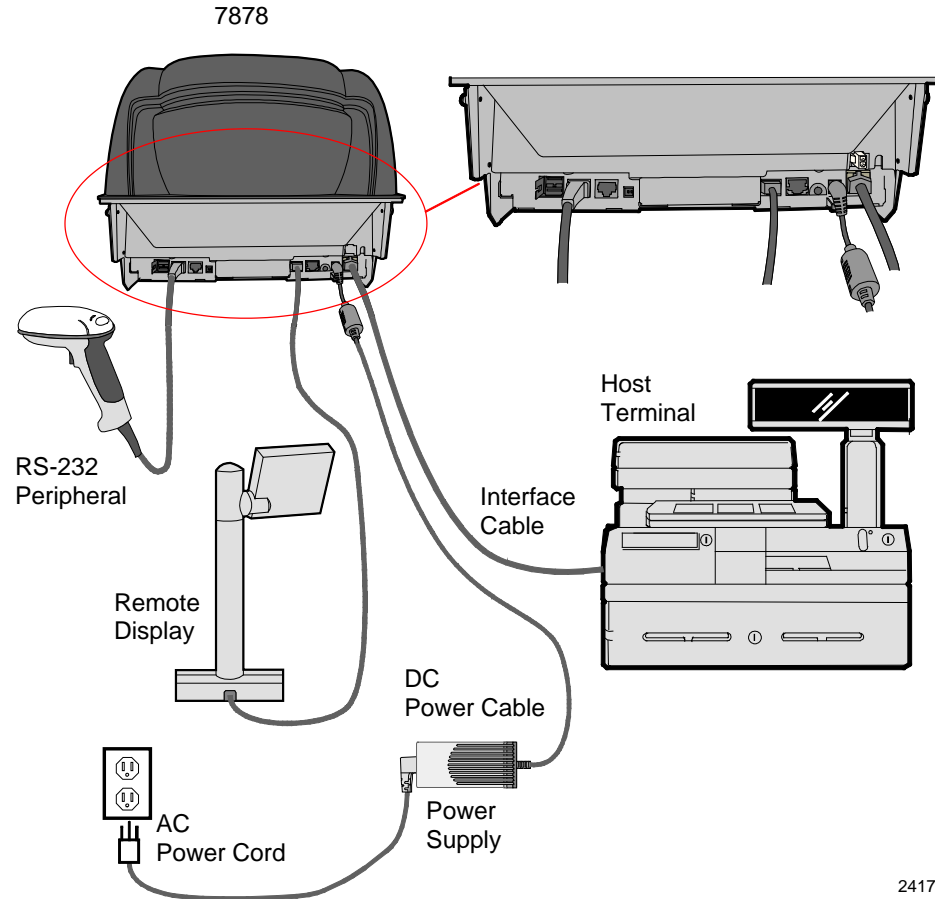

24171

Note: Ensure that the power is off before connecting or disconnecting cables.

To install the cables in the 7878, perform the following procedure.

1. If available, install the Checkpoint Cable Kit.

Note: For instructions on how to install the Checkpoint Cable Kit, refer to Appendix D, "Checkpoint Antenna (K940) Kit."

2. Connect the DC Power Cable from the Power Supply to the DC Power connector.
3. Connect the interface cable to the Main (POS) RS232/RS485 Communication Port.

Note: If you intend to program the scanner using programming barcode tags, do not connect the interface cable to the Main (POS) RS232/RS485 Communication Port until all programming is complete.


Note: The scanner can connect to a separate "host terminal scale interface cable" through "Port 1". Full details are added on the firmware's release.

4. If used, connect the remote display cable to the Scale Display Port.

5. If the configuration includes an RS-232 peripheral device, connect the cable to one of the two RS-232 peripheral ports. Port 1 is on the bottom of the unit in the back left corner.
6. Connect one end of the Sensormatic® Communications Cable to the Auxiliary Port 2 at the back of the 7878. The other end connects to the host terminal connector on the Sensormatic® ScanMax™ Pro Controller.
7. Connect the Sensormatic Coil Cable to the Coil connector on the Sensormatic® ScanMax™ Pro Controller.
8. Connect the Sensormatic® AC Power Cord.

Note: Some peripherals are limited to which port they can use.

Step 5: 7878 Installation in Checkstand Cutout

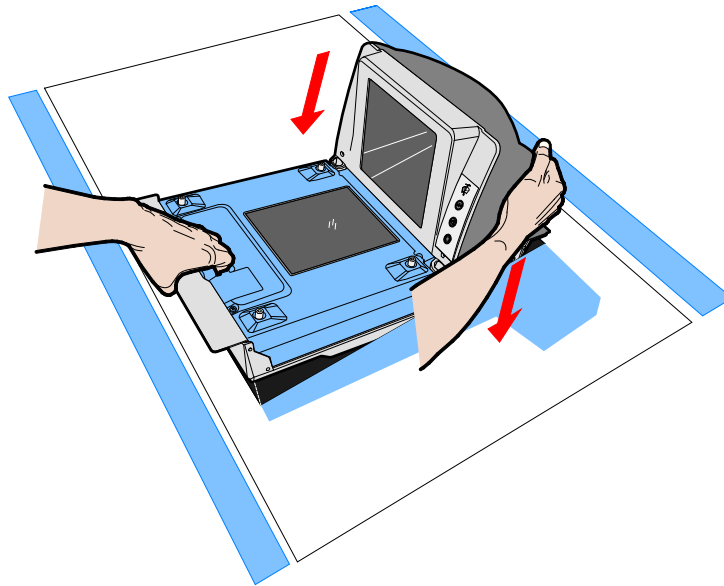

24165

To install the 7878 in the Checkstand Cutout, perform the following procedure.

1. Verify that the top of the 7878 Supports are set to the initial distance from the top of the checkstand. Check dimension "D" on "Checkstand Cutout" section in *Site Preparation* chapter.
2. Holding the handles on the side of the tower cabinet and the front of the unit, slowly lower the 7878 into the checkstand cutout. It should have support at the front and the rear, within 50 millimeters (2 inches) of its corners so that it does not rock.
3. Install the Top Plate on the four supports. According to the product flow, the leading edge of the Top Plate must be flushed or up 1.50 mm (0.06 in) below the top of the checkstand. The trailing edge of the Top Plate must be flushed or up to 1.50 mm (0.06 in) above the top of the checkstand.

Note: It is important that the 7878 does not rock on its supports. Make sure that all adjustable supports are securely fastened and that the 7878 is sitting on all supports.

Note: Place the power supply in a position where spilled liquids cannot fall onto it.

Step 6: Top Plate Alignment Verification

Verify the final alignment of the Top Plate with the top of the checkstand. If adjustment is needed, adjust the support posts or the fixed flanges that support the 7878, placing the adjustment screws under the front and back flanges of the scanner.

- For installation of a 7878 that includes a scale, refer to the next section “Step 7: Scale Calibration”.
- For installation of a 7878 scanner with Sensormatic Security Tag Deactivation, skip to “Step 8: Sensormatic Deactivation Setup”.
- For installation of a 7878 scanner only, skip to “Step 9: Operational Unit Verification”.

Step 7: Scale Calibration

Note: Only certified personnel can perform the scale calibration procedure and place the scale into service for trade to comply with governmental weights and measures regulations.

The 7878 must meet the following accuracy requirements.

- The 7878 is considered a new unit each time the scale is calibrated. This status lasts for thirty (30) days.
- The 7878 is considered an in-service unit thirty (30) days after the scale is calibrated.

During factory testing, the scale is calibrated one or more times to test the scale calibrating function. This calibration test is not sufficient to make the scale ready for weighing in trade. The scale **MUST** be calibrated following installation in their working environment to offset effects of local gravitation, imperfect leveling, and working environmental conditions. The scale **MUST** be calibrated when any of the following occurs (this is a government requirement).

- Initial installation of a 7878
- When the scale cannot be zeroed
- When the diagnostics indicate a calibration error
- When the load cell is changed

- If the digital board is changed, the EEPROM from the old board must be ported to the new board. Only 7878 EEPROMs may be used. If the EEPROM is not ported the scale must be recalibrated.

The calibration procedure sets the scale and the electronics to interpret the weight of an item accurately. The scale can be calibrated after power has been supplied for 30 minutes and if the ambient air condition has been 20° C (68° F) or above for at least 24 hours. If the ambient air condition has not been met (below 20° C (68° F)), then the scale must be on for at least 6 hours before it can be calibrated. One or more certified weight sets are required to calibrate and certify the scale. The following are examples:

- Whole Pound Weight Set: NCR Part Number 998-0633009
- Fractional Pound Weight Set: NCR Part Number 998-0633012
- Kilogram Weight Set: Obtain locally

The NCR 7878 maintains an audit trail of scale calibration, parameter changes, and firmware updates. The audit trail consists of three event counters. Display the audit trail count by touching and holding the **Scale Zero** button at the bottom-right corner of the Vertical Scan Window. The display alternates between `Cal xxx`, `Par xxx`, and `Fls xxx`. The Cal value is the number of times the scale has been calibrated. The Par value is the number of times a sealed scale parameter has been changed, for example lb/kg units. The Fls value is the number of times the firmware has been updated. The audit trail displays only if the system includes the NCR RealScan™ 25 Remote Compact Display.

Note: Scanner scale capacity is **30 lb** (15 kg) in **0.01 lb** (0.005 kg) increments.

Note: Some host terminals can corrupt the calibration settings if they are connected during scale calibration. Therefore, NCR recommends disconnecting the interface cable before starting calibration of the scale and then reconnect it after completing the calibration procedure.

Perform the Calibration Procedure

Note: If a protective plastic covering is present on the Top Plate, ensure that it is removed before calibrating the Scale.

The scale firmware controls the calibration procedure. It waits for a response to each prompt before going to the next step. The firmware uses the voice feature and the display to identify how much weight to place on the Top Plate. After the required weight has been placed on the Top Plate and the Scale Zero button is pressed, the firmware sounds a single tone and goes to the next prompt.

The calibration procedure can be ended before completion by turning the unit off. However, if this is done, the scale must still be calibrated before placing it into service.

Note: The pound and kilogram weights used for calibration are not equivalent values. They are the actual weights the firmware needs to perform the calibration.

Note: Turn off the EAS system during scale calibration.

Calibrating and Exercising the 7878 Scanner

1. Determine the type of weight set to use for calibration. There are two weight sets, Kilograms and Pounds. Scan the Programming Tags in sequence for the desired weight feature.

Selection	Programming Tag Sequence
Kilograms	Reset, Programming Mode, Hex 3, Hex 0, Hex 1
Pounds	Reset, Programming Mode, Hex 3, Hex 0, Hex 2

Note: Once the Programming Tags have been scanned for the desired weight feature, the Scanner speaks "Enter Kilograms Calibration" or "Enter Pounds Calibration".

- For the **Kilogram** weight set, you must have a calibrated KG weight set, 12.5 KG total. Weight combinations 2.5kg, 7.5kg, and 12.5kg are required, with suggested individual weights made up of a set of two 5 kg weights, one 2kg weight, and one 500g weight.
- For the **Pound** weight set, you must have a calibrated LB weight set, 30 pounds total. Weight combinations 5 lb, 15 lb, and 30 lb are required, with suggested individual weights made up of a set of two 10 lb weights, one 5 lb weight, two 2 lb weights, and one 1 lb weight.


Note: The pound and kilogram weights used for calibration are not equivalent values. They are the actual weights the firmware needs to perform the calibration.

2. Turn off the EAS system during scale calibration.
3. If a protective plastic covering is present on the Top Plate (new NCR 7878 installation) or the clear plastic door below the Top Plate, ensure that it is removed before calibrating the Scale.
4. A display is needed during the Scale Accuracy Verification procedures that follow the Calibration procedure. If the installation does not include a NCR RealScan™ 25 Remote Compact Display, connect one to the Scale Display connector on the Bulk Head Connector System.
5. Apply power to the 7878 if it is off. The unit needs to be ON for 30 minutes prior to calibration, unless it is cool in the environment (below 20° C (68° F)), in which case the scale must be on for at least 6 hours before it can be calibrated.

6. EXERCISE THE SCALE

Note: You MUST exercise the scale BEFORE the scale can be calibrated



- a) Remove the Top Plate.
- b) Press the Calibration Switch.
 - **For 7878-1xxx/2xxx models, do the following:**
 - i. Remove the blue plastic Scale Calibration Switch Cover located on the right-front corner of the unit. Lift the left side of the cover to unlatch and remove it.

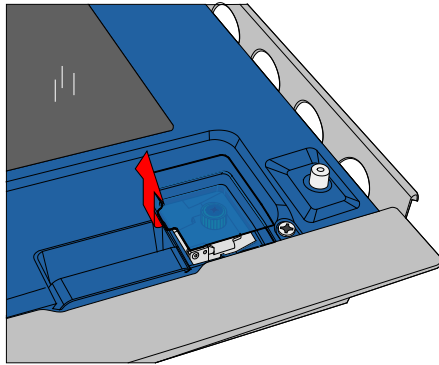

23960

If the metal Scale Calibration Switch Security Cover is secured with a lead/wire or paper seal, remove the seal.

- ii. Unscrew the green sealing screw (1) and pull up on the cover (2) to access the small blue Calibration Switch button.

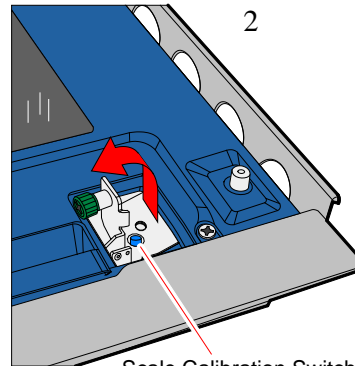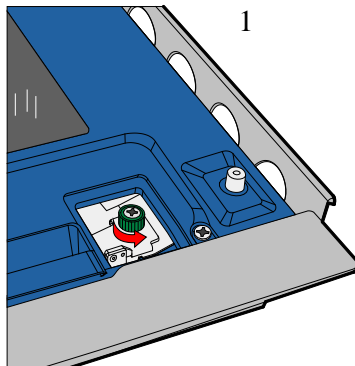

Scale Calibration Switch

24982

- iii. Press the small blue Calibration Switch button (this button is very small and very recessed). When you press the button, the scanner speaks “**Press Deck**”.

The unit will IMMEDIATELY begin a continuous clicking sound along with a steady tone.


Note: You MUST replace the Calibration Switch Cover and Top Plate, and complete the scale exercise procedure within 90 seconds. If not, the scanner will report a ‘Calibration Error Code 8’ and you will see 1 blue and 1 green LED on the Light Bar.



24977

Note: You will need to perform the press-down procedure twice, otherwise the unit will report ‘Calibration Error Code 8’.


- For 7878–5001 model, do the following:
 - i. Lift the Plastic Calibration Switch Cover located on the front of the unit.

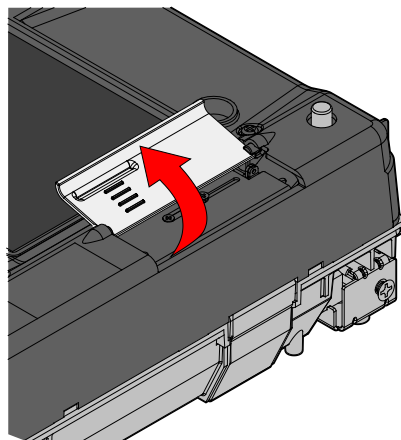

CCP-60061

Note: If the metal Scale Calibration Switch Security Cover is secured with a lead/wire or paper seal, remove the seal.

- ii. Loosen the screw indicated below (1) and slide the Metal Calibration Switch Cover to the left (2) to access the small blue Calibration Switch button.

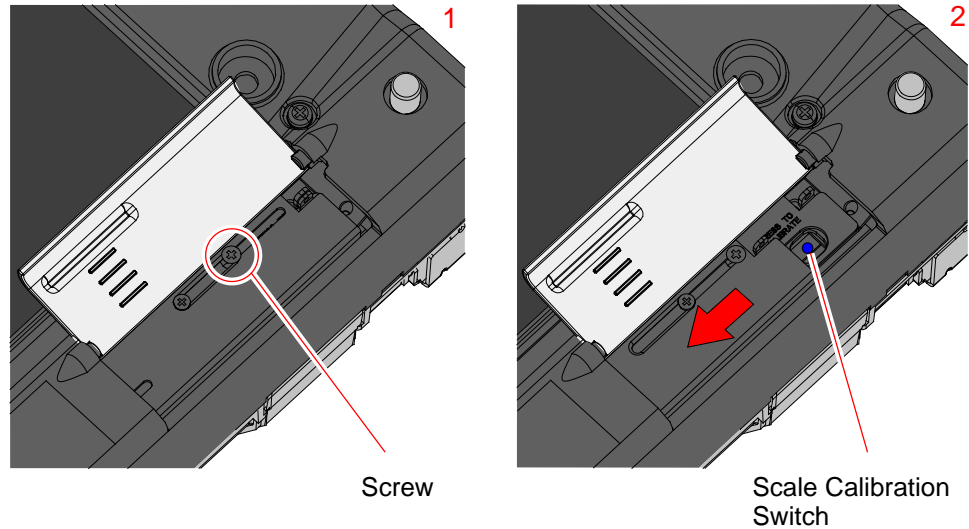


CCP-60063

- iii. Press the small blue Calibration Switch button (this button is very small and very recessed). When you press the button, the scanner speaks “Press Deck”.

The unit will IMMEDIATELY begin a continuous clicking sound along with a steady tone.

Note: You MUST replace the Calibration Switch Cover and Top Plate, and complete the scale exercise procedure within 90 seconds. If not, the scanner will report a ‘Calibration Error Code 8’ and you will see 1 blue and 1 green LED on the Light Bar.



24977


Note: You will need to perform the press-down procedure twice, otherwise the unit will report ‘Calibration Error Code 8’.

c) PRESS DOWN PROCEDURE.


- i. Once the Top Plate is back on and all the LEDs in the tower Light Bar are off, use both hands and press down HARD on the Top Plate with a constant and increasing pressure.

Note: It will take a LOT of pressure. You might have to fully LEAN on the scale – you will not break it. The goal is to light ALL 5 LEDs and keep them on for 4 seconds.


- ii. As you press on the scale deck, an increasing number of LEDs will turn on indicating the amount of pressure you are applying.

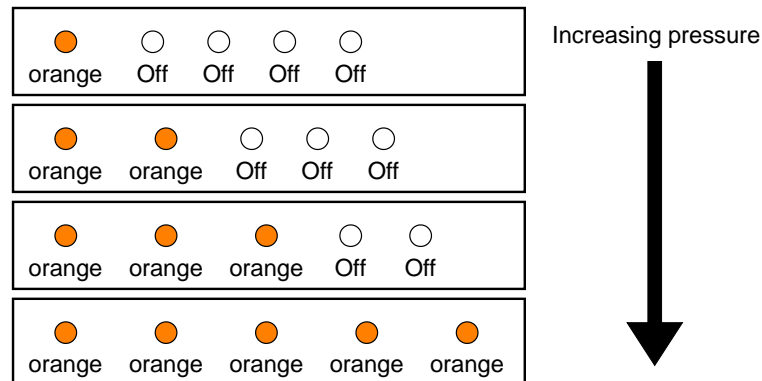

- iii. As you press, the tone also increases in pitch, producing a different, higher tone for each additional LED that lights up. If you let go, the tone will decrease in pitch as the LEDs progressively turn off.
- iv. At the highest pitch, with ALL 5 LEDs on, you **MUST CONTINUE** pressing down with continuous consistent pressure until the 5 LEDs turn solid **red** and the scanner beeps four times.




- v. Finally, the scanner will say “Complete” and all the 5 LEDs will turn solid **blue**. You can then release your hands from the deck.



- vi. Scanner will again say “**Press deck**”.
- vii. Repeat the Press Down steps again until the scanner says “Complete”.
7. Once the exercising is complete (press-down done twice), the scanner will require a delay before continuing with calibration. It will say “Please wait 20 seconds...15 seconds...10 seconds...five seconds...complete”. There is a countdown shown on the 7825 remote display if one is attached.

8. The regular calibration procedure will begin after exercising is complete. Use the following procedures:

Note: Use the type of calibration procedure according to the type of weight sets being used.

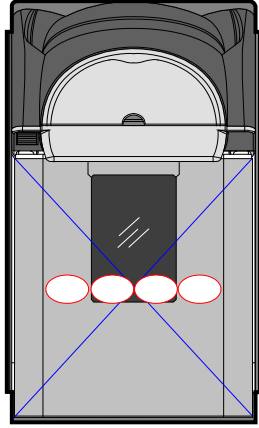

24047

Note: Place weights in circles shown when calibrating to ensure even distribution of weight during calibration. Start at the center and work outward horizontally with increasing weight. Do not scatter weights around the Top Plate

Calibration Using Kilogram Weights

- a. Scanner speaks "Place zero kilograms on deck then press Scale Zero". Make sure the scale has no weights on it (is empty) then press Scale Zero. Wait.
- b. Scanner speaks "Place 2.5 kilograms on deck then press Scale Zero". Put 2.5 kg on the scale then press Scale Zero. Wait.
- c. Scanner speaks "Place 7.5 kilograms on deck then press Scale Zero". Put 7.5 kg on the scale then press Scale Zero. Wait.
- d. Scanner speaks "Place 12.5 kilograms on deck then press Scale Zero". Put 12.5 kg on the scale then press Scale Zero. Wait.
- e. Scanner speaks "Place zero kilograms on deck then press Scale Zero". Take all the weights off the scale then press Scale Zero. Wait.
- f. Scanner speaks "Calibration complete" upon successful calibration.

Calibration Using Pound Weights

- a. Scanner speaks "Place zero pounds on deck then press Scale Zero". Make sure the scale has no weights on it (is empty) then press Scale Zero. Wait.
 - b. Scanner speaks "Place 5 pounds on deck then press Scale Zero". Put 5 lb on the scale center then press Scale Zero. Wait.
 - c. Scanner speaks "Place 15 pounds on deck then press Scale Zero". Add 10 more pounds to make 15 lb on the scale then press Scale Zero. Wait.
 - d. Scanner speaks "Place 30 pounds on deck then press Scale Zero". Add 15 more pounds to make 30 lb on the scale then press Scale Zero. Wait.
 - e. Scanner speaks "Place zero pounds on deck then press Scale Zero". Take all the weights off the scale then press Scale Zero. Wait.
 - f. Scanner speaks "Calibration complete" upon successful calibration.
9. When successful calibration is concluded, take the Top Plate off, ensure that the metal Scale Calibration Switch Security Cover is closed, and tighten the green sealing screw.
 10. Seal the metal Scale Calibration Switch Security Cover with one of the following seals:
 - Lead/Wire Seal (NCR Part Number: 603-8001097) using a Lead/Wire Seal Press (NCR Part Number: 603-9000157)
 - Film/Paper Seal (Obtain locally—Must meet the requirements of the local government)
- Note:** Depending on local laws, Weights and Measures officials may be required to attach the seal.
11. Replace the blue plastic Scale Calibration Switch Cover.

12. Reinstall the Top plate.

If Scan Doctor detects an error during the calibration procedure, one of the following error codes may be given.

Error Code	Problem	Suspect Components	Light Bar Patterns
1, 2, or 3	Possible out of range calibration error	Digital Board Scale Assembly	Error Code 1: LED 1 = blue LED 2 = orange LED 3 = orange Error Code 2: LED 1 = blue LED 2 = orange LED 3 = orange LED 4 = orange Error Code 3: LED 1 = blue LED 2 = orange LED 3 = orange LED 4 = orange LED 5 = orange
4	Scale hardware error	Digital Board Scale Assembly Scale Digital Cable	LED 1 = blue LED 2 = red
5	Scale Drift	Digital Board Scale Assembly Scale cables and Power Supply	LED 1 = blue LED 2 = red LED 3 = red
6	Failure to update parameters into EEPROM.	EEPROM Digital Board	LED 1 = blue LED 2 = red LED 3 = red LED 4 = red
7	Error reading parameters from EEPROM	EEPROM Digital Board	LED 1 = blue LED 2 = red LED 3 = red LED 4 = red LED 5 = red
8	Scale exercising failed (not enough pressure or time consumed)	Top Plate is bottoming out	LED 1 = blue LED 2 = green

Error Code	Problem	Suspect Components	Light Bar Patterns
9	Linearity problem or slight vibration noted while calibrating Scale (Zero Drift)	Top Plate is touching checkstand. Scale was jarred.	LED 1 = blue LED 2 = green LED 3 = green

Scale Accuracy Verification

Scale accuracy must be verified immediately following calibration, and annual scale inspections are recommended to ensure that weighing error due to harsh environmental conditions and mechanical stresses do not go unnoticed. Inspection periods greater than one year increase risk of weighing error and regulatory non-compliance. Scales must be calibrated when the measured weighing error exceeds the regulated tolerance requirements. For jurisdictions where a government authority does not perform regular inspections, NCR's inspection service helps maintain customer trust in the brand by ensuring all scales comply with local regulations. Contact your local NCR Service Representative for program details.

1. Increasing Load Test
2. Over-Capacity Test
3. Decreasing Load Test
4. Shift Test

Increasing Load Test

This test checks the scale's accuracy when incrementally adding weight to the center of the Top Plate. Use weights that correspond to the 7878 weight features.

Step	Weight Feature	Add Weight	Remove Weight	Display Result
1	Kilogram	0.1000 kg		0.100 ± 0.000 kg
	Pound	0.20 lb		0.20 ± 0.00 lb
2	Kilogram	2.500 kg	0.100 kg	2.500 ± 0.000 kg
	Pound	5.00 lb	0.20 lb	5.00 ± 0.00 lb
3	Kilogram	5.000 kg		7.500 ± 0.005 kg
	Pound	5.00 lb		10.00 ± 0.01 lb
4	Kilogram	5.000 kg		12.500 ± 0.005 kg
	Pound	10.00 lb		20.00 ± 0.01 lb
5	Kilogram	2.500 kg		15.000 ± 0.005 kg

	Pound	10.00 lb	30.00 ± 0.01 lb
--	-------	----------	-----------------

Note: Do NOT remove any weight from the Top Plate between test steps unless directed to do so.

Over-Capacity Test

This test checks for the proper indication from the scale when too much weight is placed on the Top Plate.

Note: This test must immediately follow the Increasing Load Test; do not remove any of the weights from the previous test prior to running this test.

Note: Scale capacity is 30 lb or 15 kg in 0.01 lb or 0.005 kg increments.

Place additional weight on the center of the Top Plate as shown in the following table. Use the weight that corresponds to the 7878 weight feature. The display shows a series of dashes to indicate an over-capacity condition.

Step	Weight Feature	Add Weight	Remove Weight	Display Result
1	Kilogram	0.050 kg		---.---
	Pound	0.10 lb		---.---
2	Kilogram		0.050 kg	15.000 kg
	Pound		0.10 lb	30.00 lb

Note: Do NOT remove any weight from the Top Plate after completing this test.

Decreasing Load Test


This test checks the scale's accuracy when incrementally removing weight from the Top Plate. Use weights that correspond to the 7878 weight feature, as shown in the following table.

Note: This test must immediately follow the Over-Capacity Test; do NOT remove any of the weights from the previous test prior to running this test.

Step	Weight Feature	Remove Weight	Display Result
1	Kilogram	2.500 kg	12.500 ± 0.005 kg
	Pound	10.00 lb	20.00 ± 0.01 lb
2	Kilogram	5.000 kg	7.500 ± 0.005 kg
	Pound	10.00 lb	10.00 ± 0.01 lb
3	Kilogram	5.000 kg	2.500 ± 0.000 kg
	Pound	5.00 lb	5.00 ± 0.00 lb
4	Kilogram	2.500 kg	0.000 ± 0.000 kg
	Pound	5.00 lb	0.00 ± 0.00 lb

Shift Test

This test involves moving a weight off the center point of the Top Plate to check for continued accuracy.

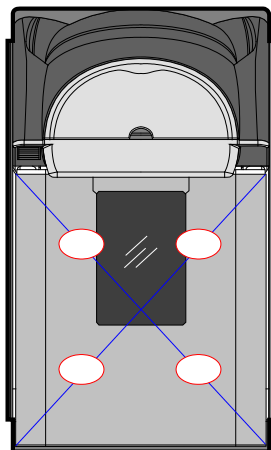

Test Pattern

23957

1. Place 5.00 kg (15.00 lb) on each of the four circles individually. The Display must show 5.00 ± 0.005 kg (15.00 ± 0.01 lb) with a max of 0.005 kg (0.01 lb) between any of the 5 readings.
2. Remove all weights. The display must read 0.000 ± 0.005 kg (0.00 ± 0.0010 lb) Test max thirty pounds (30.00 lb) in center only.
3. Press and hold the Scale Zero button. Record the Cal and Par values shown on the display.

Position	Weight Feature	Test Load	Display Result
1	Kilogram	5.000 kg	5.000 kg
	Pound	10.00 lb	10.00 lb
2	Kilogram	5.000 kg	5.000 kg
	Pound	10.00 lb	10.00 lb
3	Kilogram	5.000 kg	5.000 kg
	Pound	10.00 lb	10.00 lb
4	Kilogram	5.000 kg	5.000 kg
	Pound	10.00 lb	10.00 lb
5	Kilogram	5.000 kg	5.000 kg
	Pound	10.00 lb	10.00 lb

Note: Circles are half way from the center and corners of the Top Plate.

Securing the Calibration Switch


After performing a scale calibration, attach a seal to the scale calibration security cover. Depending on the local laws, Weights and Measures officials may be required to attach the seal.

Note: In the United States and Canada, the audit trail serves as an acceptable security seal when the RealScan 25 Compact Display is present.

Perform the following procedure to secure the calibration switch.


7878-1xxx/2xxx

1. Remove the Top Plate.
2. Remove the blue plastic Scale Calibration Switch Cover located on the right-front corner of the unit. Lift the left side of the cover to unlatch and remove it.

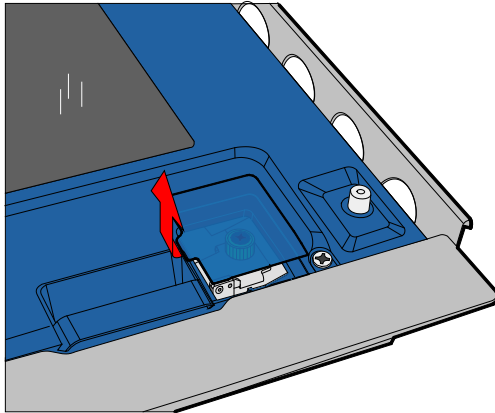


23960

3. Move the metal Scale Calibration Switch Security Cover until the screw holes and the seal holes are properly aligned.

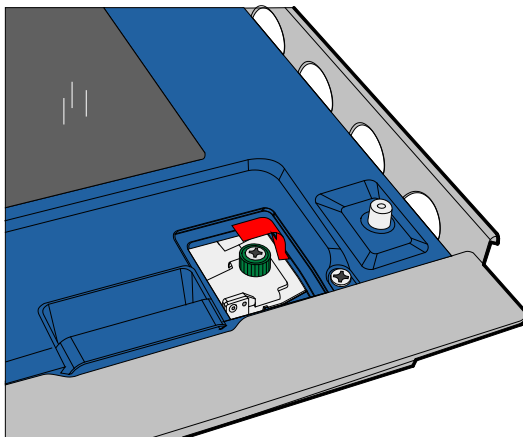


23966

4. Fasten the green thumbscrew on the metal Scale Calibration Switch Security Cover to secure the Calibration Switch.

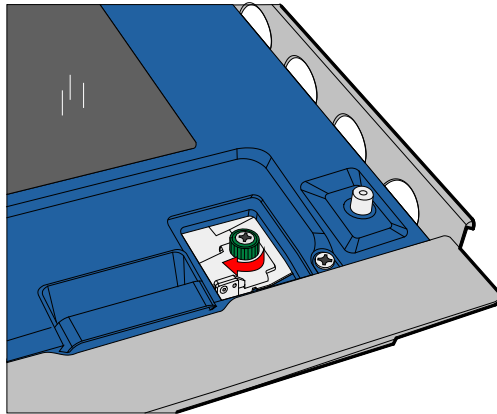

23967

5. Seal the metal Scale Calibration Switch Security Cover with one of the following seals:
 - Lead/Wire Seal (NCR Part Number: 603-8001097) using a Lead/Wire Seal Press (NCR Part Number: 603-9000157)
 - Film/Paper Seal (Obtain locally—Must meet the requirements of the local government)
6. Install the blue plastic Scale Calibration Switch Cover.

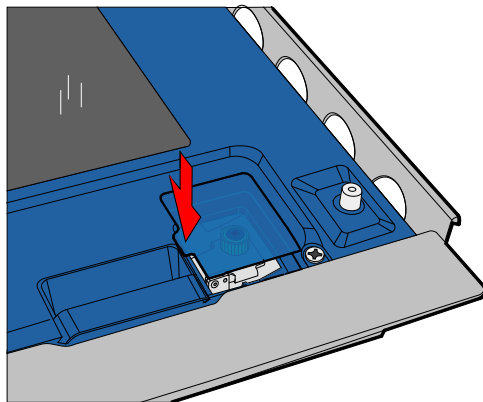


24537

7. Install the Top Plate.


7878-4xxx/5xxx

1. Remove the Top Plate (see “Removing the Top Plate” section in Chapter 4, “Component Replacement”).
2. Lift the plastic Scale Calibration Switch Security Cover located on the front of the unit.

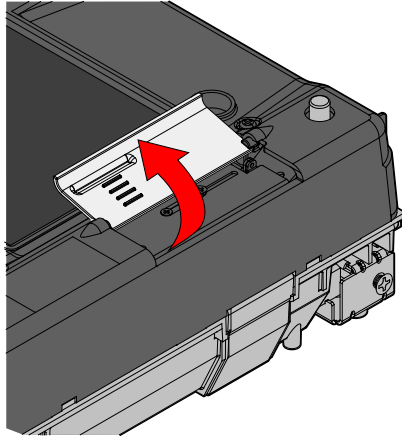

CCP-60061

3. Align the seal holes of the metal Scale Calibration Switch Security Cover and the Scale Chassis, and seal with one of the following:
 - Lead/Wire Seal (NCR Part Number: 603-8001097) using a Lead/Wire Seal Press (NCR Part Number: 603-9000157)
 - Film/Paper Seal (Obtain locally – Must meet the requirements of the local government)

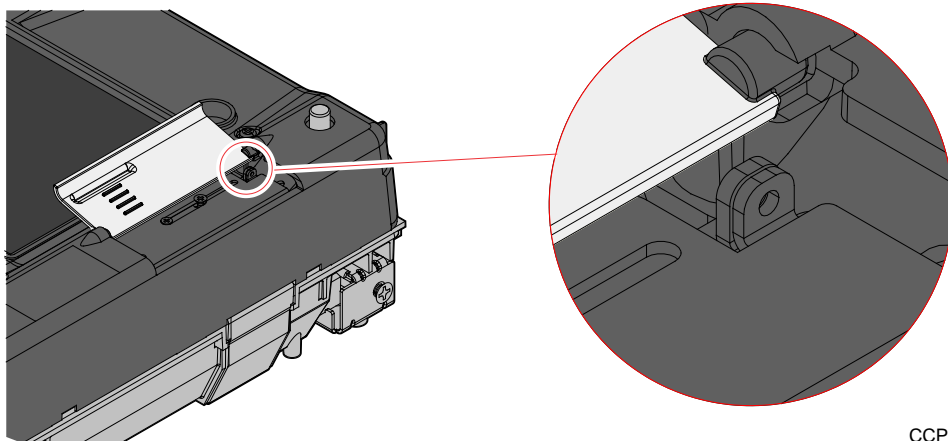

CCP-60062

4. Close the plastic Scale Calibration Switch Security Cover.
5. Install the Top Plate (see “Installing the Top Plate” section in Chapter 4, “Component Replacement”).

Step 8: Sensormatic® Deactivation Setup

Sensormatic Tag Deactivation

Connect the Sensormatic® Tag Deactivation System to the RS-232 Peripheral Ports, which is Port 2. If a hand-held scanner is used, connect the hand-held to Port 1. When the 7878 scanner reads a tag, the Sensormatic® hardware needs to receive an interlock signal for it to function. When the system is installed, the Sensormatic® Interlock Signal must be enabled.

There are two modes of Sensormatic operation, Interlocked and Non-interlocked. The mode is controlled by the Scan Enable Time, which is a setting in the Sensormatic controller. When the Scan Enable Time is set to a value between 1 and 29, the system will run in the Interlock Mode. If the value is 0 or 30 the system will run in the Non-interlock Mode.

Interlock Mode

The scanner reads the Scan Enable Time from the controller. If it is between 1 and 29, it will enable the controller for deactivation for this many seconds after a bar code is read and then will disable the controller until the next bar code. Interlock mode is used in self service lanes and cashier assisted lanes.

Non-Interlock Mode

If the Scan Enable value is 0 or 30, the scanner will enable the Sensormatic controller for deactivation any time the scanner is enabled to read tags. In most systems, this corresponds to the time the cashier is signed into the host or POS terminal. The host terminal sends an "enable" to the scanner at cashier sign in and this is passed on to the Sensormatic controller. At cashier sign out, the host terminal sends a "disable" to the scanner and the Sensormatic controller is disabled. This is called Non-interlock Mode. This mode is designed for the cashier lanes.

Sensormatic® Online Offline Indication

If the scanner is programmed for Sensormatic operation when the scanner powers up and it establishes communication with the Sensormatic controller, it will speak the message "EAS Online". This may take from 5 to 10 seconds. If this is the first time the Sensormatic controller has been detected, the scanner will remember that it has seen a controller and from then on at startup, if the controller is not detected, the scanner will speak "EAS offline". Once operation has started and the communication to the controller is lost, the scanner will speak "EAS Offline". If the communication is reestablished, the scanner will speak "EAS online". The only time the "EAS Offline" message is not spoken is on a new unit which has never been connected to a Sensormatic controller. This is to limit the messages at installation and testing before the controllers are installed.

Cashier Sign In Offline Alert

There is a feature to alert the cashier of the EAS system state at sign in. When the sign in occurs and the scanner is enabled if the EAS system is offline the “EAS OFFline message will be spoken”. There is a programmable time limit on how long the sign out period must be before the offline message is spoken in order to prevent extraneous messages when cashier must sign in and out frequently. This message is from 1 to 15 minutes and is selected with the following programming tag sequence.

1. **Program Mode**—puts the scanner in programming mode.
2. **Hex 7, Hex C, Hex x**—where x (0 to F) corresponds to the time in minutes (1 to 15).
3. **Save and Reset**—saves the enabled setting and resets the 7878.

EAS Offline LED

There is an LED indicator beside the Manual Deactivation Button used to indicate the EAS system status. The LED will be on solid when the system is connected and operating properly. If the system is connected but not communicating the LED will be flashing. The LED is off when the EAS feature is disabled.

Enable Sensormatic® Communications

Scan the following sequence of programming tags to enable the Sensormatic® communications. These must be the first tags scanned after applying power to the 7878.

1. **Program Mode**—puts the scanner in programming mode.
2. **Hex 4, Hex 2, Hex B**—enables Sensormatic® Interlock Signal.
3. **Save and Reset**—saves the enabled setting and resets the 7878.

Disable Sensormatic® Communications

Scan the following sequence of programming tags to disable the Sensormatic® communications. These must be the first tags scanned after applying power to the 7878.

1. **Program Mode**—puts the scanner in programming mode.
2. **Hex 4, Hex 2, Hex A**—disables Sensormatic® Interlock Signal.
3. **Save and Reset**—stores the disabled setting and resets the 7878.

Sensormatic® Deactivation Tones

The deactivation tone is heard after the Sensormatic controller senses a EAS tag and fires the deactivator. The tone is a series of pulses programmable in frequency and number of pulses. There can be 1 to 8 pulses of a single frequency or 1 to 7 pulses of dual tones.

Note: If the number of pulses is set to “0”, no tone is heard.

- To enable the Deactivation Tones function, use the following sequence:

1. **Program Mode**—puts scanner in programming mode
2. **Hex 6, Hex 8, Hex 9**—Enables Deactivation Tone
3. **Save and Reset**—stores the setting and resets the RealScan 78
 - To disable the Deactivation Tones function, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 6, Hex 8, Hex 8**—Disables Deactivation Tone
 3. **Save and Reset**—stores the setting and resets the RealScan 78

Scan the following sequence of programming tags to change the tone frequency of the 7878.

1. **Program Mode**—puts scanner in programming mode.
2. **Hex 5, Hex 8, Hex B**—increments to the next frequencies. Continue scanning **Hex B** to get the desired frequency. There are eight frequencies to choose from:
 - 570 Hz (default)
 - 637 Hz
 - 721 Hz
 - 829 Hz
 - 976 Hz
 - 1186 Hz
 - 1512 Hz
 - 2083 Hz
3. **End**—completes the programming sequence.
4. **Save and Reset**—stores the setting and resets the 7878.

Sensormatic® Deactivation Tone Pulse Length

Scan the following sequence of programming tags to change the number of pulses in the deactivation tone of the 7878.

1. **Program Mode**—puts scanner in programming mode.
2. **Hex 7, Hex B, Hex x**—where x is the number of desired pulses. With 1–8 pulses there is a single frequency tone. With 9–15 pulses there are 1 to 7 pulses of dual tone frequency
3. **Save and Reset**—stores the setting and resets the 7878.

Specific Function Programming

There are several Sensormatic® Security Tag Deactivation functions that can be programmed at the 7878.

Manual Deactivation

The Manual Deactivation function permits the user to disable scanning and enable Sensormatic® Security Tag Deactivation for 3 seconds with each touch of the Manual Deactivation button on the 7878 Operator Display Panel. A bar code can also be sent through the host terminal to report the manual deactivation. The bar code is sent after the button is pressed and the deactivation signal is received from the controller.

Note: The Manual Deactivation function is enabled by default.

- To enable the Manual Deactivation function, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 8, Hex 2, Hex 0**—enables Manual Deactivation
 3. **Save and Reset**—stores the setting and resets the RealScan 78
- To disable the Manual Deactivation function, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 8, Hex 2, Hex 1**—disables Manual Deactivation
 3. **Save and Reset**—stores the setting and resets the RealScan 78

Barcode Label Hold-Off

The purpose of the Barcode Label Hold-Off function is to force the user to bring the barcode closer to the scanner when a live EAS tag is present on the item being scanned. When the 7878 detects a live EAS tag it emits a clicking sound and sets a ½-second timer (optional). The timer will be restarted and will not expire as long as the EAS tag is detected. During this time the 7878 does not beep or send barcode data to the host terminal even though it may read the barcode. The timer will not be restarted once the EAS tag is deactivated. After the timer expires, the 7878 beeps and sends barcode data to the host terminal. If the barcode has been removed from the scan field, it may have to be returned to the field to be read and sent to the host terminal.

Note: The Barcode Label Hold-Off function is enabled by default.

- To enable the Barcode Label Hold-Off function, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 8, Hex 2, Hex 2**—enables Bar Code Hold-Off
 3. **Save and Reset**—stores the setting and resets the RealScan 78

- To disable the Barcode Label Hold–Off function, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 8, Hex 2, Hex 3**—disables Bar Code Hold–Off
 3. **Save and Reset**—stores the setting and resets the RealScan 78

Audible Detection

The Audible Detection function provides direct feedback to the user when a live EAS tag is in the field of view of the scanner. Clicks are enabled on the scanner.

Note: The Audible Detection function is enabled by default.

- To enable the Audible Detection function, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 8, Hex 2, Hex 4**—enables Audible Detection
 3. **Save and Reset**—stores the setting and resets the RealScan 78
- To disable the Audible Detection function, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 8, Hex 2, Hex 5**—disables Audible Detection
 3. **Save and Reset**—stores the setting and resets the RealScan 78

EAS Optional Communications

The EAS Optional Communications function alerts the host terminal software with a barcode communication message in three ways. This permits the host terminal to control the sequence of events at the scanner.

- The 7878 sends the Error barcode (048589999999) if an EAS detection signal occurs after a barcode is read by the scanner (for example, the Sensormatic® tag is still live). The Error Barcode Timer defines the window for permitting a deactivation to occur after a barcode is read. The timer can be set from ½ second to 4 seconds in ½-second increments. If the timer expires and no EAS deactivation has occurred, the Error barcode is sent to the host terminal software.
- The 7878 can send a Detect barcode (048589999988) every 4 seconds when EAS detections are occurring (a live EAS tag is in the detection field).
- The 7878 can send both barcodes if both conditions are met.

Scan the following EAS Communications Function tag to set the EAS Communication function.



012345000134

The function changes each time this tag is scanned. The number of beeps indicates how the function is set.

- 1 Beep—EAS Communications function is disabled—Factory default
- 2 Beeps—7878 sends Error barcode (048589999999)
- 3 Beeps—7878 sends Error barcode (048589999999) and Detect barcode (048589999988)
- 4 Beeps—7878 sends Detect barcode (048589999988)

The following tag increments the Error barcode timer. Each time the tag is read, the time is incremented $\frac{1}{2}$ second until the maximum time is reached. It then starts over with the least time.



012345000116

The number of beeps indicates how the timer is set.

- 1 Beep— $\frac{1}{2}$ second
- 2 Beeps—1 second
- 3 Beeps— $1\frac{1}{2}$ seconds
- 4 Beeps—2 seconds
- 5 Beeps— $2\frac{1}{2}$ seconds
- 6 Beeps—3 seconds
- 7 Beeps— $3\frac{1}{2}$ seconds
- 8 Beeps—4 seconds

After setting the EAS Optional Communication function and the Error Barcode timer, scan the following Reset tag to make the setting permanent in the 7878.

Reset Bar Code



012345000095

Error, Detect, and Manual Deactivation Barcodes

The Error, Detect, and Manual Deactivation barcodes are used for testing the host terminal.

- **Error Barcode**

- To enable the Error barcode, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 8, Hex 2, Hex 7**—enables Error barcode
 3. **Save and Reset**—stores the setting and resets the RealScan 78
- To disable the Error Barcode, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 8, Hex 2, Hex 6**—disables Error barcode
 3. **Save and Reset**—stores the setting and resets the RealScan 78

- **Detect Barcode**

- To enable the Detect barcode, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 8, Hex 2, Hex 9**—enables Detect barcode
 3. **Save and Reset**—stores the setting and resets the RealScan 78
- To disable the Detect barcode, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 8, Hex 2, Hex 8**—disables Detect barcode
 3. **Save and Reset**—stores the setting and resets the RealScan 78

- **Manual Deactivation Barcode**

Note: Ensure that the Manual Deactivation function is enabled. Refer to “Manual Deactivation” section in this chapter.

- To enable the Manual Deactivation barcode, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 6, Hex 8, Hex 7**—enables Manual Deactivation barcode
 3. **Save and Reset**—stores the setting and resets the RealScan 78
- To disable the Manual Deactivation Barcode, use the following sequence:
 1. **Program Mode**—puts scanner in programming mode
 2. **Hex 6, Hex 8, Hex 6**—disables Manual Deactivation barcode
 3. **Save and Reset**—stores the setting and resets the RealScan 78

Power-up the System

Note: Refer to the Sensormatic® ScanMax™ Pro Controller documentation for additional information about setting up the controller.

Perform the following procedure to power-up the system.

1. Turn on the 7878. When the 7878 is first turned on, all Sensormatic® parameters should be at their default settings:
 - 7878 Deactivation Button = Enabled
 - 7878 Detection Clicking = Enabled
2. Turn on the Sensormatic® ScanMax™ Pro Controller. This system is programmed at the factory with default settings for proper operation.
3. After the 7878 and the Sensormatic® ScanMax™ Pro Controller are operating for about 15 seconds, the 7878 gives the voice message **EAS Online**.


Note: Voice message **EAS Online** must be given before continuing. If voice message **EAS Online** is not given, turn off the power to all components. Check all cable connections and then repeat this procedure starting at Step 1. If voice message **EAS Online** is still not given and the Manual Deactivation Button flashes, scan the **Reset** programming tag. If **EAS Online** status is still not given, follow instructions on the Sensormatic Card—*Before You Call About....* The problem may be a bad Antenna cable.

4. Position a **Hard** Tag over the top of the 7878. As the **Hard** Tag is moved, the 7878 starts clicking when the tag moves within four inches of the center of the Top Plate. If the clicking sound is not generated, scan the Reset programming tag, then go to Step 3. If the second attempt fails, call for technical assistance. Refer to www.ncr.com for the contact information.

Check Sensormatic® Deactivation System

Check the System

Position a **Hard** tag above the 7878 Top Plate. As the tag moves within four inches of the Top Plate, a clicking sound is heard (if programmed). Refer to the previous topic, “Audible Detection,” for instructions on enabling the clicking sound. If the **Hard** tag has to be closer than four inches to from the Top Plate to get the clicks, consult the Sensormatic® Card—*Before You Call About....*

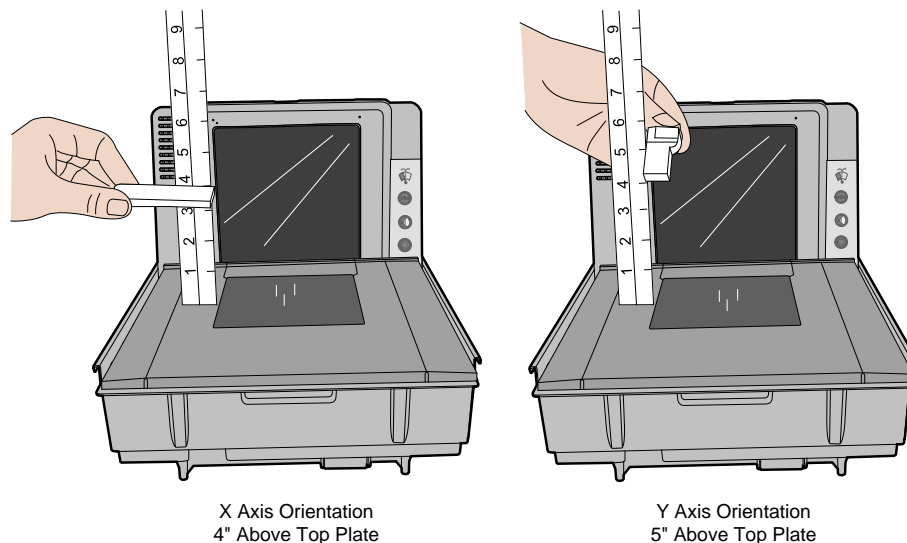

24170

Next, obtain a security tag that has not been deactivated. Scan a barcode and immediately pass the security tag through the deactivation zone. The Good Read Tone should sound indicating a good read of the barcode and deactivation of the security tag. Refer to the “Sensormatic Tag Deactivation Procedure” section in chapter 4 for detailed operating instructions.

Call Sensormatic®

After the NCR 7878 Sensormatic® configuration is installed, call Sensormatic® to have them test, tune, and phase their system.

Step 9: Operational Unit Verification

When power is applied to the 7878, the Scan Doctor software checks many of the scanner and scale components.

NCR 7878 Scanner-Only Models

After passing the Scan Doctor Power-On Wellness Check, the Light Bar will start out with five blue LEDs and transitions through a range of colors, and leaves only the three center LEDs lit in green. The 7878 is now operational.

NCR 7878 Scanner/Scale Models

After passing the Scan Doctor Power-On Wellness Check, the 7878 runs scale diagnostics. During this time, all segments on the RealScan 25 Remote Display are turned ON so the operator can verify the display works correctly. Then the display reads 0.000 kg (0.00 lb). The Light Bar starts out momentarily with five blue LEDs, changes to five red LEDs and blinks them five times. The unit beeps once after that and the 7878 is now operational.

7878 Power-On Wellness Check

If an error occurs during the Power-On Wellness Check, the RealScan 25 Remote Display (if the unit has one) displays an error code, and if enabled, the 7878 emits an audible description of the error and what action to take. There may be some simple steps that can be performed to correct the problem (refer to chapter 6 for more information). If the problem cannot be corrected, contact the maintenance provider for warranty and service information.

Checkout Reading Operation

The 7878 comes from the factory with the programming parameters set to default values. The Communications Protocol is set to the specifications on the order. However, some parameter changes for a particular installation can be made. Refer to chapter 5 for more information.

Flash Latest Firmware

Although the latest firmware is loaded when the 7878 is manufactured, newer firmware can be released after the unit is manufactured but before it is installed. NCR recommends checking the number of the firmware in the 7878 and comparing it with the latest firmware available on <http://www.ncr.com> (Support→Drivers and Patches→Retail Support Files→NCR RealScan and NCR SelfServ Peripherals→Scanners/Scales).

To identify the firmware already in the scanner, scan the **Diagnostic Mode, Hex 4,** and **Hex A** programming tags. These must be the first tags scanned after applying power to the unit. The 7878 gives a voice message containing the 497-xxxxxxx number of its firmware. Compare this number with the number of the firmware file on <http://www.ncr.com> (Support→Drivers and Patches→Retail Support Files→NCR RealScan and NCR SelfServ Peripherals). Perform the firmware flashing procedure if the 497-xxxxxxx number of the firmware file on <http://www.ncr.com> is higher than what is already loaded in the 7878.

Some host terminal installations require a specific firmware version. Check that the IT and Operations organizations of the user have approved the latest version.

There is a set of instructions for loading the appropriate NCR RealScan Scanner Tool Suite based on the firmware currently in the scanner. Refer to the “Firmware Flashing” section in Chapter 5 for more detailed information.

Special Host Terminal Connections

Scanner Connected to IBM Terminals

The scanner and scanner/scale interface to any host terminal is basically Plug-and-Play, assuming the scanner unit is programmed for IBM Communications (Refer to the “Programming Worksheets” section on Chapter 5 for more information). These systems are always single-cable, that is, one cable carries traffic for both the scanner and the scale (if scale is present). There are no configurable parameters in the IBM interface—the protocol is standardized and without any flexibility as far as barcode data formatting or interface characteristics such as baud rate. The scale’s LOGICAL address, which is completely independent of the port designation into which it is plugged, is 6Eh.

The host terminal port into which the scanner unit is plugged varies.

The older 468x series of host terminals require the scanner unit to be plugged into port 17.

Newer host terminals no longer have this port; instead they use cable 1416-C070-0040 to plug into port 9x (the “x” varies depending on the host terminal model).

- A typical 4693/4682 uses port 9B for its scanner and/or scale devices.
- An IBM 4694-00x and 4694-02x have a port 9E for the scanner’s use, while a 4694-244/245 needs the scanner unit plugged into 9A.

SNI Beetle Host Terminal

For the 7878 to communicate with an SNI Beetle Host Terminal, the communication parameters must be properly set. Scanning the following sequence of programming tags enables a typical installation; however, some variations may be necessary for any specific installation.

The following programming tags must be the first ones scanned after applying power to the 7878.

1. **Program Mode**—enables programming mode
2. **Hex 3, Hex 4, Hex F, Hex 0, Hex 0**—chooses Wincor-Nixdorf Beetle parameters
3. **Save and Reset**—save Beetle parameters
4. **Default**—permanently store Beetle parameters as the default settings

The following settings get changed:

RS-232 Communication

9600 Baud, 8-bit, Odd Parity, 1 Stop, Raise RTS – Wait for CTS

Scanner Only Protocol

Terminator = 0Dh

One Tag Output Buffer enabled (buffers only one tag)

Label Identifiers	
EAN13	= "A" (41h)
EAN8	= "B" (42h)
UPC-E	= "C" (43h)
UPC-A	= "A0" (41h 30h) (UPC-A is expanded into EAN13)
Code 39	= "M" (4Dh)
I 2 of 5	= "I" (49h)
Code 128	= "K" (4Bh)
UCC/EAN128	= "P" (50h) (UCC/EAN128 Label ID is enabled)
Codabar	= "N" (4Eh)
Pharmacode	= "A" (41h)

25592


Peripheral Connections

Please be aware that these Hand–Held setup instructions assume Code 128, Code 39 and Interleaved 2 of 5 are enabled on the 7878. Otherwise, if any of those bar code types are scanned with any of the Hand–Helds, and they are not also enabled on the 7878, then the 7878 produces a “bad” tone and will NOT transmit the barcode data.

Metrologic Hand–Held Scanner

A Metrologic Hand–Held Scanner can be connected to one of the RS232 auxiliary ports on the NCR 7878. If the Metrologic Hand–Held is the only peripheral device, it can be connected to either port. However, if connecting another peripheral device, there may be restrictions for the Metrologic port connection.

Note: These were recently tested on a Metrologic Voyager (Metrologic MS9540) and worked. However, each additional model needs to be verified.

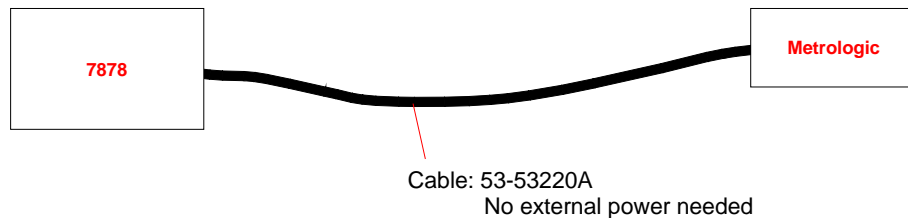






26775

Programming the Metrologic Hand–Held Scanner if Connected through the Auxiliary RS232 Port




Scan the following sequence of tags with the Metrologic Hand–Held Scanner. If the scanner encounters problems reading these tags, use the tags printed in the Metrologic Installation and User’s Guide:

<http://www.metrologic.com/corporate/products/pos/ms9520/>


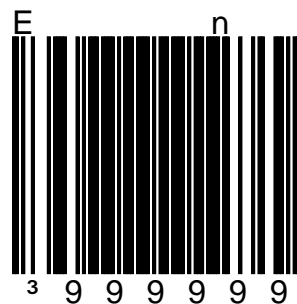


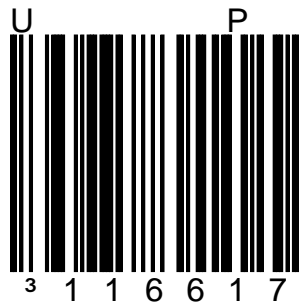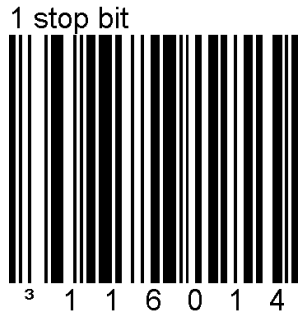
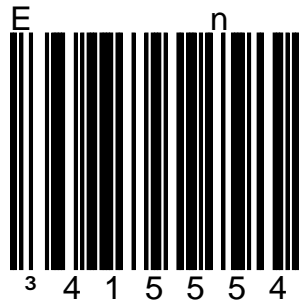
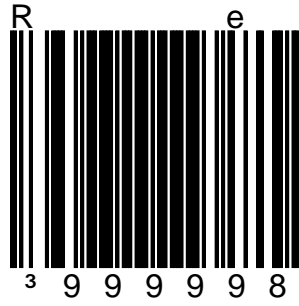


9600 Baud

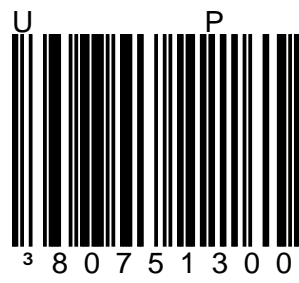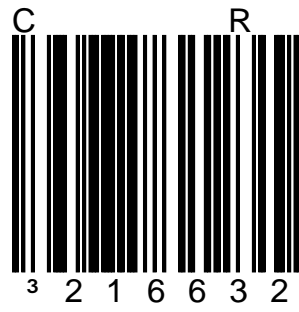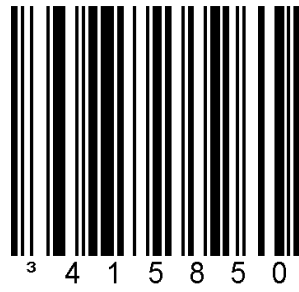

Transmit UPC-E check

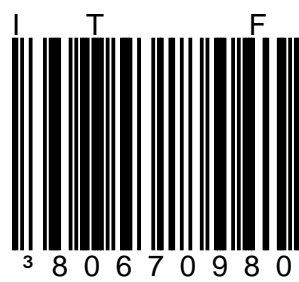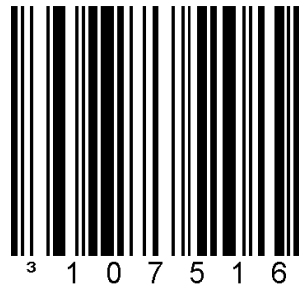

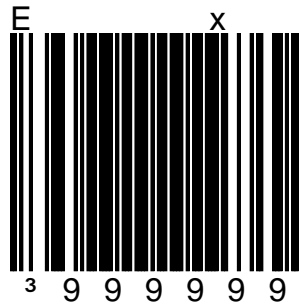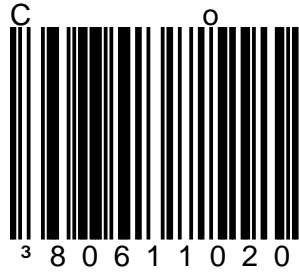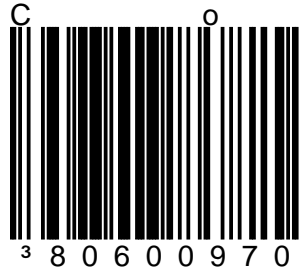

Programming the 7878

When installing a Metrologic Hand-Held Scanner, certain programming options must be set in the 7878. Program these options as follows.

There are four options that must be programmed on the 7878. Scan the following tags to set these options. These must be the first tags scanned after applying power to the 7878.

Hand-Held Processing

Selection	Programming Tag Sequence	Setting
Enable	Programming Mode, Hex 4, Hex 0, Hex1, Save and Reset	Required
Disable	Programming Mode, Hex 4, Hex 0, Hex0, Save and Reset	

Hand-Held Port Selection

Selection	Programming Tag Sequence	Setting
Port 1	Programming Mode, Hex 4, Hex 0, Hex 2, Save and Reset	Either
Port 2	Programming Mode, Hex 4, Hex 0, Hex 3, Save and Reset	Either

Hand-Held Beep on 7878

Selection	Programming Tag Sequence	Setting
Enable	Programming Mode, Hex 4, Hex 0, Hex 5, Save and Reset	Required
Disable	Programming Mode, Hex 4, Hex 0, Hex 4, Save and Reset	

Hand-Held Selection

Selection	Programming Tag Sequence	Setting
Enable	Programming Mode, Hex 5, Hex 5, Hex 1, Save and Reset	Required

NCR 2357, NCR 7837, and Hand-Held Products (Honeywell) Type Hand-Held Scanner


These instructions apply to all Hand-Held Products scanners, 2357, and 7837 models, including the 3800g and 4600 series imagers.

When connecting an NCR 2357 or NCR 7837 Hand-Held Scanner, certain programming options must be set on both the 7878 and the Handheld Scanner. These options are given as follows.

Programming Hand-Held Products Scanner when Connected through the Auxiliary RS232 Port

If the NCR 2357 or NCR 7837 Hand-Held Scanner (any model) is connected to the 7878 through the auxiliary RS232 port, program the Hand-Held Products Scanner by scanning the following bar codes in order. If a triple beep is emitted from the Hand-Held scanner, start over with the first bar code.

FACTORY DEFAULT



7837-1300 RS232 9600, 7, even, 1



Prefixes / Code 39 - a, Code 128 - f, Code 12of 5 - b



Default Data Format



7837-1300 UPC-A Prefix A



7837-1300 UPC-E Prefix E



7837-1300 EAN-13 Prefix F



7837-1300 EAN-8 Prefix FF



Matrix RTS/CTS Mode 3 Enable



Programming the 7878 when a Hand-Held Product Scanner is Connected through the Auxiliary RS 232 Port

There are four options that must be programmed on the 7878. Scan the following programming tags to set these options. These must be the first tags scanned after applying power to the 7878.

Hand-Held Processing

Selection	Programming Tag Sequence	Setting
Enable	Programming Mode, Hex 4, Hex 0, Hex1, Save and Reset	Required
Disable	Programming Mode, Hex 4, Hex 0, Hex0, Save and Reset	

Hand-Held Port Selection

Selection	Programming Tag Sequence	Setting
Port 1	Programming Mode, Hex 4, Hex 0, Hex 2, Save and Reset	Either
Port 2	Programming Mode, Hex 4, Hex 0, Hex 3, Save and Reset	Either

Hand-Held Beep on 7878

Selection	Programming Tag Sequence	Setting
Enable	Programming Mode, Hex 4, Hex 0, Hex 5, Save and Reset	Either
Disable	Programming Mode, Hex 4, Hex 0, Hex 4, Save and Reset	Either

Hand-Held Selection

Selection	Programming Tag Sequence	Setting
Enable	Programming Mode, Hex 5, Hex 5, Hex 1, Save and Reset	Required

Programming the NCR 2357 or NCR 7837 Hand-Held Scanner when Connected through the USB Peripheral Port

Prerequisites:


- Firmware Levels:
 - 7878, 497-0461765 – USB HH and USB HH pdf417.
- Programming:

Use the following programming sequence if you want to make the 7878 scanner beep whenever it receives a valid barcode data through the USB host terminal port (the 7878 scanner does not beep by default):

Selection	Programming Tag Sequence	Setting
Enable	Programming Mode, Hex 4, Hex 0, Hex 5, Save and Reset	Required
Disable	Programming Mode, Hex 4, Hex 0, Hex 4, Save and Reset	

If the NCR 2357 or NCR 7837 Hand-Held Scanner (any model) is connected to the 7878 through the USB peripheral port, program the Hand-Held Scanner by scanning the following bar codes in order.

Note: There is NO required programming necessary on the 7878 when a hand-held scanner is connected through the USB peripheral port.

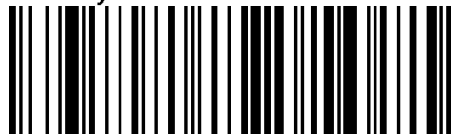Factory Default*IBM Hand-Held USB*

If it is desired to scan PDF 417 (2D) bar codes with the Hand-Held, you can enable the 7878 to allow the pass-through of the data without the 7878 itself having the capability to read that type of bar code.

The following programming sequence is only for USB-configured Hand-Helds:

Selection	Programming Tag Sequence	Setting
Enable	Programming Mode, Hex 7, Hex F, Hex 9, Save and Reset	
Disable	Programming Mode, Hex 7, Hex F, Hex 8, Save and Reset	Default

NCR 2356 and Symbol (Motorola) Type Hand-Held Scanner

For more information on connecting any 2356/ Symbol/ Motorola handheld scanner to any NCR bi-optic scanner, go to the Scanner website:


http://www5.ncr.com/support/support_drivers_patches.asp?Class=External/Peripherals/Scanner/2356/display_Symbol

You can find the instructions on connecting the RS232 AUX and USB Host through the Scanner website.

Chapter 4: Operation

The NCR 7878 requires very little attention during operation. It is designed to reduce the amount of barcode orientation prior to scanning an item. Most people become proficient in a very short time because of the bi-optic design and the PACESETTER functionality.

System Components

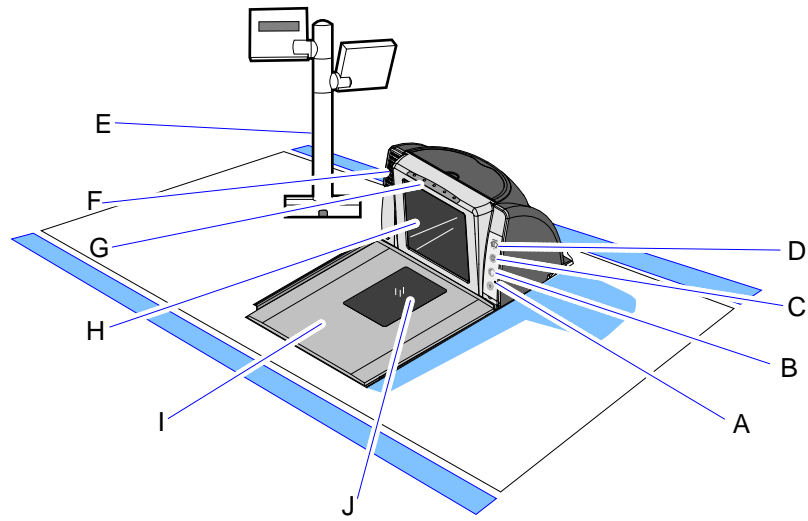

- | | |
|----------------------------|--------------------------------|
| A - Motion Detector | F - Speaker |
| B - Volume Adjust Button | G - Light Bar Status Indicator |
| C - Scale Zero Button | H - Vertical Scan Window |
| D - Clean Window Indicator | I - Top Plate |
| E - Remote Compact Display | J - Horizontal Scan Window |

Operator Display Panel

The Operator Display Panel provides the interface to the operator. It contains the Light Bar Status Indicator, Window Maintenance Indicator, Scale Zero button, Volume Adjust button, and Motion Detector.

Light Bar Status Indicator

The Light Bar Status Indicator's middle three LEDs turn dim green when the 7878 is ready to read a bar code. When the scanner reads a bar code, all five LEDs light up brightly for an instant. During power-up, if the unit goes into the Failure Mode, the Light Bar Status Indicator displays a distinct pattern of colors and number of lit LEDs to point to the probable scanner (or scale) error code that is used by the field engineer to repair the unit. Voice messages are used to indicate errors. The Light Bar Status Indicator generates one dimly-lit green LED in the center when the 7878 shuts down due to operator inactivity.

When using IBM-485 communications, the Light Bar Status Indicator slowly flashes a red-green-green pattern nine times, then delays, then repeats indefinitely when the 7878 does not detect the 12V TRMPWR voltage from the host terminal. It is still possible to successfully scan and weigh items with this light bar pattern displayed. Possible causes for this red-green-green indication may be on of the following:


- Host terminal is not turned on.
- Interface cable is not connected between the host terminal and scanner.
- IBM port 9x being used by the scanner is not generating the 12V TRMPWR signal.
- Rarely, there could be an issue with the scanner digital board not detecting the 12V coming from the host terminal.

Other interfaces can also disable the scanner under software control, resulting in all five LEDs on the Light Bar indicator turning dim RED.

When the scanner is disabled, no bar codes can be read.

Window Maintenance Indicator

The 7878 has a Window Maintenance Indicator light located on the Operator Display Panel. A picture of a wiper in a wiping motion identifies the Window Maintenance light.

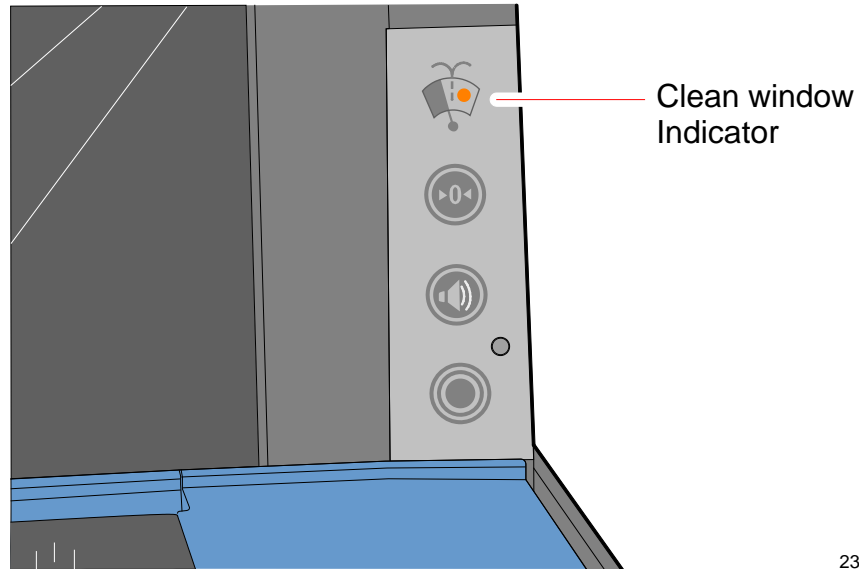


23761

This orange light, when flashing, indicates that the Top Plate window has become dirty and needs to be cleaned for optimum scanner performance. It is also occasionally necessary to clean the window located under the Top Plate to remove loose debris or dust. This indicator light may also come on if the glass has excessive scratches.

Scale Zero Button

The Scale Zero button is located on the Operator Display Panel of 7878 models that include a scale.

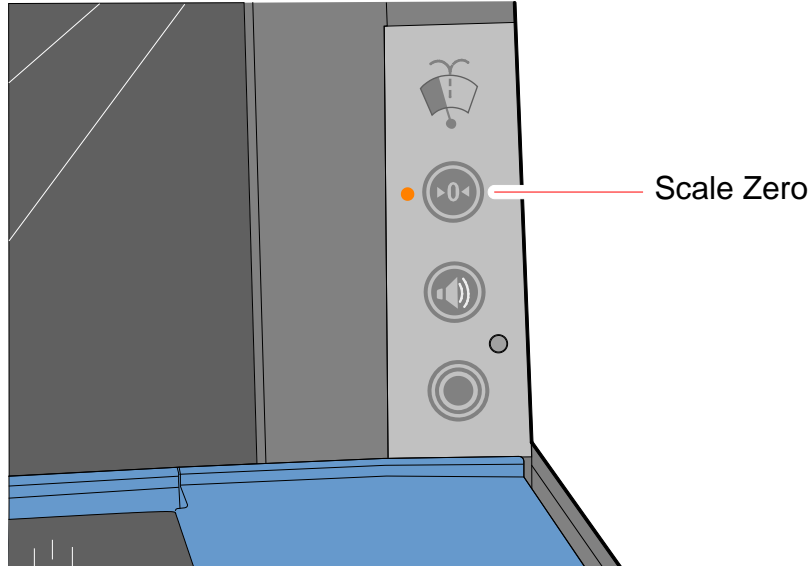


23760

Note: 7878 Scanner Only models have a blank plate where the Scale Zero button would be if the scale was installed.

Volume Adjust Button

The 7878 has a Volume Adjust button located on the Operator Display Panel. A picture of a speaker emitting sound waves identifies the Volume Adjust button.

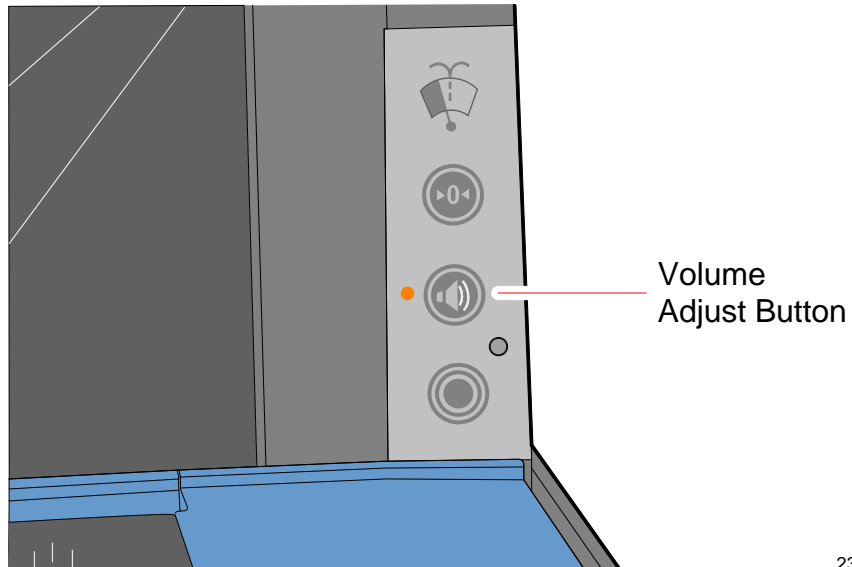


23759

The Volume Adjust button permits the operator to change the scanner's Good Read Tone Volume to a comfortable level depending on the ambient noise level at that time.

Each time the button is momentarily pressed, the Good Read Tone changes its volume and sounds a Good Read Tone using the new setting. Repeatedly pressing the Volume Adjust button increases the volume to the maximum setting and then repeats the cycle from minimum back up to maximum. However, the scanner reverts to the programmed volume setting on each power-up.

Note: Permanent changes to tone volume require changing the program. Refer to chapter 5 for more information.


Manual Deactivation Button

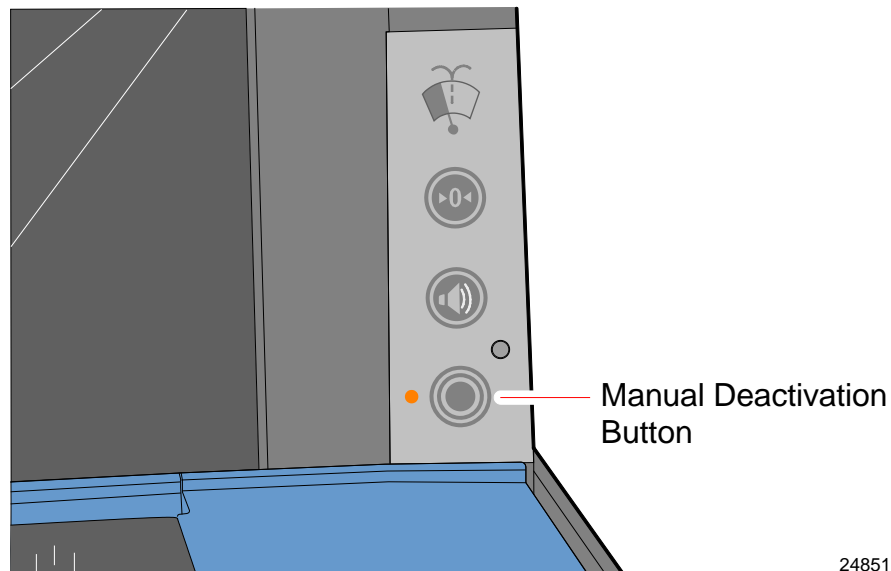

24851

The Manual Deactivation Button permits the user to disable scanning and enable the Sensormatic deactivator for three seconds with each touch of the tone volume button on the scanner display panel. It also turns off the scanner laser to prevent reading the item bar code a second time. If the tone volume increases when the button is first pressed, the function is disabled. If the tone volume does not increase when the button is first pressed, the function is enabled and the scanner will not scan for three seconds following the button depression. If the button is pressed and the EAS system is malfunctioning, then the scanner voice prompt will say "EAS-OFFLINE".

Motion Detector

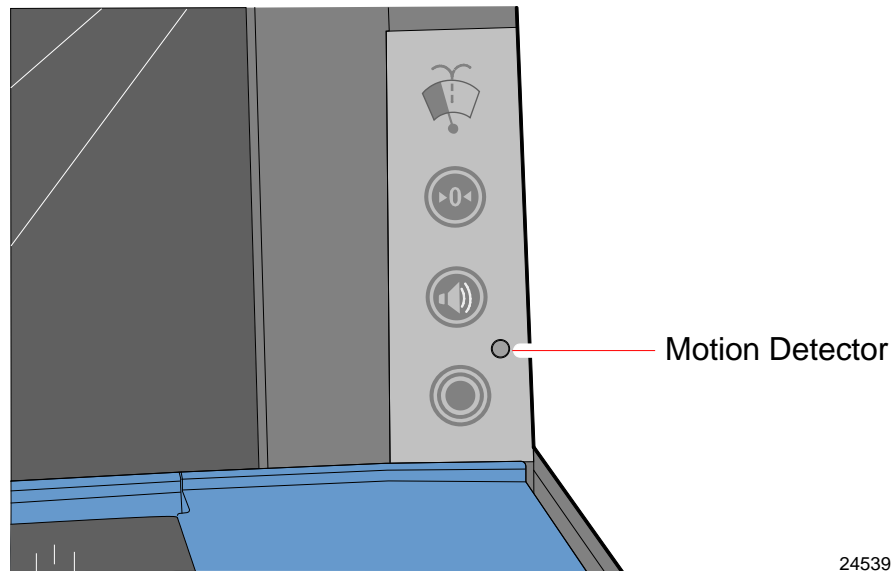

24539

The Motion Detector is located at the lower portion of the Operator Display Panel. The laser diodes and spinner motors turn off after an extended period of time of an operator activity. This prolongs the life of the 7878. The default non-active time is fifteen (15) minutes, but can be increased by programming. An item passing in front of the Motion Detector causes the 7878 to turn on. This movement is the normal item scanning movement.

Remote Compact Display

Normally, the scale automatically re-zeros itself when there is no weight on the Top Plate. If the RealScan 25 Remote Compact Display (if fitted) is blank or indicates a weight other than zero, yet no weight is currently on the scale, pressing the Scale Zero button re-zeros the scale.

If "Error Code 5 — " displays on the RealScan 25 Remote Compact Display, remove any weight from the scale and press the **Scale Zero** button. If the error code persists, thoroughly clean the area under the Top Plate and try again before calling service.

Note: Refer to chapter 6 for other error codes and the steps to resolve these errors.

The RealScan 25 Remote Compact Display is used with scale units to display weight and scale status information. It connects to the back of the 7878 with a cable.

The display is also used to display error codes that indicate specific scale failures. When an error code is displayed, the scale does not operate until the error is corrected.

During scale calibration, certain messages are displayed on the remote display which provides guidance through the calibration procedure. Inspection audit trail information relating to calibration changes are also displayed when the Scale Zero button is pressed and held.

Light Bar LED Scanner State Indicators

	Scanner State	LED color	Brightness	Activity	Number of LEDs
Scan	Idle (Enabled)	Green	Dim	Solid	3 Center
	Enabled and in Sleep Mode	Green	Dim	Solid	1 Center LED
	Good Scan	Green	Bright	Solid	5 LEDs
	Disabled and Awake	Red	Bright	Solid	5 LEDs
	Disabled and in Sleep Mode	Red	Dim	Solid	1 Center LED
	Sleep Mode	Green	Dim	Solid	1 Center LED
EAS	EAS Deactivated	Orange	Bright	Flash	5 LEDs
	ScanMaxPro Box – online	Orange	Dim	Solid	1 Button
	ScanMaxPro Box – online to offline	Orange	Dim	Flash (double flash, pause, double flash)	1 Button
Scale	At zero (stable)	Orange	Dim	Solid	1 Button
	Unstable with weight			OFF	
	Stable with weight	Orange	Bright	Solid	1 Button
	Underzero weight (stable)	Orange	Off/Bright	Flashing	1 Button
Clean Window	Dirty Window	Orange	Off/Bright	Flashing	1 LED
	Clean Window			OFF	
Volume	Volume Adjust	Orange	Bright	Solid	1 LED
	Tone Adjust	Orange	Bright	Solid	1 LED
	Idle			OFF	
Manual Deactivation	Manual deactivation	Orange	Dim	Solid	1 LED

Speaker

A tone can be programmed to sound when the 7878 accurately reads a barcode. The tone provides a means of determining a good read without having to observe the Status Indicator.

The Good Read Tone can be enabled or disabled through programming. If the tone is enabled, its frequency, volume, and duration can be specified. The details for programming the tone are described in *Programming* chapter. The 7878 factory default has the tone enabled. To adjust the Good Read Tone volume temporarily, use the Volume Adjust button.

If voice is enabled, audible voice messages may be heard during the following events:

- When the scanner/scale goes online or offline, from Sensormatic®
- When the Communications Protocol is checked
- When item tags are tested using PACESETTER
- When certain error conditions occur
- When there is interference with the scale
- Generally during diagnostics, programming with tags and during power-on wellness check

Vertical Scan Window

The 7878 Vertical Scan Window is mounted in the tower cabinet that rises above the checkstand surface. This scan window provides a vertical scan pattern. The tower is designated to withstand occasional impact from elbows and purses.

Top Plate

The stainless steel Top Plate contains the Horizontal Scan Window. Items being scanned are slid from the checkstand, across the Top Plate, and back onto the checkstand. The Top Plate also provides a surface for placing new items when weighing them.

Occasionally, dirt and debris can collect under the Top Plate, causing weighing problems. The Top Plate can be easily removed to clean these obstructions.

Horizontal Scan Window

The 7878 Horizontal Scan Window is flush-mounted in the stainless steel Top Plate. A scratch-proof window is provided. This window displays the horizontal scan pattern.


The flush-mounted Horizontal Scan Window permits users to slide a product across the Top Plate without lifting the product.

Label Orientation

Because the 7878 produces an omni-directional scan pattern, barcode labels can be read from many different angles. The 7878 reads the labels on the leading side of a package, the trailing side, the bottom side, the top side, the side opposite the operator, and the side next to the operator. Products can be read from right to left or from left to right.


Active Scan Zone

The active scan zone is the area where the unit can read a barcode label. Dashed lines in the illustrations indicate this area. The illustration on the right shows the scan zone for the leading, trailing, bottom, and the back (opposite the operator) sides. The illustration on the left shows the top-down zone where the unit can read the top of an item and the front-up zone where the unit can read the front of an item.

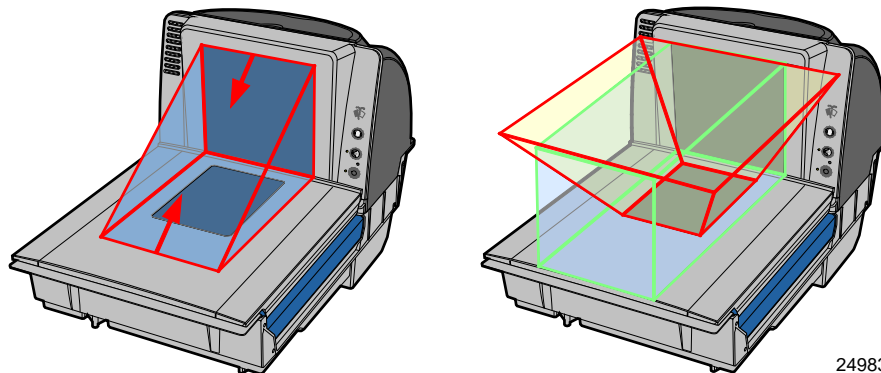

Barcode Quality

Many labels in a typical retail environment are unreadable. The illustration shows some of the common problems. Vendors and printers regularly supply products to the market with barcodes that are overprinted, underprinted, or truncated. Some labels have missing margins. Others may be printed around the corners of packages, or on media not likely to remain flat when picked up.

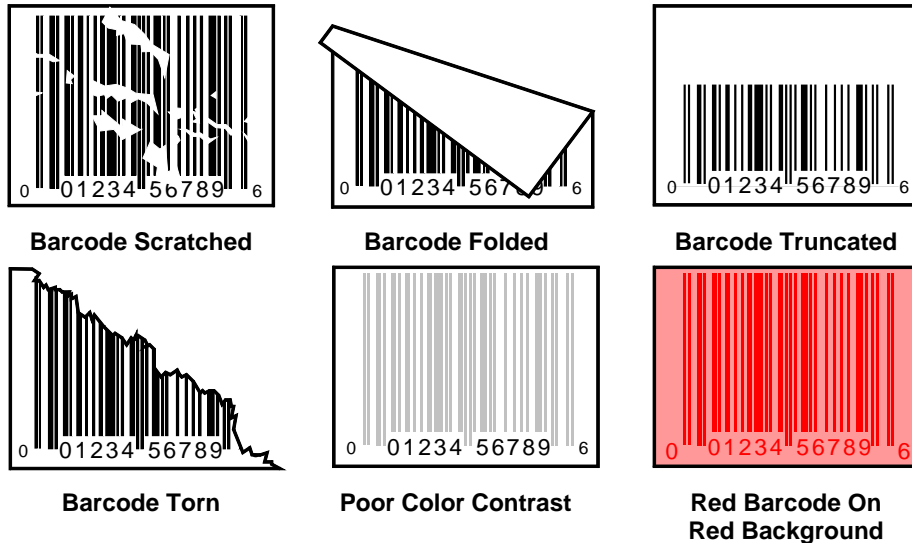

R0026

The readability of a label depends on variables such as size, placement, color, paper type, ink viscosity, and package coatings. The middle of a printing run can yield erroneous labels due to the many variants involved. In particular, poor color contrast and marginal print quality can make a label hard to read.

A label should be considered readable if it meets or exceeds the requirements set forth in ANSI X3.182 and ISO 15416.

Multiple Reads

Only one good read is reported if a barcode label is placed on the scanner window and left there. The scanner firmware inhibits a second read of the same label if it occurs within a preset time of a good read. The preset time is programmable from 350 ms to 450 ms, then 450 ms to 1500 ms—in increments of 150 ms. The unit is set at 900 ms when shipped from the factory. To read the label a second time, remove the label from the scan window and scan the label again when the time-out period has elapsed.

Operating Instructions

The 7878 is extremely easy to operate. However, there are certain functions and procedures that the operator needs to understand in order to be proficient at operating the 7878.

Turning the 7878 Scanner On and Off

The 7878 does not have an ON/OFF switch. The checkout counter must have a circuit breaker switch that is accessible and located near the operator. Turn on the 7878 by turning the circuit breaker switch ON. To turn off the 7878, turn the circuit breaker switch to OFF.

When power is supplied to the 7878, it performs specific diagnostics that check various components. If a scale error occurs during these diagnostics, an error code displays on the RealScan 25 Remote Compact Display. If a scanner error occurs during these diagnostics, an error code tone sounds and the Light Bar flashes an error code. Call a supervisor, the Service Company, or NCR for assistance.


Scanner/Scale Model

When power is applied, the Light Bar LEDs light up and all segments on the display are turned on for five (5) seconds. Momentarily, the Status Indicator flashes red, a tone sounds, and the RealScan 25 Remote Customer Display reads 0.000 kg or 0.00 lb. The Status Indicator then turns green and the 7878 is ready to use.

Scanner Only Model

When power is applied, the Light Bar LEDs light up and a tone sounds. The Light Bar's 3 center LEDs then turns green and the 7878 is ready to use.

Scanning Procedure

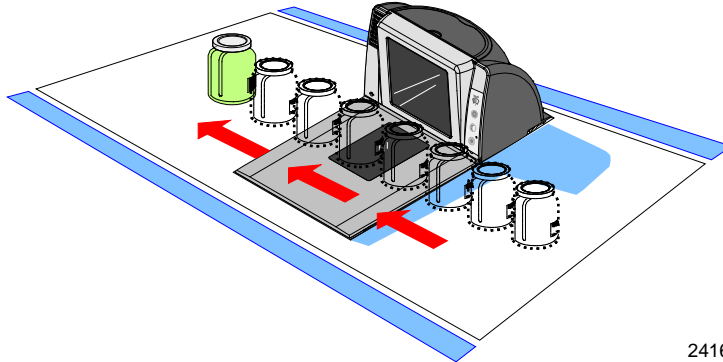


24168

To scan items with the NCR 7878, use the following procedure.

1. Verify the scanner is ready (Light Bar's 3 center LEDs are green).
2. Pass the item across the 7878 lower window. Slide the item from the checkstand, across the Top Plate, and back onto the checkstand.
3. If a good read occurs, the Light Bar flashes green (5 LEDs) and a tone is emitted (if programmed).

If the Light Bar does not flash, the 7878 did not read the barcode label. Try to orient the label and scan the item again. If this does not work after two (2) more tries, manually enter information for the item. Then continue to scan.

Weighing Procedure

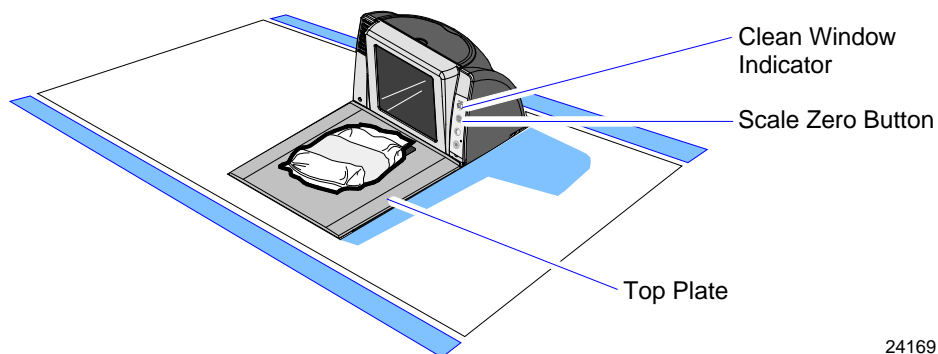

24169

Weigh items using the following procedure.

1. Verify the display reads 0.000 kg (0.00 lb).

Note: If 0.000 kg (0.00 lb) is not displayed, reset the scale by pressing the **Scale Zero** button. If this does not work, turn the scanner circuit breaker **OFF** and then **ON**.

2. Pick up the item and place it in the center of the Top Plate.
Note: Make sure the item does not overhang. Whatever is weighed must fit fully on the Top Plate.
3. Press the “weight request key” (for example, “4 0 1 1 [PLU]”) on the host terminal. The weight is communicated to the host terminal.

The following are possible responses after weighing an item:

- If enabled through programming, a Good Tone is emitted to indicate transmission of a stable, non-zero weight.
- If a bad weigh occurs, weigh the package again (Refer to Step 2.)
- If the Light Bar displays an error code, remove the item from the Top Plate. Then remove the Top Plate and check for debris under it. If there is debris, clean it. Replace the Top Plate, and then press the **Scale Zero** button to reset the scale.
- Wait for the *0.000 kg (0.00 lb)* message to be displayed. When it is displayed, weigh the item again.

Note: If the Light Bar still displays an error code, contact a supervisor, the Service Company, or NCR Customer Services.

Sensormatic® Security Tag Deactivation Procedure

Normal Operation

The operating procedures can vary according to the parameter settings. The following procedure assumes the Sensormatic® parameters are set to the following values.

- Security tag deactivation function is enabled
- Security tag deactivated tone is enabled
- Security tag detected tone is enabled

Following this procedure assumes the 7878 and the Sensormatic® ScanMax™ Pro Controller are turned on and functioning properly.

1. Pass an item across the scanner.

Note: As the barcode goes through the scan zone, the 7878 reads it.

Note: As the security tag goes through the Sensormatic® Deactivation zone, the Sensormatic® system deactivates the security tag and the deactivation tone is produced by the scanner. If the security tag is not deactivated, a clicking tone is generated.

2. Place the item against the gray label (area above the deactivation coil). The clicking tone stops when the security tag is deactivated.

The security tag must be detected by the Sensormatic® system before the Scan Enable Timer expires or it is not deactivated even when it does come into the deactivation zone. In this case, the Security tag Detected Tone sounds while the tag is in the deactivation zone. The sound is a rapid clicking. When this condition occurs, the security tag must be deactivated manually.

Manual Deactivation

If for some reason the security tag is not deactivated through normal operation, it can be deactivated manually. This usually occurs when too much time elapses after the 7878 reads the barcode. There are two ways to initiate a manual security tag deactivation.

- Press the Manual Deactivation Button on the 7878. The 7878 laser light turns off, disabling the scanner.
- Pass the Security Tag into the deactivation zone. The Security Tag Detected Tone sounds (a rapid clicking) and the tag is deactivated and the deactivation tone is heard. If the deactivation tone is heard first, the detection tone will not be heard if the EAS tag is deactivated.

Note: The laser light is turned off for manual deactivation to keep the scanner from reading the barcode a second time.

Adjusting the Good Read Tone

The 7878 has a Volume Adjust button that permits the operator to change the scanner's Good Read Tone Volume to a comfortable level depending on the ambient noise level at that time.

Each time the button is momentarily pressed, the Good Read Tone changes its volume and sounds a Good Read Tone using the new setting. Repeatedly pressing the Volume Adjust button increases the volume to the maximum setting and then repeats the cycle from minimum back up to maximum. However, the scanner reverts to the programmed volume setting on each power-up.

See also "Volume Adjust Button" section in this chapter.

Permanent changes to tone length, tone volume, and tone frequency require changes through programming. To adjust the tone length, volume, or frequency, refer to the following table:

Settings	Programming steps	Expected Behavior
Increment Good Tone Length	Repeatedly scan/enter the programming sequence Programming Mode, Hex 1, Hex 1, Hex C, Save & Reset until the desired tone length is achieved.	Scanner tone length changes from max to min or vice versa.

Settings	Programming steps	Expected Behavior
Increment Good Tone Volume	Repeatedly scan/enter the programming sequence Programming Mode, Hex 1, Hex 1, Hex D, Save & Reset until the desired tone volume is achieved.	Scanner tone volume changes from max to min or vice versa.
Increment Good Tone Frequency	Repeatedly scan/enter programming sequence Programming Mode, Hex 1, Hex 1, Hex B, Save & Reset until the desired tone frequency is achieved.	Scanner tone frequency changes from max to min or vice versa.

Not-On-File Error

The Not-On-File feature is available on the 7878 only if the host terminal has this capability. If a barcode label is not in the price lookup file, a special tone sounds six (6) times within a second and the Light Bar LEDs are solid red. The volume of the Not-On-File tone is programmable.

The 7878 is disabled from reading additional tags until the error is cleared. To clear, press the host terminal **CLEAR** key and manually enter the item and price.

Cleaning Instructions

The 7878 should be kept in good operating condition by performing the following routine maintenance. Keeping the scan windows clean helps keep the read rate exceptionally high. During normal operation of the 7878, the Horizontal Scan Window gets dirty. If dirt is permitted to accumulate, performance degrades to the point where the scanner can no longer read barcodes. The Horizontal Scan Window should be cleaned at least once a day.

Note: Before cleaning the 7878, be sure to turn the circuit breaker switch OFF.

Note: When cleaning the 7878, do not spray or pour the cleaning agent directly onto the 7878. Moisten a soft cloth with the cleaning agent, and then wipe the components.

Scanner Body

Clean the scanner body using the following.

- Soft cloth dampened by lukewarm water and mild soap.
- Soft, dry cloth to wipe the surface dry.

Clean the scanner body using the damp cloth first, followed by the dry cloth to finish.

Vertical Scan Window

Clean the Vertical Scan Window with a soft cloth dampened with a common, non-abrasive, liquid window cleaner.

Top Plate and Horizontal Scan Window

1. Remove the Top Plate with the Horizontal Scan Window glass using a soft cloth moistened with a common, non-abrasive, liquid window cleaner.
2. Clean the plastic cover that is under the Top Plate (and the window with it) by wiping the surfaces with a soft, dry cloth.

Note: Be sure to remove any debris that may be accumulated on this plastic cover. This is especially important if the unit contains a scale.

3. Replace the Top Plate.

Chapter 5: Programming

The 7878 can be programmed to meet most installation requirements. This includes communications with the host terminal and various 7878 features and functions.

Programming Description

The 7878 can be remotely programmed from its attached host terminal with no local intervention. To achieve this, special host terminal software must be purchased from NCR. This section describes programming a scanner with special barcode tags.

Programming the 7878 consists of setting programming parameters to match specific needs. This is accomplished by scanning a specific sequence of programming tags. The factory sets most programming parameters to default values or values originally specified. In most installations, few, if any, programming changes need to be made.

Creating the Program

Creating a program consists of three basic steps. Details of these steps are given in various areas of this programming information.

Write the Program

1. *Identify requirements.* The first thing is to determine the requirements of the 7878 installation. This includes information about the communications protocol, the types of barcodes to be scanned, the use of good read tones, and scanner time-outs.

Note: NCR does not control or specify the NCR scanner configuration required to support specific Host Terminal Software unless you are using NCR Host Terminal Software. You should consult with your Host Terminal Software vendor or reseller to determine the correct configuration for your NCR scanner.

2. *Complete the programming worksheets.* Using the descriptions contained in this document, complete each programming worksheet. Write the entries of the program in the space provided. Refer to the “Programming Worksheet” section in Chapter 5 for specific information about each parameter.


Enter the Program

1. *Enter the programming mode.* Scan the **Program Mode** tag. This must be the first tag scanned after supplying power to the 7878 (or the first tag after scanning the **Reset** tag).
2. *Enter the parameters for each specific program.* Scan the two **Hex** tags to select a specific program, and then enter all parameter data for it. After all the information has been entered, the 7878 returns to programming mode. Repeat this procedure for each specific program that needs to be changed.

Note: A specific program does not need to be entered if its associated programming is already correct.

Save the Program

1. *Scan the Save and Reset tag.* When the **Save and Reset** tag is scanned, the scanner saves all programming parameters entered. This becomes the new scanner program. The scanner goes through initial startup and operates using the new program.
2. *Save programming worksheets.* Be sure to save the programming worksheets that contain the scanner program. It is much easier to reenter the program, or change some of it, if a written record of the program exists.

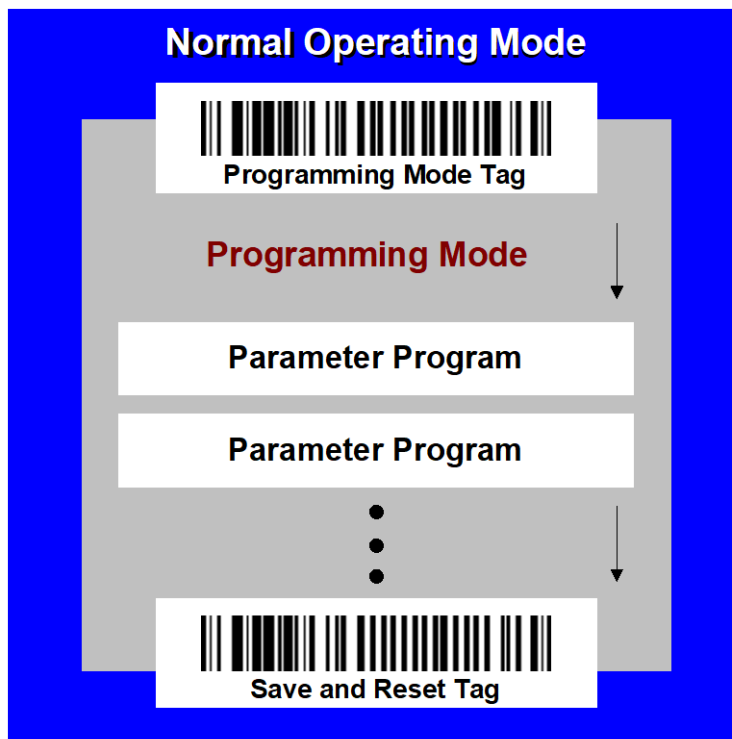

16402

Programming Tags

After completing the worksheets, enter the information using the special programming tags contained in the *NCR Scanner Programming Tags* (BST0–2121–74) available at <http://www.info.ncr.com/POSGenR>. (The tags are also included in Appendix A of this document.) A large number of special programming tags are not needed. There are only five (5) unique tags and sixteen (16) hexadecimal (Hex) character tags. The following identifies each programming tag, its function, and the associated indicators.

ABORT

Function–In Base Program Mode

If the **Abort** tag is scanned in the Base Program Mode, programming is terminated and previously entered parameters are not saved.

Indication–In Program Mode

- Light Bar Status indicator is initially 3 center LEDs dim green and then flashes bright green (5 LEDs) showing the tag was read. Scanner will reboot and perform power up sequence (the light bar turns off momentarily, then comes on with 5 bright blue LEDs followed by a gradual change to bright green, then back to normal state of the center three LEDs at dim green).
- Short beep as soon as tag is read—Good Read tone
- Motors stop momentarily while scanner reboots, then they come up to full speed

Function–In a Parameter Programming

If this tag is scanned in a Parameter Program sequence, only the parameter sequence which was aborted is not saved. Any prior sequence that successfully ended with the scanner saying "Program Mode" is saved and the 7878 stays in Program Mode.

Indication–In a Parameter Program

- Light Bar Status indicator flashes green (5 LEDs) once and then returns to 3 dim green LEDs in the center
- Short beep as soon as tag is read—Good Read tone
- Programming returns to Program Mode
- Scanner beeps to indicate it accepted the **Abort** tag, and then says "Program Mode"

DEFAULT

Function

This tag causes most parameters to reset to default values. However, scanning this tag does not change a few parameters, including the Communications Protocol. The **Default** tag must be scanned first after applying power to the 7878

Note: The **Default** tag is not used while in Programming Mode

Indication

- Speaks “Set new default parameter complete”, light bar will flash 5 LEDs bright green after speaking and beep once.
- Performs power-up sequence (the light bar turns off momentarily, then comes on with 5 bright blue LEDs followed by a gradual change to bright green, then back to normal state of the center three LEDs at dim green).

END

Function

This tag ends certain input sequences. Since the parameter program determines the end of most sequences, this tag is not used often.

Indication

- Light Bar Status indicator is initially 3 center LEDs dim green and then flashes bright green (5 LEDs) showing the tag was read.
- Short beep as soon as tag is read—Good Read tone.
- Scanner beeps to indicate it read the **End** tag, then it says “Program Mode” as it goes into Program Mode.

SPEAK BARCODES CURRENTLY ENABLED

Function

This barcode prompts the scanner to speak a list of the barcode symbologies that the scanner has been programmed to recognize and read.

Indication

- The three center LEDs in the Light Bar stay dim green.
- Scanner begins speaking as soon as barcode is scanned. It talks and lists all the barcodes currently enabled in the scanner.

Example: “UPC EAN is ON, Periodical P2 is ON...Periodical P5 is ON...Code 128 is ON.”

- Scanner beeps when it is done speaking the enabled symbologies.

SPEAK SCANNER SERIAL NUMBER

Function

This barcode enables the user to obtain the scanner Serial Number without having to remove the scanner from the checkstand (if installed) and look at the manufacturing name plate label on the back of the unit.

Indication

- The three center LEDs in the Light Bar light up bright green while it is speaking, then go back to dim green when it's done.
- As soon as the scanner reads the barcode, it says "Scanner S N" then speaks all 10 digits.
- If the scanner says "Scanner S N 0 0 0 0 0 0 0 0 0 0", then the actual serial number is NOT stored in memory.
- The scanner beeps when it is done speaking the serial number.

HEX 0–HEX F

Function

These sixteen (16) tags enter the selections for each of the parameters in the Parameter Programs. They also select the Parameter Program

Indication

- **Hex 0**—Scanner says "Zero" with no beeps. If voice disabled, scanner produces a short beep, different frequency from Good Read tone.
- **Hex 1 through Hex F**—Scanner says "<tag value>" with no beeps. If voice is disabled, the scanner produces a number of beeps according to the tag value. Multiples of 4 short beeps grouped together.

Example: Hex D Scanner says "D". If voice is disabled, Hex D is indicated by 12 short beeps (3 sets of 4) followed by 1 beep, for a total of 13.

PROGRAM MODE

Function

This tag sets the 7878 into Program Mode. It must be the first tag scanned after applying power to the 7878, or after scanning the **Default** tag or the **Reset** tag.

Indication

- Light Bar Status indicator is initially 3 center LEDs dim green and then flashes bright green (5 LEDs) showing the tag was read.
- The scanner says “Program Mode” with no beeps.
- If Voice NOT enabled, Short beep, long beep, short beep—indicates Program Mode

SAVE AND RESET

Function

This tag instructs the 7878 to save and start using the programming data. It is used in the Program Mode.

Indication


- Light Bar LEDs flashes five LEDs red twice, then Scanner will reboot and perform power up sequence (the light bar turns off momentarily, then comes on with 5 bright blue LEDs followed by a gradual change to bright green, then back to normal state of the center three LEDs at dim green).
- Short beep as soon as tag is read—Good Read tone
- Motors stop momentarily while scanner reboots, then they come up to full speed.
- One beep when the scanner has completed power cycling.
- Reboots with no voice.

Program Entry Procedure

Enter All Parameters

To enter all parameters in a Parameter Program, scan the two Hex codes that set the 7878 in the Parameter Program, and then make parameter changes in the order described on the programming worksheet for that mode. When programming all parameters in a specific mode, proceed directly through the work sheet. When making a change in a parameter, the scanner proceeds to the next parameter to be changed or it goes back to Program Mode if the selection ends programming in that particular Parameter Program.

The following figure shows how to proceed through a Specific Programming Mode where all parameters are entered. It presents the Parameter Program for the Bar Codes 2 program parameters. The figure shows how to proceed through the Parameter Program by entering all available parameters. Notice that (in this example) if Code 39 barcodes are disabled, programming immediately returns to Program Mode. However, if Code 39 barcodes are enabled, the scanner directs the user to continue entering parameter information.

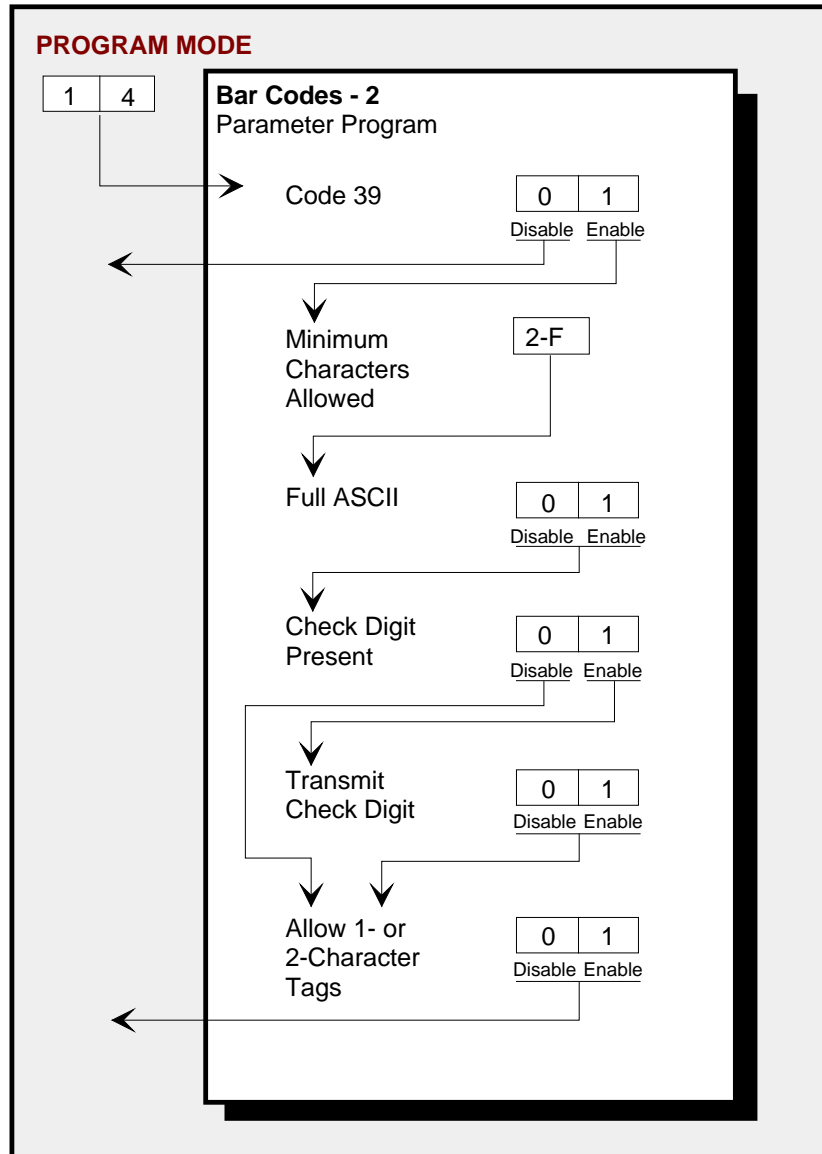

11722

Program Entry Procedure

The following example is a typical program entry procedure.


1. NCR's official recommendation is to disconnect from the host terminal while programming an NCR scanner. However, the reality is that configuring a scanner while connected to the host terminal is generally safe and successful, and there are cases where there is no choice but keep the scanner connected because it is being powered from the host terminal. But because of the wide variety of host terminal systems in the field, it is impossible to guarantee 100% success. If you experience problems or erratic behavior while programming a scanner connected to a host terminal, disconnect the scanner and try again.
2. Apply power to the 7878 (or scan the Reset tag).

3. Scan the Program Mode tag.
4. Scan the two Hex tags corresponding to the worksheet number.
5. Scan appropriate Hex tags to enter parameters.
6. Repeat steps 4 and 5 until all the parameters are entered.
7. Scan the Save and Reset tag. All parameter changes are saved and 7878 is reset (goes through initial power-up sequence). The 7878 now operates using the new program.

Enter Specific Parameters (Shortcut Method)

To enter only one specific parameter in a Parameter Program, scan the two *numbered* Hex tags that correspond to that Parameter Program. However, once the Parameter Program has been entered instead of immediately changing parameters with numbered Hex tags, use the *lettered* Hex tags to choose the one particular parameter to be changed. After the new parameter setting has been selected, the scanner immediately returns to Program Mode. If deciding to do additional programming with these parameter options, reenter the Parameter Program by scanning the two Hex tags again.

The following figure shows how to proceed through a Parameter Program where shortcuts are used to change only one of the parameters. This figure presents the Parameter Program for Bar Codes 2 program parameters. Notice that once the Parameter Program has been entered, if the **Hex A**, **Hex B**, **Hex C**, **Hex D**, **Hex E**, or **Hex F** tag is scanned, the specific parameters that correspond to that tag can be entered. After recording the parameters, the scanner immediately returns to Program Mode. To return to programming, scan the **Hex 1** and **Hex 4** tags again and reenter the Parameter Program. From this point, enter either all parameters or another specific parameter.

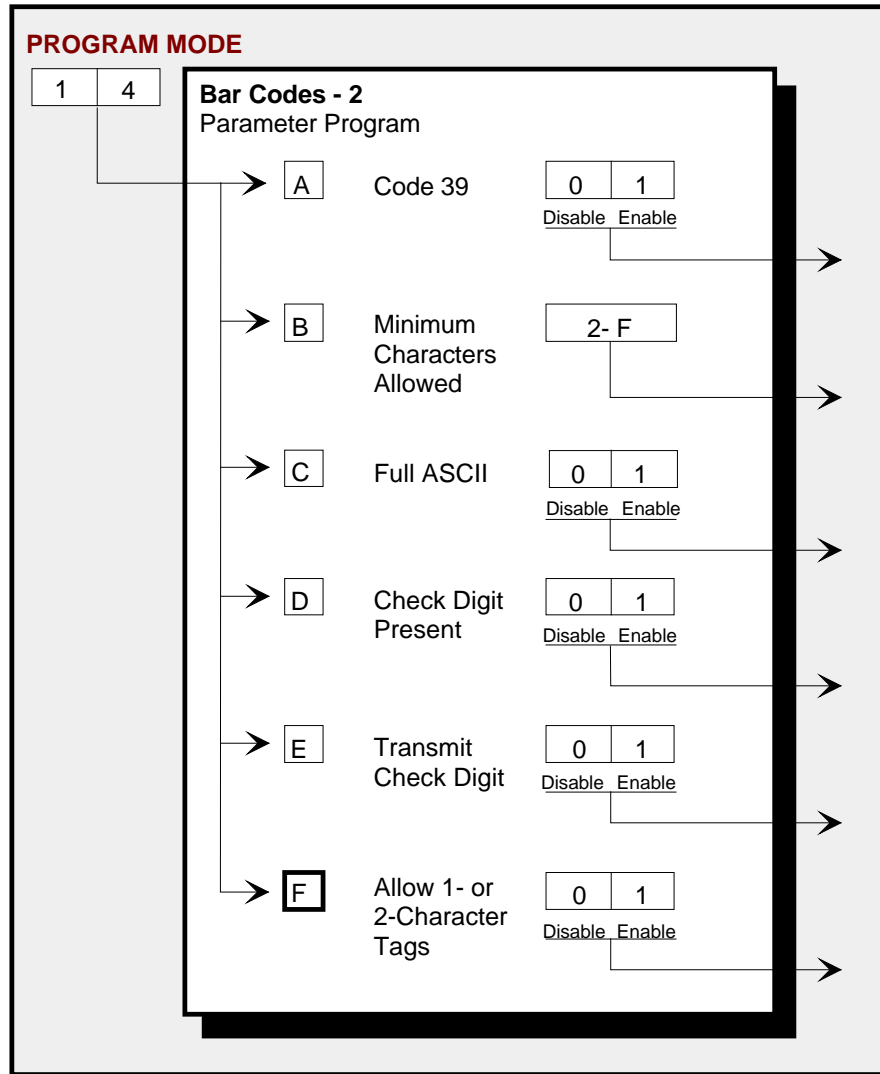

11723

Program Entry Procedure (Shortcut Method)

The following example is a typical program entry procedure.

1. NCR's official recommendation is to disconnect from the host terminal while programming an NCR scanner. However, the reality is that configuring a scanner while connected to the host terminal is generally safe and successful, and there are cases where there is no choice but keep the scanner connected because it is being powered from the host terminal. But because of the wide variety of host terminals in the field, it is impossible to guarantee 100% success. If you experience problems or erratic behavior while programming a scanner connected to a host terminal, disconnect the scanner and try again.
2. Apply power to the 7878 (or scan the **Reset** tag).
3. Scan the **Program Mode** tag.
4. Scan the two Hex tags corresponding to the worksheet number.

5. Scan specific parameter tag (**Hex A–F**).
6. Scan appropriate Hex tags to enter parameters.
7. Repeat steps 4 thru 6 until all the parameters are entered.
8. Scan the **Save and Reset** tag. All parameter changes are saved and 7878 is reset (goes through initial power-up sequence). The 7878 now operates using the new program.

Parameter Defaults

Programming Mode	Program Parameters	Default Setting
Communications Protocol	Protocol	No default value—remains as programmed
Good Read Tone	Tone On/Off	On
	Tone Frequency	702 Hertz
	Tone Length	45 ms
	Tone Volume	Third Lowest Volume
	Not-On-File Volume	Lowest Volume
Timers	Lockout Time	450 Milliseconds
	Restart Lockout Timer	On
	Active Time	15 Minutes
	900ms Lockout Timer Restart Limit	Off
Bar Codes–1	UPC/EAN	Enable
	Unused	Disable
	Extend UPC–A to EAN–13	Disable
	Extend UPC–E to UPC–A	Disable
	Periodical Codes	Disable
	Periodical Code Extension	No default value
	Send Data	Data As Decoded
Bar Codes–2	Set 2 or 3 Tag Label	No default value
	Code 39	Disable
	Minimum Characters Allowed	8
	Full ASCII	Disable

Programming Mode	Program Parameters	Default Setting
Bar Codes–2	Check Digit Present	Disable
	Transmit Check Digit	Disable
	Allow 1– or 2–Character Tags	Disable
	Code 39 Tone	Disable
	Tone Length	75 Milliseconds
	Tone Frequency	1071 Hertz
	Code 39 Halves Enable	Disable
	Code 39 Stitch Enable	Disable
	Code 39 Check Digit Length 1	0 0
	Code 39 Check Digit Length 2	0 0
	Code 39 Specific Length	0
	Code 39 Minimum Length	0 3
	Code 39 Maximum Length	3 6
	Scans Required	1 scan
	Overlap Characters	2
Minimum Segment Size	3	
Bar Codes–3	Interleaved 2 of 5	Disable
	Bar Code Length	Range Specific
	Value 1	0 8
	Value 2	1 6
	Check Digit Present	Disable
	Transmit Check Digit	Disable
	Interleaved 2 of 5 Tone	Disable
	Tone Length	75 Milliseconds
	Tone Frequency	1071 Hertz
	Interleaved 2 of 5 Check Digit Length 1	0 0
	Interleaved 2 of 5 Check Digit Length 2	0 0
	Scans Required	2 scans

Programming Mode	Program Parameters	Default Setting
Bar Codes–3	Overlap Characters	1
	Minimum Segment Size	3
Bar Codes–4	Code 128	Disable
	Minimum Data Character Allowed	3
	EAN/UCC 128	Disable
	Partial Decoding	Enable
	Code 128 Tone	Disable
	Tone Length	75 Milliseconds
	Tone Frequency	1071 Hertz
	Stitch Tag	Disable
	Scans Required	1 scan
	Overlap Characters	2
	Minimum Segment Size	4
	Bar Codes–5	GS1 DataBar Enable
Scan Required on GS1 DataBar–14		1 Scan
UCC–128 Emulation Mode		Normal Mode
Bar Codes–6	ISBN	Disable
	ISSN	Disable
Bar Codes–7	Pharmacode Decoding	Disable
	Pharmacode Check Digit Transmission	Enable
Bar Codes–8	Codabar Decoding	Disable
	Codabar Length Range Check	4–36
	Codabar Specific Length Check	4–36
	Codabar Check Digit	Disable
	Codabar Check Digit Transmission	Enable
	Codabar Tone Length	75 ms

Programming Mode	Program Parameters	Default Setting
Bar Codes–8	Codabar Tone Frequency	1071 Hz
	Codabar Tone	Disable
	Codabar Halves	Disable
	Codabar Stitch	Disable
	Codabar Require Start/Stop Match	Disable
	Codabar Require Quiet Zones	Disable
	Codabar Start/Stop Transmission	Enable
	Codabar Hard Correlation	Disable
	Number of Codabar Scans Required	1 Scan
Label Identifiers	Identifier Type	Default Prefix
	Common Byte 1	5 D
	Common Byte 2	4 2
Default identifiers for each bar code type are available under Program Parameter Descriptions/Label Identifiers section of this chapter.		
Additional Bar Codes Options	UPC Number System Character	Send
	UPC–E Number System Character	Send
	UPC–A Number System Character	Send
RS–232 Parameters–1	Baud Rate	9600
	Parity	Odd
	Stop Bits and Character Length	1 Stop Bit and 7–bit Length
	Hand Shake	RTS High, Wait For CTS
RS–232 Parameters–2	BCC Options	Disable—Scanner–Only models Enable—Scanner/Scale Models
	Interface Control	None

Programming Mode	Program Parameters	Default Setting
RS-232 Parameters-2	Check Digit	Enable UPC-A
		Enable EAN-8
		Enable EAN-13
		Disable UPC-E
RS-232 Prefix Byte	Prefix Byte	Disable
	ASCII Code	0 2
RS-232 Terminator Byte	Terminator Byte 1	Enable
	ASCII Code	0 3
	Terminator Byte 2	Disable
RS-232 Communications Options	Message Delay	10 ms Delay
	Scanner or Scanner/Scale Format	No default value
	Good Weigh Tone	Disable
Scale Parameters	Model Number	No default value
	IBM Address	Default logical scale address is 6E
Miscellaneous Parameters	Host Tone Control	Disable
	IBM Retransmit Control	3 times
	Enable/Disable Voice Messages	No default setting
	IBM-485 / IBM-USB Tag Data Format	Hex

Programming Tips

The following are some tips to help when programming the 7878.

- Turn the host terminal Off or disconnect all interface cables to the 7878 before entering the program. Some host terminals can corrupt the program if they are running and are connected to the 7878 while entering the program.
- To exit a Parameter Program without entering all the parameters, scan the **Abort** tag. Only the parameter sequence which was aborted is not saved. Any prior sequence that successfully ended with the scanner saying "Program Mode" is saved. To save the changed parameters, scan the **Save and Reset** tag.
- To exit programming mode without saving any parameter changes, scan the **Abort** tag while in Program Mode. The 7878 goes through initial startup and operates using the old program.
- If unknown how the 7878 is programmed, set all parameters to default values, then enter any required changes. Do this by scanning the **Default** tag first after applying power to the 7878. Next, scan the **Program Mode** tag to enter the Program Mode and enter the programming changes.

Note: Some parameters do not have default values and are not changed when the **Default** tag is scanned.

Program Parameter Descriptions

Within the Program Mode are several Parameter Programs. Each of these has specific programming parameters.

Communications Protocol

The Communications Protocol programming mode selects the protocol that the 7878 uses to communicate with the host terminal.

Note: The factory sets the Communications Protocol according to the specifications on the order. Since there is no default Communications Protocol; the **Default** tag does not change this parameter.

IBM Slot Scanner

All models of the 7878 support the IBM 468x/9x format and use the same protocol found on host terminals. The scanner uses any port number beginning with 9 or 5 (as in 9B or 5B) and the select address is set to 4B.

If the unit is a scanner/scale, the IBM address default setting is 6E, but can be programmed to 6A or 6B. The host terminal integrated scanner/scale driver normally uses address 6E. However, if the scanner works but the scale does not, try using the other two scale addresses.

IBM USB

The 7878 can communicate to the host terminal through a USB cable. This parameter enables the scanner to use IBM's proprietary version of HID-type USB protocol.

NCR (RS-232 USB)

The 7878 can communicate with the host terminal through a USB cable. This parameter enables the NCR (RS-232) format.

Note: Two programming tags must be scanned to enable this parameter: **Hex E** followed by **Hex 0**.

RS-232

RS-232 is used to connect the 7878 to almost any RS-232 type of communications device. This protocol uses 7-bit ASCII by default to send tag and scale data to the device.

Good Read Tone

The Good Read Tone programming mode selects the parameters for sounding a tone each time the 7878 successfully reads a barcode. It also controls the volume of the Not-On-File tone. This mode contains five shortcuts: A, B, C, D, and E. After entering this programming mode, proceed directly to a specific parameter by scanning the appropriate shortcut Hex tag. This eliminates the need to enter all parameters when only one needs changing. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

Tone On/Off

The **Hex A** tag selects the Tone On/Off programming parameter, which offers two options, On and Off. The **Hex 0** tag turns the Good Read Tone off and the **Hex 1** tag turns the Good Read Tone on.

Tone Frequency (Hertz)

The **Hex B** tag sets the frequency of the Good Read tone. Each time the **Hex B** tag is scanned, the tone increments one unit. After reaching the highest frequency, the sequence starts over with the lowest frequency. End this mode by scanning the **End** tag or another valid Hex tag.

The Good Read Tone frequency can have one of the following eight values:

- 702 Hz
- 781 Hz
- 868 Hz
- 961 Hz
- 1071 Hz
- 1187 Hz
- 570 Hz
- 633 Hz

Tone Length (Milliseconds)

The **Hex C** tag sets the length of the Good Read Tone. Each time the **Hex C** tag is scanned, the tone length changes from the shortest to the longest, and then back again. End this mode by scanning the **End** tag or another valid Hex tag.

The Good Read Tone length is from 15 ms to 225 ms in 15 ms increments (15 total values).

Tone Volume

The **Hex D** tag selects the volume of the Good Read tone by increasing it as the **Hex D** tag is repeatedly scanned. After the loudest volume is reached, the sequence begins again with the softest volume. End this mode by scanning the **End** tag or another valid Hex tag.

There are eight different volume settings available on the 7878. However, there is a programming sequence which allows the user to access eleven volumes. Refer to the Volume Adjust section in this chapter for details on activating the eleven volumes and other functions of the volume button.

Not-On-File Volume

The **Hex E** tag sets the volume of the Not-On-File tone by listening to it as the **Hex E** tag is repeatedly scanned. The new tone sounds for two seconds. End this mode by scanning the **End** tag or another valid Hex tag.

The Not-On-File tone goes off when the scanner receives a command from the host terminal to do so. In RS-232 protocol, there is a Not-On-File command. Refer to the *NCR Scanner/Scale Interface Programmer's Guide* (BD20-1074-A) for more information about the Not-On-File command.

Timers

The Timers programming mode controls the two 7878 timers: Lockout Time and Active Time. Refer to the "Parameter Defaults" section earlier in this chapter for the factory defined default value of each programming parameter.

Lockout Time

The lockout timer prevents the scanner from repeatedly reading the same barcode. After reading a barcode, it must be removed from the scan pattern and the time programmed in the lockout timer must elapse before the scanner can read the same barcode again. The Lockout Time parameter selects the lockout time.

There are 9 specific times ranging from 350 milliseconds to 1500 milliseconds. Select these times using the **Hex 0** through **Hex 8** tags.

Restart Lockout Timer

The Restart Lockout Timer parameter controls restarting the lockout timer each time the scanner reads the same barcode. Turning on the Restart Lockout Timer option has the following effect. If a barcode moves out of the scan pattern after being read and then back into the scan pattern before the lockout timer times out, the lockout timer restarts. The **Hex 0** tag turns off this option and the **Hex 1** tag turns it on.

Active Time

The specific lengths of time that the 7878 stays ON after the last good read can be programmed. There are four options in the Active Time parameter: no shut down, shut down after 15 minutes, shut down after 30 minutes, and shut after 60 minutes. Select these times using the **Hex 0** through **Hex 3** tags, respectively.

Note: NCR suggests that the Active Time parameter not be set to 0. This causes the laser lights to be ON all the time which reduces the life expectancy of the laser diodes.

900ms Lockout Timer Restart Limit

The 900ms Lockout Timer Restart Limit parameter is OFF by default. Scan **Hex 1** to enable 900ms Lockout Timer Restart Limit. If the 900ms Lockout Timer Restart Limit is ON then the Restart Lockout Timer is also ON (refer to the “Restart Lockout Timer” section in this chapter for more information). If an item moves in (and the tag is read), out, and then back in the scan zone, the firmware recognizes the barcode as the same barcode that it has already read. In this case, the Lockout Timer is restarted only if it has been on for less than 900ms.

Bar Codes-1

The Bar Codes-1 programming mode contains programming parameters for UPC/EAN barcodes. Refer to the “Parameter Defaults” earlier in this chapter for the factory defined default value of each programming parameter.

UPC/EAN

The UPC/EAN parameter controls reading UPC/EAN barcodes. Disable reading UPC/EAN bar codes by scanning the **Hex 0** tag and enable reading by scanning the **Hex 1** tag.

If reading UPC/EAN bar codes is disabled, there are no other entries allowed for this parameter. However, if reading UPC/EAN barcodes is enabled, the remaining parameters can be programmed.

Extend UPC-A to EAN-13

The Extend UPC-A to EAN-13 parameter determines whether to pad the tag data, changing 12-digit UPC tags to 13-Character EAN tags. The program does this by putting a zero (0) at the front of the tag data. Scan the **Hex 0** tag to disable this option or the **Hex 1** tag to enable it.

Extend UPC-E to UPC-A

The Extend UPC-E to UPC-A parameter determines whether to pad the tag data, changing 6-digit UPC tags to 12-digit UPC-A tags. Scan the **Hex 0** tag to disable this option or the **Hex 1** tag to enable it.

Add-On Bar Codes

The Add-On Bar Codes parameter controls the processing of Add-On Bar Codes. Disable Add-On Bar Codes by scanning the **Hex 0** tag and enable them by scanning the **Hex 1** tag.

If Add-On Bar Codes is disabled, there are no other entries allowed for this parameter. Scanning the **Hex 0** tag also causes the scanner to go back to the Program Mode. However, if Add-On Bar Codes is enabled, the Add-On Code Length and Send Data parameters must also be programmed.

Add-On Code Length

The Add-On Code Length parameter has three selections: 2-digit *Add-On only*, 5-digit *Add-On only*, and *either 2- or 5-digit Add-Ons*. Scan the **Hex 0** tag for 2-digit only, the **Hex 1** tag for 5-digit extension, or the **Hex 2** tag for both the 2- and 5-digit.

Send Data

Send Data parameter has only one option: *Data As Decoded*. If the **Hex 0** tag is scanned, the data is sent as decoded, whether or not there are extension digits.

Set 2 Tag Label

The Set 2 Tag Label parameter permits the scanner to read 2 tag specially-linked barcodes. This parameter has 2 selections: Enable and Disable. Scan **Hex 2** to enable this function or scan **Hex A** tag to disable it.

Bar Codes-2

The Bar Codes 2 programming mode contains programming parameters for Code 39. Refer to the "Parameter Defaults" section earlier in this chapter for the factory defined default value of each programming parameter.

Code 39

The Code 39 parameter controls reading Code 39 ("3 of 9") bar codes. Disable reading Code 39 bar codes by scanning the **Hex 0** tag and enable reading by scanning the **Hex 1** tag.

If reading Code 39 bar codes is disabled, there are no other entries permitted for this parameter.

Minimum Characters

The Minimum Characters Allowed parameter defines how many characters in a bar code must be read the same by two separate scans before determining a valid read has occurred. This option should be set to the number of characters in a typical tag which ensures that the scanner reads typical tags with at least two complete good scans before sending the tag data to the host terminal.

There are 14 selections for this parameter option (2 through 15 characters). Scan the proper Hex tag (**Hex 2** through **Hex F**). The default is 8 characters.

Note: 10 = **Hex A**, 11 = **Hex B**, 12 = **Hex C**...

Full ASCII

Code 39 permits full ASCII capability by encoding the additional characters. Disable this function by scanning the **Hex 0** tag, and scan the **Hex 1** tag to enable this function.

In this mode, the presence of a special character before an upper-case letter denotes that the character is lower-case.

Check Digit Present

The Check Digit Present parameter determines if the bar code must contain a correct check digit to be identified as valid. If this function is enabled, the bar code is ignored if a check digit is not present. Scan the **Hex 0** tag to disable this option, or the **Hex 1** tag to enable it.

Transmit Check Digit

The Transmit Check Digit parameter selects whether to send the check digit to the host terminal. Scan the **Hex 0** tag to disable this option, or the **Hex 1** tag to enable this option.

Allow 1- or 2-Character Tags

The Allow One- or Two-Character Tags parameter selects whether or not to permit the scanner to read a 1- or 2-character Code 39 label. If the host terminal software does not require that the scanner read a 1- or 2-character Code 39 label, scan the **Hex 0** tag to disable this option. If the host terminal software requires this capability, scan the **Hex 1** tag to enable it.

Note: Below are the parameters introduced in the new Super ASIC firmware versions—Programmed Firmware Chip (497-0443786) and Flash MEDIA (497-0443875).

Code 39 Tone

This parameter permits you to enable or disable the Code 39 tone. Scan **Hex 0** to disable the tone (default) or **Hex 1** to enable it. If disabled, the Code 39 tone is under control of the UPC tone control (general good read tone).

Tone Length

The Tone Length parameter permits you to set the length of the Code 39 tone. Set this parameter by scanning the appropriate Hex tag (**Hex 0 to Hex F**). Each Hex tag is incremented by 15 milliseconds. For example, **Hex 0** = 0 ms, **Hex 1** = 15 ms, **Hex 2** = 30 ms, **Hex 3** = 45 ms, and so forth. The default Code 39 Tone Length is 75 ms (**Hex 5**).

Tone Frequency

This parameter permits you to set the frequency of the Code 39 tone. Set this parameter by scanning the appropriate Hex tag (**Hex 0 to Hex 7**).

Hex Tag	Frequency in Hertz
Hex 0	702 Hz
Hex 1	781 Hz
Hex 2	868 Hz
Hex 3	961 Hz
Hex 4	1071 Hz
Hex 5	1187 Hz
Hex 6	570 Hz
Hex 7	633 Hz

Note: The default Code 39 tone frequency is 1071 Hertz (**Hex 4**).

Code 39 Halves Enable

This parameter attempts to build a Code 39 tag on the three longest tag lengths seen (tag lengths are saved in C39_Max_Scanned1, C39_Max_Scanned2, and C39_Max_Scanned3) as well as on any Code 39 tag length that contains a Code 39 check digit.

Code 39 Halves Enabled programming requires a *half tag* partial longer than one-half of the longest Code 39 tag ever seen by a scanner in order to prevent getting a short tag from a longer one.

Code 39 Stitch Enable

This parameter attempts to stitch a tag to the longest tag scanned by a full strike across the whole tag. This parameter includes the Stitching Code 39 Check Digit (C39_Stitch_CD_tags) option.

Code 39 Stitch Check Digit

This parameter permits tag lengths containing a Code 39 Check Digit to be *stitched* if Code 39 Stitch Enable is active.

Check Digit Length1 and Length2

These Check Digit lengths are programmed to permit specific length of Code 39 tag to require a Code 39 Check Digit. These can be any length in the range of 01–36 and are not required to be in the range of C39 Minimum Length and C39 Maximum Length programming.

Scans Required

This parameter sets the number of scans required to read a Code 39 bar code. Increasing the number of scans can improve reading nominal bar codes. There are four settings: 1 scan, 2 scans, 3 scans, and 4 scans. The default is 1 scan. Set this parameter by scanning the appropriate Hex tag (**Hex 1** to **Hex 4**).

Overlap Characters

This parameter sets the minimum number of characters which each segment must contain when tag stitching is done. There are four settings: 1 overlap character (**Hex 1**), 2 overlap characters (**Hex 2**) (default), 3 overlap characters (**Hex 3**), and 4 overlap characters (**Hex 4**). Set this parameter by scanning the appropriate Hex tag (**Hex 1** to **Hex 4**).

Minimum Segment Size

This parameter sets the minimum number of characters which each segment must contain when tag stitching is done. Set this parameter by scanning the appropriate Hex tag (**Hex 2** to **Hex 9**). The default is **Hex 3**.

Bar Codes–3

Note: Starting with the April 2005 Release of Super ASIC firmware (497–0439869), inputting an ODD or HEX number for tag length, whether inputting values for a Specific Length, Range of values, Minimum of Maximum value results in a Program Tag Error.

The Bar Codes 3 programming mode contains programming parameters for Interleaved 2 of 5 (“ITF” or “I 2 of 5”). Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

Interleaved 2 of 5

The Interleaved 2 of 5 parameter controls reading Interleaved 2 of 5 bar codes. Disable reading Interleaved 2 of 5 bar codes by scanning the **Hex 0** tag and enable reading by scanning the **Hex 1** tag.

Note: If reading Interleaved 2 of 5 bar codes is disabled, there are no other entries allowed for this parameter.

Bar Code Length

The Bar Code Length parameter selects the method for determining if an Interleaved 2 of 5 bar code is a valid length. The Range Check method identifies a length range by specifying the minimum and maximum number of characters. The Specific Check method identifies two specific bar code lengths by specifying the number of characters in each. With this option, the number of characters in all Interleaved 2 of 5 bar codes must be one of the two numbers. Scan the **Hex 0** tag to use the Range Check method, scan the **Hex 1** tag to use the Specific Check method.

It is best not to use ITF if more than one length of bar code is used. The symbology has an inherent weakness where any scanner can see part of the bar code and think it is complete. The options below provide protection against this. From strongest protection to weakest protection they are:

- Specific length, same value as “Value 1” and “Value 2”
- Specific check, different values as Values 1 and 2
- Range Check

Value 1 and 2

The Value 1 and Value 2 parameters specify the valid Interleaved 2 of 5 bar code lengths. Use these options with the Bar Code Length parameter option described in Bar Code Length. If the Range Check method is selected, Value 1 specifies the minimum number of characters in a valid Interleaved 2 of 5 bar code and Value 2 specifies the maximum number of characters. If the Specific Check method is selected, Value 1 contains one specific number of characters and Value 2 contains another.

Accepted values for Value 1 and Value 2 are 04 to 58 readable characters. The number of readable characters must be an even number; if an odd number is specified, it returns a Program Tag Error. Each value is input using two Hex tags. The first can be **Hex 0** through **Hex 5** and the second can be **Hex 0** through **Hex 9**.

Check Digit Present

The Check Digit Present parameter determines if the bar code must contain a correct check digit to be identified as valid. If this function is enabled, the bar code is ignored if a check digit is not present. Scan the **Hex 0** tag to disable this option, or the **Hex 1** tag to enable it.

Transmit Check Digit

The Transmit Check Digit parameter selects whether to send the check digit to the host terminal. Scan the **Hex 0** tag to disable this option, or the **Hex 1** tag to enable it.

Note: Below are the parameters introduced in the new Super ASIC firmware versions—Programmed Firmware Chip (497-0443786) and Flash MEDIA (497-0443875).

Interleaved 2 of 5 Tone

This parameter permits you to enable or disable the Interleaved 2 of 5 tone. Scan **Hex 0** to disable the tone (default) or **Hex 1** to enable it. If disabled, the Interleaved 2 of 5 tone is under control of the UPC tone control (general good read tone).

Tone Length

The Tone Length parameter permits you to set the length of the Interleaved 2 of 5 tone. Set this parameter by scanning the appropriate Hex tag (**Hex 0 to Hex F**). Each Hex tag is incremented by 15 milliseconds. For example, **Hex 0** = 0 ms, **Hex 1** = 15 ms, **Hex 2** = 30 ms, **Hex 3** = 45 ms, and so forth. The default Interleaved 2 of 5 Tone Length is 75 ms (**Hex 5**).

Tone Frequency

This parameter permits you to set the frequency of the Interleaved 2 of 5 tone. Set this parameter by scanning the appropriate Hex tag (**Hex 0 to Hex 7**).

Hex Tag	Frequency in Hertz
Hex 0	702 Hz
Hex 1	781 Hz
Hex 2	868 Hz
Hex 3	961 Hz
Hex 4	1071 Hz
Hex 5	1187 Hz
Hex 6	570 Hz
Hex 7	633 Hz

Note: The default Interleaved 2 of 5 tone frequency is 1071 Hertz (**Hex 4**).

Interleaved 2 of 5 Check Digit Length1

Interleaved 2 of 5 Check Digit Length1 sets the number of data characters defining the tag length1 that requires a Check Digit. This tag length could be outside the normal *specific length* or *range* of tag lengths programming for Interleaved 2 of 5. This parameter permits Interleaved 2 of 5 tags of a certain length to have a Check Digit while other Interleaved 2 of 5 tag lengths may not require a Check Digit.

Interleaved 2 of 5 Check Digit Length2

Interleaved 2 of 5 Check Digit Length2 sets the number of data characters defining the tag length2 that requires a Check Digit. This tag length could be outside the normal *specific length* or *range* of tag lengths programming for Interleaved 2 of 5.

Enable Interleaved 2 of 5 Stitching

This parameter is only valid if the Interleaved 2 of 5 Specific Length is programmed as active. Scanning **Hex C** enables Interleaved 2 of 5 tag stitching. It is recommended that stitching be enabled only if one tag Interleaved 2 of 5 length is programmed. Scanning **Hex D** disables Interleaved 2 of 5 Tag Stitching.

Scans Required

This parameter sets the number of scans required to read an Interleaved 2 of 5 bar code. Increasing the number of scans can improve reading nominal bar codes. There are four settings: 1 scan, 2 scans, 3 scans, and 4 scans. The default is 2 scans. Set this parameter by scanning the appropriate Hex tag (**Hex 1 to Hex 4**).

Overlap Characters

This parameter sets the minimum number of characters which each segment must contain when tag stitching is done. There are four settings: 1 overlap character (**Hex 1**) (default), 2 overlap characters (**Hex 2**), 3 overlap characters (**Hex 3**), and 4 overlap characters (**Hex 4**). Set this parameter by scanning the appropriate Hex tag (**Hex 1 to Hex 4**).

Minimum Segment Size

This parameter sets the minimum number of characters which each segment must contain when tag stitching is done. Set this parameter by scanning the appropriate Hex tag (**Hex 2 to Hex 9**). The default is **Hex 3**.

Bar Codes-4

The Bar Codes 4 programming mode contains programming parameters for Code 128 bar codes. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

Code 128

The Code 128 parameter contains two selections: Disable and Enable. Disable reading Code 128 bar codes by scanning the **Hex 0** tag and enable reading by scanning the **Hex 1** tag.

Note: Below are the parameters introduced in the new Super ASIC firmware versions—Programmed Firmware Chip (497-0443786) and Flash MEDIA (497-0443875).

Code 128 Tone

This parameter permits you to enable or disable the Code 128 tone. Scan **Hex 0** to disable the tone (default) or **Hex 1** to enable it. If disabled, the Code 128 tone is under control of the UPC tone control (general good read tone).

Tone Length

The Tone Length parameter permits you to set the length of the Code 128 tone. Set this parameter by scanning the appropriate Hex tag (**Hex 0 to Hex F**). Each Hex tag is incremented by 15 milliseconds. For example, **Hex 0** = 0 ms, **Hex 1** = 15 ms, **Hex 2** = 30 ms, **Hex 3** = 45 ms, and so forth. The default Code 128 Tone Length is 75 ms (**Hex 5**).

Tone Frequency

This parameter permits you to set the frequency of the Code 128 tone. Set this parameter by scanning the appropriate Hex tag (**Hex 0 to Hex 7**).

Note: The default Code 128 tone frequency is 1071 Hertz (**Hex 4**).

Code 128 Stitch Enable

This parameter determines whether Code 128 tag stitching is enabled or disabled. Scan the **Hex C** to disable Code 128 Stitching (default) or **Hex D** to enable it.

Scans Required

This parameter sets the number of scans required to read a Code 128 bar code. Increasing the number of scans can improve reading nominal bar codes. There are four settings: 1 scan, 2 scans, 3 scans, and 4 scans. The default is 1 scan. Set this parameter by scanning the appropriate Hex tag (**Hex 1 to Hex 4**).

Overlap Characters

This parameter sets the minimum number of characters which each segment must contain when tag stitching is done. There are four settings: 1 overlap character (**Hex 1**), 2 overlap characters (**Hex 2**) (default), 3 overlap characters (**Hex 3**), and 4 overlap characters (**Hex 4**). Set this parameter by scanning the appropriate Hex tag (**Hex 1 to Hex 4**).

Minimum Segment Size

This parameter sets the minimum number of characters which each segment must contain when tag stitching is done. Set this parameter by scanning the appropriate Hex tag (**Hex 2 to Hex 9**). The default is **Hex 4**.

Bar Codes–5

The Bar Codes 5 programming mode contains programming parameters for GS1 DataBar bar codes. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

GS1 DataBar Enable

This parameter contains 4 selections. Disable reading GS1 DataBar bar codes by scanning the **Hex 0** programming tag.

- Reading either or both GS1 DataBar–14 and GS1 DataBar–E bar codes is enabled with this parameter.
- Read GS1 DataBar–14 only—Scan the Hex 1 programming tag
- Read GS1 DataBar–E only—Scan the Hex 2 programming tag
- Read both GS1 DataBar–14 and GS1 DataBar–E—Scan the Hex 3 programming tag

Scans Required on GS1 DataBar–14

This parameter sets the number of scans required to read a GS1 DataBar–14 bar code. Increasing the number of scans can improve reading nominal bar codes. There are four settings: 1 scan, 2 scans, 3 scans, and 4 scans. Set this parameter by scanning the appropriate programming tag, **Hex 1** through **Hex 4**.

Scans Required on GS1 DataBar–E

This parameter sets the number of scans required to read a GS1 DataBar–E bar code. Increasing the number of scans can improve reading nominal bar codes. There are four settings: 1 scan, 2 scans, 3 scans, and 4 scans. Set this parameter by scanning the appropriate programming tag, **Hex 1** through **Hex 4**.

UCC–128 Emulation Mode

The UCC–128 Emulation Mode refers to the Uniform Code Council Code 128 Data Formatted Start Code. Two choices are available for this parameter. Scan the **Hex 0** programming tag for normal mode or the **Hex 1** programming tag to enable UCC–128 Emulation.

GS1 DataBar Expanded Application Identifier Programming Options

There are situations where it may be desirable to disable certain DataBar Expanded Application Identifiers (AI) while enabling others. This may be due to the system software not being capable of handling certain DataBar Expanded tag data.

Following are examples of such scenarios and how the scanner can be programmed to enable or disable the scanning of specific DataBar AIs:

1. Assume the host terminal software is only capable of handling DataBar with AI of 8110 (coupons). To enable the scanning of DataBar AI 8110 but disable all other DataBar AIs, use the following programming:

Enable DataBar Expanded Program Mode, Hex 1, Hex 8, Hex A, Hex 2, Save and Reset	Enables DataBar Expanded decoding
Disable General DataBar Expanded Program Mode Hex 7, Hex 1, Hex F, Save and Reset	Disables all DataBar Expanded barcodes except AIs specifically enabled
Enable DataBar AI 8110 Program Mode, Hex 7, Hex 1, Hex 3, Save and Reset	Enables DataBar Expanded AI 8110 to scan

2. Assume host terminal software capable of handling general DataBar AIs except DataBar Coupon AI 8110. To disable the scanning of DataBar AI 8110 but enable other DataBar AI's, use the following programming:

Enable DataBar Expanded Program Mode, Hex 1, Hex 8, Hex A, Hex 2, Save and Reset	Enables DataBar Expanded decoding
Enable General DataBar Expanded Program Mode, Hex 7, Hex 1, Hex E, Save and Reset	Enables all DataBar Expanded barcodes except AIs specifically disabled
Disable DataBar AI 8110 Program Mode, Hex 7, Hex 1, Hex 1, Save and Reset	Disables DataBar Expanded AI 8110 from scanning

Other DataBar AIs can be substituted or added to the programming sequences in the examples above.

The following are all the other available programming options:

<p>Enable only DataBar Expanded Program Mode, Hex 1, Hex 8, Hex A, Hex 2, Save and Reset</p> <p>Enable Databar 14 and GS1 Databar Expanded Program Mode, Hex 1, Hex 8, Hex A, Hex 3, Save and Reset</p>	<p>Enables only DataBar Expanded decoding</p>
<p>Disable DataBar Expanded Program Mode, Hex 1, Hex A, Hex 8, Hex 1, Save and Reset</p> <p>Disable Databar 14 and GS1 Databar Expanded Program Mode, Hex 1, Hex 8, Hex A, Hex 0, Save and Reset</p>	<p>Disables all DataBar Expanded decoding only</p>
<p>Enable General DataBar Expanded Program Mode, Hex 7, Hex 1, Hex E, Save and Reset</p>	<p>Enables all DataBar Expanded except AIs specifically disabled (default)</p>
<p>Disable General DataBar Expanded Program Modes, Hex 7, Hex 1, Hex F, Save and Reset</p>	<p>Disables all DataBar Expanded except AIs specifically enabled</p>
<p>Specifically Enable DataBar AI 8110 Program Mode, Hex 7, Hex 1, Hex 3, Save and Reset</p> <p>Program Mode, Hex 7, Hex 1, Hex 2, Save and Reset</p>	<p>Set DataBar Expanded AI 8110 enable (default)</p>
<p>Specifically Disable DataBar AI 8110 Program Mode, Hex 7, Hex 1, Hex 1, Save and Reset</p> <p>Program Mode, Hex 7, Hex 1, Hex 0, Save and Reset</p>	<p>Set DataBar Expanded AI 8110 disable (default)</p>
<p>Specifically Enable DataBar AI 019x Program Mode, Hex 7, Hex 1, Hex 7, Save and Reset</p> <p>Program Mode, Hex 7, Hex 1, Hex 6, Save and Reset</p>	<p>Set DataBar Expanded AI 019x variable measure enable (default)</p>

Specifically Disable DataBar AI 019x	Set DataBar Expanded AI 019x variable measure disable (default)
Program Mode, Hex 7, Hex 1, Hex 5, Save and Reset.	
Program Mode, Hex 7, Hex 1, Hex 4, Save and Reset	

Bar Codes-6

International Standard Book Number (ISBN)

ISBN (International Standard Book Number) is a unique ten-digit number assigned to every printed book. These 13-digit numbers are used internationally.

As of January 1, 2007, all book and book-related products must carry 13-digit ISBNs. All 10-digit ISBNs in circulation will have the 3-digit EAN prefix "978" added (which currently represents the book industry). This 13-digit ISBN is already represented, and will be identical, to current EAN bar codes carrying ISBN with the "978" prefix. Every ISBN registered will automatically be converted to 13-digits. The EAN prefix "979" cannot be used on existing 10-digit ISBNs.

ISSN (International Standard Serial Number) is a unique eight-digit number assigned to all serial publications, including electronic ones. Serial publications include newspapers, newsletters, annual reports, yearbooks, directories, and journals. It is the publications' equivalent to the ISBN, and like the ISBN, these numbers are used internationally.

ISBN-10 and ISBN-13

An EAN-13 bar code having a prefix of 978 is considered as an ISBN-10 tag. With the ISBN feature enabled, this tag outputs the ISBN-10 equivalent instead of EAN-13.

An ISBN-13 is exactly the same as an EAN-13 tag. It may have a prefix of either 978 or 979. With the ISBN feature enabled, the ISBN tag with a prefix of 978 is sent in its ISBN-10 equivalent while the tag with the prefix of 979 is sent as an EAN-13. The default setting for this option is 2(Disabled).

ISSN

An EAN-13 tag with a prefix of 977 is an ISSN tag. With the ISSN feature enabled, scanning this tag automatically outputs the ISSN equivalent of the EAN-13 tag. The default setting for this option is 9 (Disabled).

Bar Codes–7

The Bar Codes 7 programming mode contains programming parameters for Pharmacode bar codes. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

Pharmacode Check Digit Transmission

The Pharmacode Check Digit Transmission parameter selects whether to send the check digit to the host terminal. Scan the **Hex 4** tag to disable this option, or the **Hex 5** tag to enable this option.

Bar Codes–8

The Bar Codes 8 programming mode contains programming parameters for Codabar bar codes. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

Codabar Check Digit

The Codabar Check Digit parameter permits control of Codabar check digit requirement. Scan the appropriate Hex tag (Hex 1 to Hex 0) to enable or disable the check digit. The default is Hex 0—Disable Codabar check digit.

Codabar Check Digit Transmission

The Codabar Check Digit Transmission parameter selects whether to send the check digit to the host terminal. Scan the **Hex 0** tag to disable this option, or the **Hex 1** tag to enable this option.

Codabar Tone Length

The Codabar Tone Length parameter permits you to set the length of the Codabar tone. Set this parameter by scanning the appropriate Hex tag (**Hex 0 to Hex F**). Each Hex tag is incremented by 15 milliseconds. For example, **Hex 0** = 0 ms, **Hex 1** = 15 ms, **Hex 2** = 30 ms, **Hex 3** = 45 ms, and so forth. The default Codabar Tone Length is 75 ms (**Hex 5**).

Codabar Tone Frequency

This parameter permits you to set the frequency of the Interleaved 2 of 5 tone. Set this parameter by scanning the appropriate Hex tag (**Hex 0** to **Hex 7**).

Hex Tag	Frequency in Hertz
Hex 0	702 Hz
Hex 1	781 Hz
Hex 2	868 Hz
Hex 3	961 Hz
Hex 4	1071 Hz
Hex 5	1187 Hz
Hex 6	570 Hz
Hex 7	633 Hz

Note: The default Codabar Tone Frequency is 1071 Hertz (**Hex 4**).

Codabar Tone

This parameter permits you to enable or disable the Codabar tone. Scan **Hex 0** to disable the tone (default) or **Hex 1** to enable it. If disabled, the Codabar tone is under control of the UPC tone control (general good read tone).

Codabar Halves

This parameter attempts to build a Codabar tag on the longest tag length seen. Codabar Halves Enabled programming requires a *half tag* partial longer than one-half of the longest Codabar tag ever seen by a scanner in order to prevent getting a short tag from a longer one.

Scan the **Hex 2** tag to disable this option, or the **Hex 3** tag to enable this option

Codabar Stitch

This parameter attempts to stitch a tag to the longest tag scanned by a full strike across the whole tag. Scan the Hex 4 tag to disable this option, or the Hex 5 tag to enable this option.

Number of Codabar Scans Required

This parameter sets the number of scans required to read a Codabar bar code. Increasing the number of scans can improve reading nominal bar codes. There are four settings: 1 scan, 2 scans, 3 scans, and 4 scans. The default is 1 scan. Set this parameter by scanning the appropriate Hex tag (**Hex 1 to Hex 4**).

Label Identifiers

The Label Identifiers programming mode selects the parameters for adding label identifiers to communication messages. These identifiers apply to the NCR USB and RS-232 communication protocols. Label identifiers for the other modes of communication are determined by the firmware and are not programmable.

Identifier Type

The Identifier Type parameter defines the type and placement of label identifiers. Default identifiers that prefix the message data, unique prefix identifiers, or no identifiers can be selected.

Select the Identifier Type parameter by scanning the appropriate tag (**Hex 0, Hex 2, or Hex 3**). If default identifiers are selected, do not enter any other parameter in this programming mode.

Default Prefix

Scan the **Hex 0** tag to use the default prefix. The default label identifiers vary depending on the type of bar code read. Following are the default identifiers for each bar code type:

Bar Code Type	Hex	ASCII
UPC-A	41H	A
UPC-E	45H	E
EAN-8	46H 46H	FF
EAN-13	46H	F
Code 39	42H 31H	B1
Interleaved 2 of 5	42H 32H	B2
Code 128	42H 33H	B3
GS1 DataBar-14	5DH 65H 30H	je0
GS1 DataBar-Expanded	5DH 65H 30H	je0
Pharmacode	41H	A
Codabar	4EH	N
ISBN	46H	F
ISSN	46H	F


25577

Scan the **Hex 2** tag to select none. No label identifiers are added to the message data.

Unique Prefix

To use a unique prefix, scan the **Hex 3** tag. A Unique Identifier is associated with each bar code type. Also, one, two, or no Common Bytes may be used. The following figure shows the possible message formats when using a unique prefix. The formats do not show other elements programmed in the other RS-232 programming modes.

Unique Label Identifiers

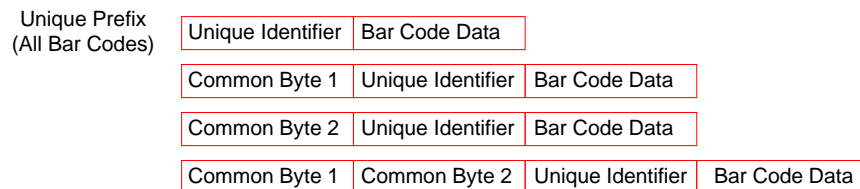

22769

Common Byte 1 and Common Byte 2

The Common Byte 1 and Common Byte 2 parameters permit the specification of the data sent to the host terminal in the Common Byte fields. Enter this information as two (2) Hex characters for each Common Byte.

Note: Refer to the ASCII Code Chart for the Hex Characters; however, values of 20 to 7E are recommended. Do not use the same characters as the Terminator Byte or the message may terminate too soon. Also, a Common Byte cannot be 00.

If not using a Common Byte, scan any Hex tag twice except **Hex 0** or the Terminator Byte value.

Note: Four (4) tags must be scanned to go to the next parameter.

Bar Code Type

The Bar Code Type parameter selects the bar code type for entering its associated label identifier information. After entering a Bar Code Type, enter the Common Byte and Unique Identifier. This procedure repeats until the label identifiers are specified for each bar code type. Scan the **Hex 0** through **Hex 9** tag to enter the appropriate Bar Code Type.

Note: UPC Version D is always disabled.

Common Byte

The Common Byte parameter selects which common bytes, if any, to add to the bar code data message. Each entry is unique to the previously specified Bar Code Type. Scan the **Hex 0** tag for no Common Bytes, the **Hex 1** tag for Common Byte 1, the **Hex 2** tag for Common Byte 2, the **Hex 3** tag for both Common Bytes, or the **Hex 4** tag for AIM ID on GS1 DataBar.

Unique Identifier

The Unique Identifier parameter permits the specification of the data sent to the host terminal in the Unique Identifier field. Each entry is unique to the previously specified Bar Code Type. Enter this data as two (2) Hex characters using recommended values of 20 to 7E (Refer to the “ASCII Code Chart” section in chapter 5).

Note: If the same characters are used as in the Terminator Byte, the message may terminate too soon.

RS-232 Parameters 1

The RS-232 Parameters 1 programming mode contains four of the parameters required for RS-232 communications. From this programming mode the Baud Rate, Parity, Stop Bits and Character Length, and Handshake Options can be selected. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

Baud Rate

The Baud Rate parameter contains seven selections: 300 Baud, 600 Baud, 1200 Baud, 2400 Baud, 4800 Baud, 9600 Baud, and 19200 Baud. Scan the appropriate **Hex 0** through **Hex 6** tag to set the desired Baud rate.

Parity

The Parity parameter contains three selections: Odd, Even, and None. For 7-bit characters, bit 8 is the parity bit; for 8-bit characters, bit 9 is the parity bit. Choosing no parity and 7-bit character length causes the scanner to send two (2) stop bits; the scanner must also receive two (2) stop bits. Scan the appropriate **Hex 0**, **Hex 1**, or **Hex 4** tags to select the desired Parity.

Note: When power is applied to a 7878 that includes a scale, the reset function checks the RS-232 Communications Parity programming. If the selection is **None**, it is ignored and Odd parity is used. If **Odd** or **Even** is selected, that selection is used.

Stop Bits and Character Length

The Stop Bits and Character Length parameter contains four selections: 1 Stop Bit and 7-bit Character Length, 1 Stop Bit and 8-bit Character Length, 2 Stop Bits and 7-bit Character Length, and 2 Stop Bits and 8-bit Character Length. Choosing no parity and 7-bit Character Length causes the 7878 to send two (2) stop bits; the scanner must also receive two (2) stop bits. If 8-bit Character length and parity is selected, only one (1) stop bit is sent. Scan the appropriate **Hex 0** through **Hex 3** tag to set the Stop Bits and Character Length.

Handshake

The Handshake parameter contains six selections. When considering these, note that the scanner controls only RTS; however, it can monitor CTS. The following list identifies each Handshake option.

- RTS is always low, CTS is ignored (**Hex 0** tag).
- RTS is always high, CTS is ignored (**Hex 1** tag).
- Scanner raises RTS and waits for CTS to go high before transmitting (**Hex 2** tag).
- Scanner raises RTS before transmitting and ignores the state of CTS (**Hex 3** tag).
- RTS is always low and scanner waits for CTS to go high before transmitting (**Hex 4** tag).
- RTS is always high and scanner waits for CTS to go high before transmitting (**Hex 5** tag).

Scan the appropriate **Hex 0** through **Hex 5** tag to set the Handshake option.

RS-232 Parameters 2

The RS-232 Parameters 2 programming mode contains some of the parameters required for RS-232 communications. From this mode BCC Options, Interface Control, and Check Digit can be selected. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

BCC Options

The BCC Option parameter permits the use of BCC at the end of a message to be enabled or disabled. When enabled, the BCC is the last character sent and is the Exclusive OR of each byte sent prior to the BCC, except the prefix byte. Scan the **Hex 0** tag to disable the BCC Option, or scan the **Hex 1** tag to enable it.

Interface Control

The Interface Control parameter permits control of the transfer of data between the scanner and the host terminal. The options are None, enable ACK/NAK, enable XOn/XOff, and enable both ACK/NAK and XOn/XOff.

If enable ACK/NAK is selected, each message sent to the host terminal must be acknowledged before sending the next message. Receiving the message properly causes an ACK to be sent, and if there are any errors, a NAK is sent instead and the scanner sends the message again. Also, any valid message other than NAK or XOn/XOff, if enabled, serves as an ACK as long as the message from the scanner is completed before the host terminal starts sending the valid message to the scanner.

An XOff message turns the scanner transmitter off until the scanner receives an XOn message. An XOn message can be received at any time. If the scanner is sending a message when it receives an XOff, since these messages can be received any time, data transmission stops after sending the current byte. When the scanner receives the next XOn, it sends the remainder of the message. The scanner does not acknowledge XOff and XOn messages with ACK or NAK messages.

Select the interface by scanning the appropriate **Hex 0** through **Hex 5** tag.

Check Digit

The Check Digit parameter permits control of the transmission of UPC-A, UPC-E, EAN-8, and EAN-13 check digits. Scan the appropriate Hex tag (**Hex 0** to **Hex F**) to independently enable or disable UPC-A, UPC-E, EAN-8, and EAN-13 check digits. The default is **Hex 1**—Enable UPC-A, EAN-8, and EAN-13; Disable UPC-E.

RS-232 Prefix Byte

The RS-232 Prefix Byte programming mode controls the use of prefix bytes. If an RS-232 Prefix Byte is used, it is the leading character in each message sent to the host terminal. Following it is the message data. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

Prefix Byte

The Prefix Byte parameter contains two selections: Disable and Enable. Scan the **Hex 0** tag to disable the Prefix Byte, or the **Hex 1** tag to enable it.

ASCII Code

The ASCII Code parameter permits the specification of what ASCII code to use for the Prefix Byte. Enter the selection by scanning the appropriate two Hex tags (shown in the *ASCII Code Chart* in *Programming* chapter). Any value from 01 through 0F can be selected; however, the recommendation is to use the Start Of Text (STX) ASCII Code which is 02 Hex. Scan the two appropriate Hex tags (**Hex 0** through **Hex 7** for the first character and **Hex 0** through **Hex F** for the second).

Note: ASCII Code parameter for the RS-232 Terminator Byte has the same function.

RS-232 Terminator Byte

The RS-232 Terminator Byte programming mode controls the use of terminator bytes. If an RS-232 Terminator Byte is used, it goes at the end of the message sent to the host terminal. If a BCC is included, it follows the Terminator Byte and includes the Terminator Byte in the calculation. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

Terminator Byte

There are two RS-232 Terminator Bytes available—the second Terminator Byte being a direct entry only. Therefore after programming the First Terminator Byte **Hex 2**, **Hex 3** and **Hex C** must be scanned to be able to program the Second Terminator Byte.

ASCII Code

The ASCII Code parameter for RS-232 Terminator Byte and Prefix Byte has the same function. Refer to the “RS-232 Prefix Byte” section of this chapter for more information.

RS-232 Communications Options

The RS-232 Communications Options parameters control the delay between messages, and the format in which the scanner and host terminal exchange tag data messages. The firmware is programmed to accept one parameter at a time and then leave this programming mode. Therefore, each of the parameters must be programmed separately. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

Message Delay

The Message Delay option sets the minimum time the firmware waits before sending the next message. This permits lowering CTS by the host terminal to inhibit data from the scanner. This option was not available on previous scanners.

Messages can be delayed as follows:

- **Hex 0** for no delay
- **Hex 1** for a 10 ms delay
- **Hex 2** for a 50 ms delay

Scanner/Scale Format


The Scanner or Scanner/Scale Format option permits forcing the data format to either scanner only format or scanner/scale format to accommodate the host terminal. In some circumstances a host terminal may not be able to handle the normal format sent to it. In that case, selecting one of these options permits the use of the other format.

The Model option in the Scale Parameters section overrides this option. If this option is programmed, do it after the other parameter or return here and change it again. This option affects the address and function code in the message, but not the BCC. The choices for this option are as follows:

- **Hex 4** for Scanner only format
- **Hex 5** for Scanner/Scale format

The normal (default) format for scanner only tag data messages is as follows:

- Scanner–Only Tag Data
- Message Format



Shading indicates optional information.

16564

The normal (default) format for scanner/scale tag data messages is as follows:

- Scanner/Scale Tag Data
- Message Format



Shading indicates optional information.

16565

The difference between the scanner only and the scanner/scale format is that the scanner/scale format has an address and a function code following the optional Prefix Byte. For more detailed information on message formats refer to the *NCR Scanner/Scale Interface Programmer's Guide (BD20-1074-A)*.

Good Weigh Tone

The 7878 can be programmed to sound a tone following a successful item weigh function. Scan the **Hex 8** tag to disable this function and the **Hex 9** tag to enable it.

Scale Parameters

The Scale Parameters programming mode controls specific parameters associated with a 7878 that has a scale. This mode can be used to identify if the 7878 includes a scale and to define the address if the scale is connected to a host terminal. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

Model

The Model parameter specifies if the 7878 is a Scanner/Scale or a Scanner only. This parameter is set at the factory and should not need changing under normal circumstances. Scan the **Hex 3** tag to specify that the unit is a Scanner/Scale, or scan the **Hex 4** tag to specify that the unit is a Scanner only. If the scale is disabled on a Scanner/Scale unit by scanning the **Hex 4** tag, the BCC option also changes to the appropriate state.

IBM Address

When programming a 7878 for IBM communications, the proper scale communications address must be selected. Selecting the IBM 468x communications protocol sets the scale address to 6E; however, it may need to be changed to 6A or 6B, depending on the IBM configuration in the particular IBM host terminal software. Scan the **Hex 5** tag for address 6A, the **Hex 6** tag for address 6B, or the **Hex 7** tag for address 6E.

The host terminal integrated scanner/scale driver normally uses address 6E. However, if the scanner works but the scale does not, try using the other two scale addresses.

Miscellaneous Parameters

The Miscellaneous Parameters programming mode controls parameters associated with the 7878 Scale that do not fit easily into any of the other categories. The 7878 firmware is programmed to accept one parameter at a time and then leave this programming mode. Therefore, each of the parameters must be programmed separately. Refer to the “Parameter Defaults” section earlier in this chapter for the factory defined default value of each programming parameter.

Host Tone Control

When a host terminal is used, this parameter determines what device controls the tone. Scanning the **Hex 4** tag enables this option and the host terminal controls the tone. Scanning the **Hex 3** tag disables this option and the scale controls the tone.

IBM Retransmit Control

When a host terminal is used and the scale detects a bad message from the host terminal, this parameter controls how the original message gets retransmitted. If enable is selected by scanning the **Hex 7** tag, the scale retransmits the original message three (3) times, and then terminates the sequence. If forever is selected by scanning the **Hex 8** tag, the scale retransmits the original message until it is accepted, or until the scale is told to reset by the host terminal. Do not use the enable selection unless advised to do so by NCR to solve a problem.

Enable/Disable Voice Messages

The 7878 uses voice messages for diagnostics, scale calibration, and clerk messages. If voice messages are enabled, the messages are heard at the appropriate time; if they are disabled, the beep tones are heard instead. When voice messages are disabled, the 7878 uses the scale display to indicate error conditions. To enable or disable voice messages, scan the following sequence of programming tags. These tags must be the first tags scanned after applying power to the unit.

All Voice Messages Off/On

- Program Mode
- Hex 3
- Hex 2
- Hex D
- Save and Reset

Clerk Messages On

- Program Mode
- Hex 3
- Hex 3
- Hex 1
- Save and Reset

Clerk Messages Off

- Program Mode
- Hex 3
- Hex 3
- Hex 0
- Save and Reset

Because the clerk messages are a subset of the Voice Messages, disabling all voice messages disables the clerk messages also. All Voice Messages must be enabled for the Clerk Messages to be enabled.

The three clerk messages are:

- a. Scale failed, clean under scale deck
- b. Scale failed, code 5, clean under scale deck

Next, do scale calibration

Next, change scale

- c. Scale failed, code 4

Stop checkstand mechanical vibration

Next, change scale

IBM-485 / IBM-USB Tag Data Format

This option is included because most IBM devices that have a select address of 4B require the bar code data to be transmitted as ASCII characters. Therefore, when selecting Communications Protocol choice 4 or B, NCR recommends that the tag format be set to ASCII. For handheld bar code readers, refer to the “Communications Protocol” section earlier in this chapter.

Number System Character Parameter

This parameter determines whether the UPC-A and UPC-E number system character is sent or not. The following are the options for this parameter.

- **Hex 0**—UPC-A and UPC-E Number System Character Not Sent
- **Hex 1**—UPC-A and UPC-E Number System Character Sent
- **Hex 4**—UPC-E Number System Character Not Sent
- **Hex 5**—UPC-E Number System Character Sent
- **Hex 6**—UPC-A Number System Character Not Sent
- **Hex 7**—UPC-A Number System Character Sent

Dual Cable Interface

The Dual Cable Interface programming mode identifies the scale type to the host terminal.

The scale type normally does not need changing unless you are connecting the 7878 to a competitive host terminal.

Avery Scale Emulation

This replaces 7880–K107–V00x. The Avery Scale is now available in Super ASIC platform where the scale interface uses the AUX port of the 787x unit.

To enable Avery Scale Emulation, scan the following Hex tags.

- **Program Mode, Hex 4, Hex 0, Hex 1**—enable AUX port processing
- **Hex 4, Hex 0, Hex 2**—enable AUX port 1
- **Hex 5, Hex 5, Hex 6**—enable Avery Scale Emulation
- **Hex 2, Hex 4, Hex 4**—change barcode data to Scanner-only format

Programming Worksheets

The programming worksheets provide a convenient method of defining the 7878 program before loading it into the unit. Each worksheet relates to a Parameter Program.

The programming worksheets permit the exact sequence of tags to scan for each programming parameter to be determined. It also provides a hard copy of the program for possible future use.

The top half of each worksheet identifies the programming parameters and the specific tags for each one. Most of the worksheets contain arrows that guide through the proper sequence. The bottom half of each worksheet provides a place to write in each selection.

Most of the worksheets contain shortcuts that permit specific parameters to be entered without entering the entire worksheet. These parameters have an alpha character in a box just left of the parameter name. Scanning the Hex tag that corresponds to the alpha character enables input for that parameter. Scan the tags that pertain to that parameter. After entering the specified parameter, the program returns to Program Mode.

Communications Protocol

Your Program

1	0	
Communications Protocol		Protocol

Protocol

3	5
IBM Slot Scanner	RS-232

D	E 0	E 3
IBM USB	NCR (RS-232) USB	USB Keyboard Wedge

Good Read Tone

Your Program

1	1	
---	---	--

Good Read Tone Protocol

A	Tone On/Off	0	1
---	-------------	---	---

Off On


B Tone Frequency (Hertz) B When entering Tone Frequency, the adjustment can be incremented upward by scanning the **Hex B** tag. Each time you scan the **Hex B**, the tone frequency increases one unit. Scan the **End** tag or a valid Hex tag to end this mode.

C Tone Length (Milliseconds) C When entering Tone Length, the adjustment can be incremented upward by scanning the **Hex C** tag. Each time you scan the **Hex C** tag, the tone length increases one unit. Scan the **End** tag or a valid Hex tag to end this mode.

D Tone Volume D When entering Tone Volume, the adjustment can be incremented upward by scanning the **Hex D** tag. Each time you scan the **Hex D** tag, the tone length increases one unit. Scan the **End** tag or a valid Hex tag to end this mode.

E Not-On-File Tone Volume E When entering Not-On-File Tone Volume, the adjustment can be incremented upward by scanning the **Hex E** tag. Each time you scan the **Hex E** tag, the tone length increases one unit. Scan the **End** tag or a valid Hex tag to end this mode.

Timers

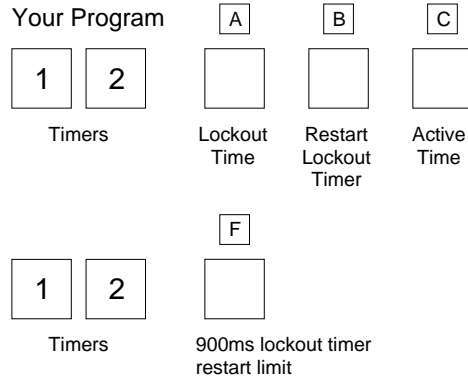



A Lockout Time (Milliseconds)	<input type="text" value="8"/> 350	<input style="border: 2px solid red;" type="text" value="0"/> 450	<input type="text" value="1"/> 600	<input type="text" value="2"/> 750	<input type="text" value="3"/> 900
	<input type="text" value="4"/> 1050	<input type="text" value="5"/> 1200	<input type="text" value="6"/> 1350	<input type="text" value="7"/> 1500	
B Restart Lockout Timer	<input type="text" value="0"/> Off	<input style="border: 2px solid red;" type="text" value="1"/> On			
C Active Time (Minutes)	<input type="text" value="0"/> 0	<input style="border: 2px solid red;" type="text" value="1"/> 15	<input type="text" value="2"/> 30	<input type="text" value="3"/> 60	
F 900ms Lockout Timer Restart Limit	<input style="border: 2px solid red;" type="text" value="0"/> Disable	<input type="text" value="1"/> Enable			

NOTE: Direct Entry Only.
If the Restart Lockout Timer [B] is set to OFF, the 900 ms Lockout Timer Restart Limit [F] has no effect.

NOTE: NCR suggests that you do not set the Active Time parameter to 0. Leaving the laser light on all the time reduces its life expectancy.



Bar Codes-1

Your Program

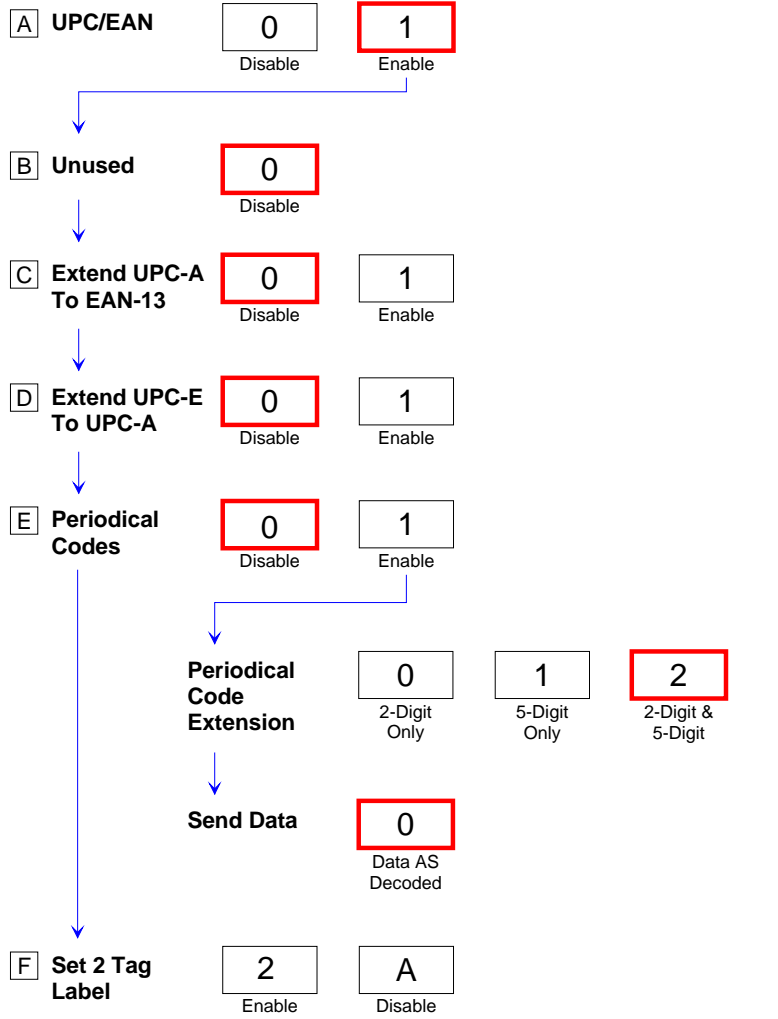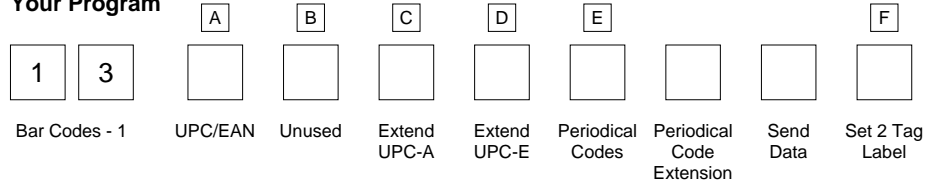


Bar Codes-2

Your Program

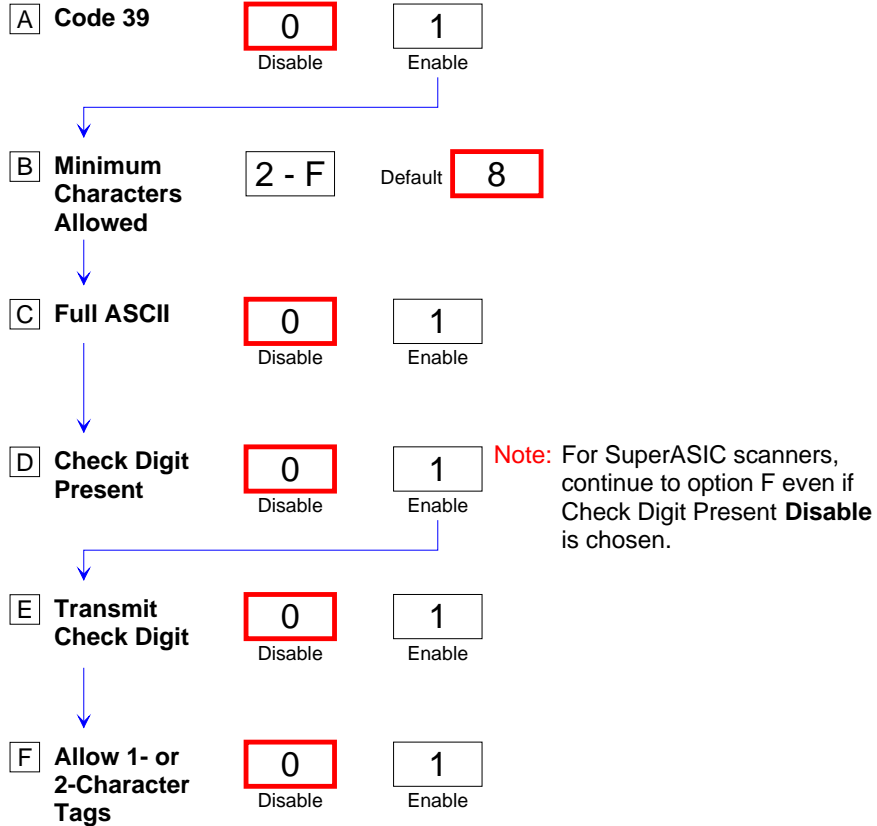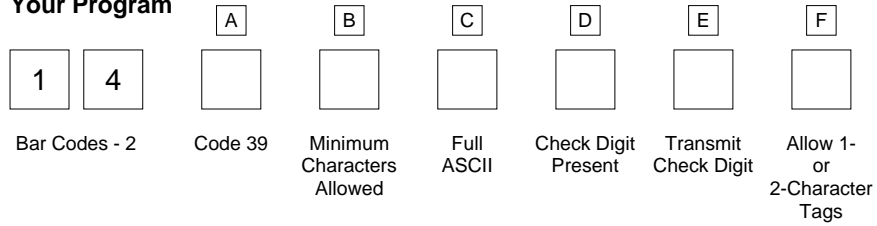

Bar Codes-3

Your Program

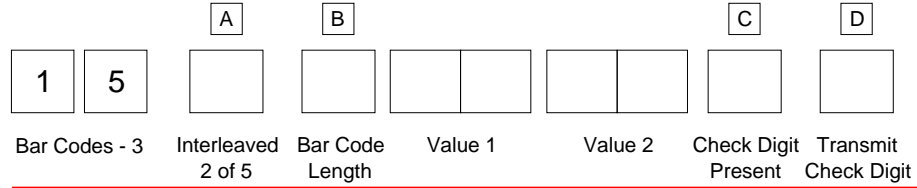

A Interleaved 2 of 5 **0** **1**
 Disable Enable

B Bar Code Length **0** **1**
 Range Check Specific Check

Value 1

Value 2

Character Minimum

Character Maximum

0 - 3
 Character 1 Default

0 - 9
 Character 2 **0 8**

0 - 3
 Character 1 Default

0 - 9
 Character 2 **1 6**



C Check Digit Present **0** **1**
 Disable Enable

D Transmit Check Digit **0** **1**
 Disable Enable



E Easy I25 **0** **1**
 Disable Enable

Note: Requires only 1 scan.

Bar Codes-4

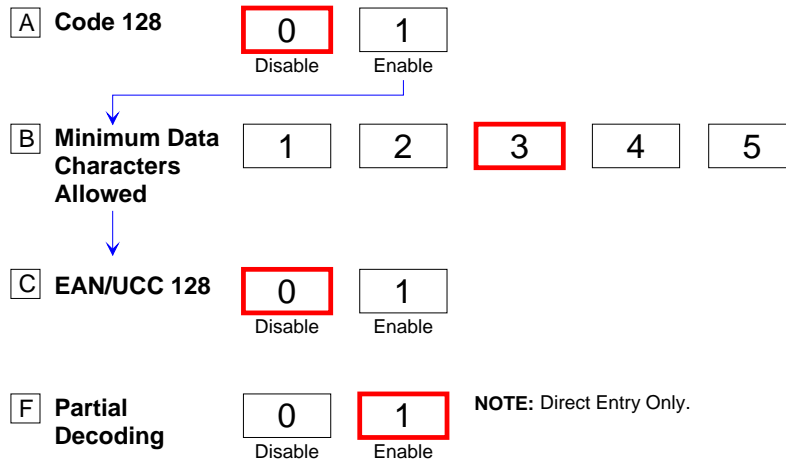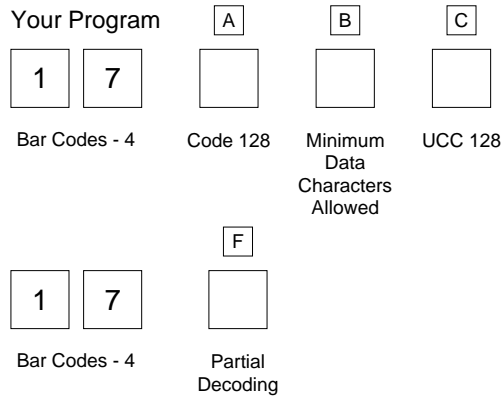

Bar Codes-5

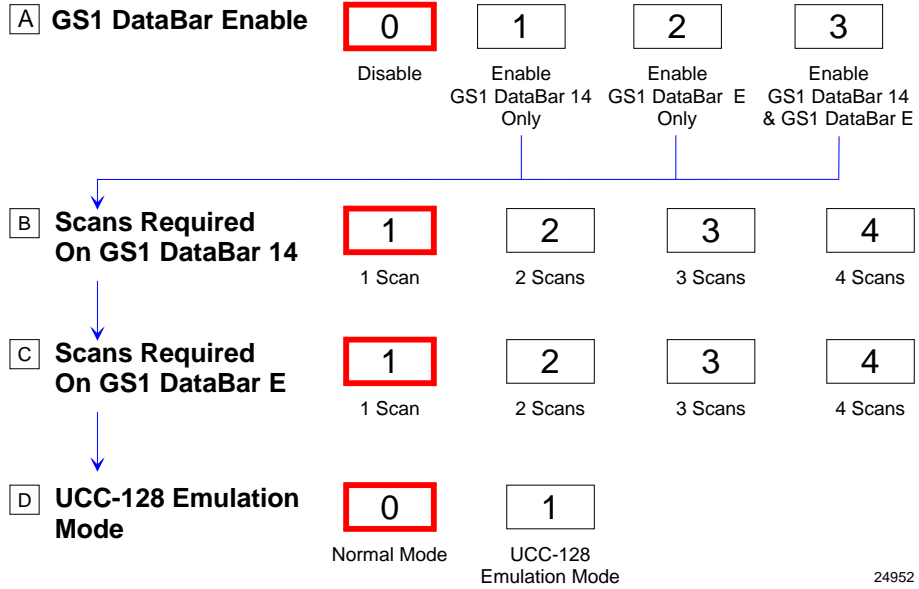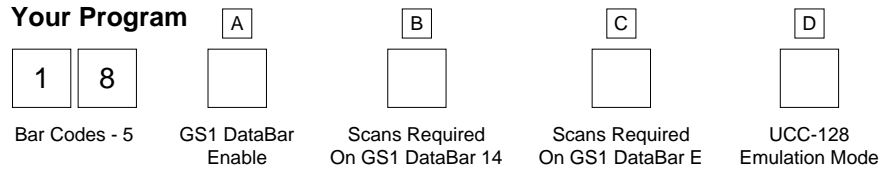

Bar Codes-6

Your Program

<input type="checkbox"/> 1	<input type="checkbox"/> 9	<input type="checkbox"/>	<input type="checkbox"/>
Bar Codes - 6		ISBN	ISSN

ISBN	<input checked="" type="checkbox"/> 2	<input type="checkbox"/> 3
	Disable	Enable
ISSN	<input type="checkbox"/> 8	<input checked="" type="checkbox"/> 9
	Enable	Disable

Note:

1. If the tag is an ISBN tag and it is enabled, the output will be the 10-digit ISBN. The 10th digit will be replaced by the ISBN checkdigit (modulo 11 with weights 10 to 2).
2. If the tag is an ISSN tag and it is enabled, the output will be the 8-digit ISSN. The 8th digit will be replaced by the ISSN checkdigit (modulo 11 with weights 8 to 2).
3. The LabelID used is still the LabelID for EAN-13.

Note:

For SuperASIC firmware versions (below) and upcoming releases:
Programmed Firmware Chip (497-0443786)
Flash MEDIA (497-0443785)

23484

Bar Codes-7

Your Program



<input type="checkbox"/> 7	<input type="checkbox"/> F
Bar Codes - 7	

Pharmacode	<input checked="" type="checkbox"/> 2	<input type="checkbox"/> 3
	Disable	Enable
Pharmacode Check Digit Transmission	<input type="checkbox"/> 4	<input checked="" type="checkbox"/> 5
	Disable	Enable



(A blue arrow points from the 'Pharmacode' section to the 'Pharmacode Check Digit Transmission' section.)

25516

Bar Codes-8

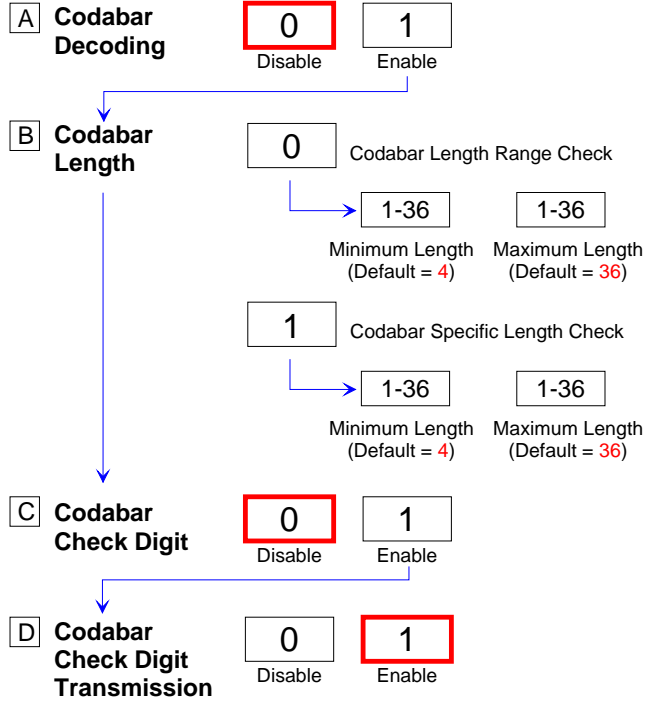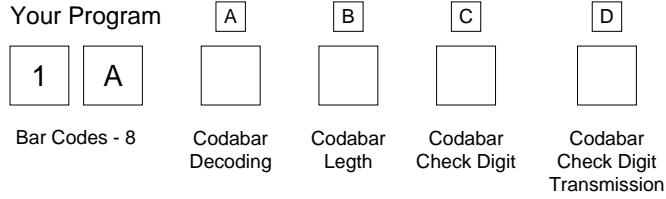

Label Identifiers

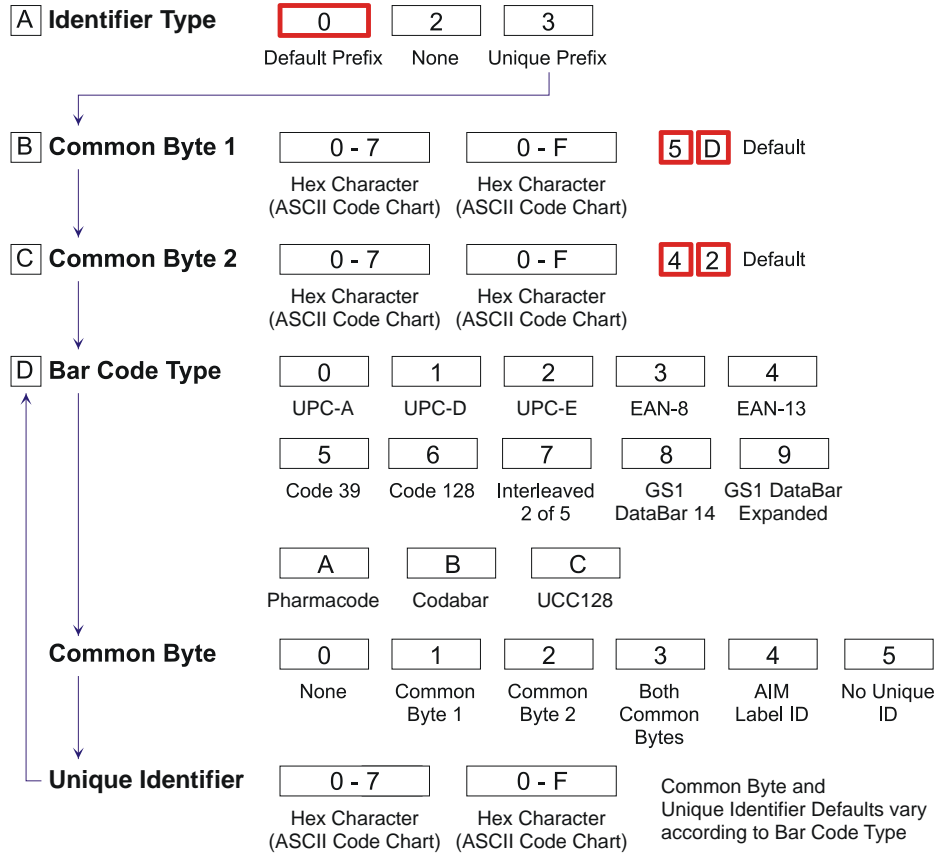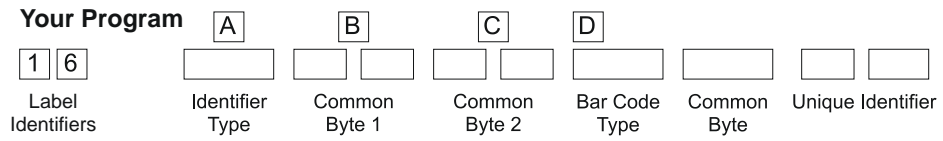

Number System Character

Your Program

<input type="text" value="1"/>	<input type="text" value="9"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Number System Character		UPC-A & UPC-E Number System	UPC-E Number System	UPC-A Number System

UPC-A & UPC-E Number System	<input type="text" value="0"/> Not Sent	<input style="border: 2px solid red;" type="text" value="1"/> Sent
UPC-E Number System	<input type="text" value="4"/> Not Sent	<input style="border: 2px solid red;" type="text" value="5"/> Sent
UPC-A Number System	<input type="text" value="6"/> Not Sent	<input style="border: 2px solid red;" type="text" value="7"/> Sent

24040

Sensormatic Deactivation Tone Frequency

Your Program

<input type="text" value="5"/>	<input type="text" value="8"/>	<input type="text" value="B"/>
--------------------------------	--------------------------------	--------------------------------

<input type="text" value="B"/> Tone Frequency (Hertz)	<input type="text" value="B"/> When entering Tone Frequency, the adjustment can be incremented upward by scanning the Hex B tag. Each time you scan the Hex B, the tone frequency increases one unit. Scan the End tag or a valid Hex tag to end this mode. The eight frequencies to choose from are 570 Hz (Default), 637 Hz, 721 Hz, 829 Hz, 976 Hz, 1186 Hz, 1512 Hz, and 2083 Hz.
---	---

25913

Sensormatic Deactivation Tone Pulse

Your Program

<input type="text" value="7"/>	<input type="text" value="B"/>	<input type="text" value="X"/>
		1-F

<input type="text" value="X"/> The tone is a series of five pulses. The values of 1-8 generates 1 to 8 pulses of the frequency. The values 9-F generates 1 to 7 pulses of the frequency modulated with a second tone. The eight frequencies are: 570 Hz(default), 637 Hz, 721 Hz, 829 Hz, 976 Hz, 1186 Hz, 1512 Hz, and 2083 Hz.
--

25912

RS-232 Parameters 1



Your Program

		A	B	C	D
2	0				
RS-232 Parameters - 1		Baud Rate	Parity	Stop Bits And Character Length	Handshake

A	Baud Rate	0 300	1 600	2 1200	3 2400	4 4800	5 9600	6 19200
B	Parity	0 Odd	1 Even	4 None				
C	Stop Bits And Character Length	0 1 Stop Bit 7-Bit Character	1 1 Stop Bit 8-Bit Character	2 2 Stop Bits 7-Bit Character	3 2 Stop Bits 8-Bit Character			
D	Handshake	0 RTS Low Ignore CTS	1 RTS High Ignore CTS	2 Raise RTS Wait For CTS	3 Raise RTS Ignore CTS	4 RTS Low Wait For CTS	5 RTS High Wait For CTS	



22772

RS-232 Prefix Byte

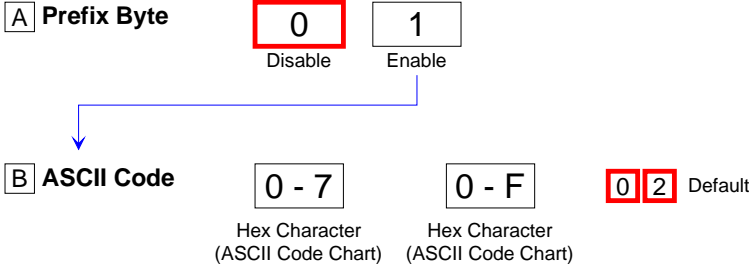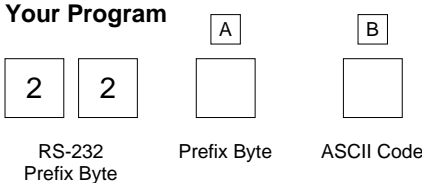

22774

RS-232 Terminator Byte

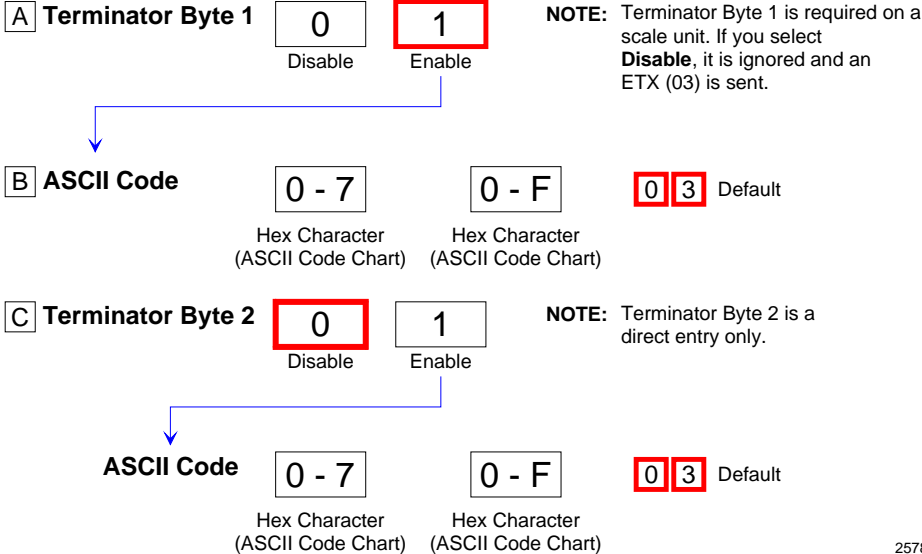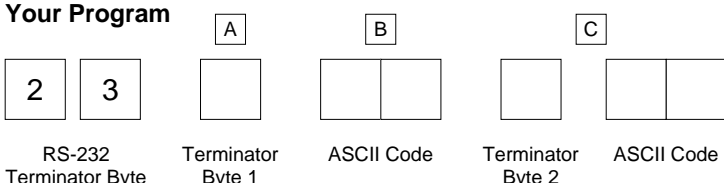

25786

RS-232 Communications Options

Your Program

<input type="text" value="2"/>	<input type="text" value="4"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Communication Options	RS-232 Delay	Scanner or Scanner / Scale Format	Good Weigh Tone	

RS-232 Delay	<input type="text" value="0"/>	<input type="text" value="1"/>	<input type="text" value="2"/>
	No Delay	10 Milliseconds	50 Milliseconds

Scanner or Scanner / Scale Format	<input type="text" value="4"/>	<input type="text" value="5"/>
	Scanner Only	Scanner / Scale

Good Weigh Tone	<input type="text" value="8"/>	<input type="text" value="9"/>
	Disable	Enable

22779

Scale Parameters

Your Program

<input type="text" value="3"/>	<input type="text" value="0"/>	<input type="text"/>	<input type="text"/>
Scale Parameters	Model	IBM Address	

Model	<input type="text" value="3"/>	<input type="text" value="4"/>
	Scanner/Scale	Scanner Only

IBM address	<input type="text" value="5"/>	<input type="text" value="6"/>	<input type="text" value="7"/>
	Address 6A	Address 6B	Address 6E

22818

Miscellaneous Options

Miscellaneous Parameters

Your Program

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	2				
Miscellaneous Parameters	Host Tone Control	IBM Retransmit Control	Speech	IBM-485 / IBM-USB Tag Data Format	

Host Tone Control

<input checked="" type="checkbox"/>	<input type="checkbox"/>
3	4
Disable	Enable

IBM Retransmit Control

<input checked="" type="checkbox"/>	<input type="checkbox"/>
7	8
3 Times	Forever

Speech

<input type="checkbox"/>
D
Toggle Between Enable and Disable Speech

IBM-485 / IBM-USB Tag Data Format

<input checked="" type="checkbox"/>	<input type="checkbox"/>
E	F
Hex	ASCII

22813

Code 128 Tone Length

Selection	Programming Tag Sequence
0 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex 0, Save and Reset
15 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex 1, Save and Reset
30 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex 2, Save and Reset
45 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex 3, Save and Reset
60 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex 4, Save and Reset
75 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex 5, Save and Reset
90 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex 6, Save and Reset
105 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex 7, Save and Reset
120 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex 8, Save and Reset
135 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex 9, Save and Reset
150 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex A, Save and Reset
165 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex B, Save and Reset
180 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex C, Save and Reset
195 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex D, Save and Reset
210 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex E, Save and Reset
225 ms	Programming Mode, Hex 7, Hex 0, Hex 0, Hex F, Save and Reset

Code 128 Tone Frequency

Selection	Programming Tag Sequence	Setting
702 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 0, Save and Reset	
781 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 1, Save and Reset	
868 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 2, Save and Reset	
961 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 3, Save and Reset	
1071 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 4, Save and Reset	Default
1187 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 5, Save and Reset	
570 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 6, Save and Reset	
633 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 7, Save and Reset	

Code 128 Tone

Selection	Programming Tag Sequence
Disable	Programming Mode, Hex 7, Hex 0, Hex 2, Hex 0, Save and Reset
Enable	Programming Mode, Hex 7, Hex 0, Hex 2, Hex 1, Save and Reset

Code 128 Minimum and Maximum Tag Length

Selection	Programming Tag Sequence
Format	Programming Mode, Hex 7, Hex 2, a, v, w, x, y, Save and Reset where a = 0 (Range of formats) or 1 (Specific Format) v = 1–3 (default is 3) w = 1–9 (default is 9) x = 1–3 (default is 3) y = 1–9 (default is 9)
Default	Scan the Default Tag to set this option to Off

Code 39 Tone Length

Selection	Programming Tag Sequence
0 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex 0, Save and Reset
15 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex 1, Save and Reset
30 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex 2, Save and Reset
45 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex 3, Save and Reset
60 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex 4, Save and Reset
75 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex 5, Save and Reset
90 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex 6, Save and Reset
105 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex 7, Save and Reset
120 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex 8, Save and Reset
135 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex 9, Save and Reset
195 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex D, Save and Reset
165 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex B, Save and Reset
210 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex E, Save and Reset
225 ms	Programming Mode, Hex 7, Hex 0, Hex 3, Hex F, Save and Reset

Code 128 Stitch

Selection	Programming Tag Sequence
Disable	Programming Mode, Hex 7, Hex 0, Hex 9, Hex C, Save and Reset
Enable	Programming Mode, Hex 7, Hex 0, Hex 9, Hex D, Save and Reset

Code 39 Tone Frequency

Selection	Programming Tag Sequence	Setting
702 Hz	Programming Mode, Hex 7, Hex 0, Hex 4, Hex 0, Save and Reset	
781 Hz	Programming Mode, Hex 7, Hex 0, Hex 4, Hex 1, Save and Reset	
868 Hz	Programming Mode, Hex 7, Hex 0, Hex 4, Hex 2, Save and Reset	
961 Hz	Programming Mode, Hex 7, Hex 0, Hex 4, Hex 3, Save and Reset	
1071 Hz	Programming Mode, Hex 7, Hex 0, Hex 4, Hex 4, Save and Reset	Default
1187 Hz	Programming Mode, Hex 7, Hex 0, Hex 4, Hex 5, Save and Reset	
570 Hz	Programming Mode, Hex 7, Hex 0, Hex 4, Hex 6, Save and Reset	
633 Hz	Programming Mode, Hex 7, Hex 0, Hex 4, Hex 7, Save and Reset	

Code 39 Tone

Selection	Programming Tag Sequence
Disable	Programming Mode, Hex 7, Hex 0, Hex 5, Hex 0, Save and Reset
Enable	Programming Mode, Hex 7, Hex 0, Hex 5, Hex 1, Save and Reset

Code 39 Quiet Zone

Selection	Programming Tag Sequence
Disable	Programming Mode, Hex 7, Hex 0, Hex 5, Hex 2, Save and Reset
Enable	Programming Mode, Hex 7, Hex 0, Hex 5, Hex 3, Save and Reset

Code 39 InterCharacter Gap Check

Selection	Programming Tag Sequence
Enable	Programming Mode, Hex 7, Hex 0, Hex 5, Hex 5, Save and Reset
Disable	Programming Mode, Hex 7, Hex 0, Hex 5, Hex 4, Save and Reset

Code 39 Halves

Selection	Programming Tag Sequence
Disable	Programming Mode, Hex 7, Hex 0, Hex 9, Hex 0, Save and Reset
Enable	Programming Mode, Hex 7, Hex 0, Hex 9, Hex 1, Save and Reset

Code 39 Stitch

Selection	Programming Tag Sequence
Disable	Programming Mode, Hex 7, Hex 0, Hex 9, Hex 2, Save and Reset
Enable	Programming Mode, Hex 7, Hex 0, Hex 9, Hex 3, Save and Reset

Code 39 CD Length1

Selection	Programming Tag Sequence	Setting
Format	Programming Mode, Hex 7, Hex 0, Hex B, x, y, Save and Reset CD Format x y = 01 – 36 where if x = 0, y = 1 – 9 x = 1, y = 0 – 9 x = 2, y = 0 – 9 x = 3, y = 0 – 6	
Disable	Programming Mode, Hex 7, Hex 0, Hex B, Hex 0, Hex 0, Save and Reset	Default

Code 39 CD Length2

Selection	Programming Tag Sequence	Setting
Format	Programming Mode, Hex 7, Hex 0, Hex C, x, y, Save and Reset CD Format x y = 01 – 36 where if x = 0, y = 1 – 9 x = 1, y = 0 – 9 x = 2, y = 0 – 9 x = 3, y = 0 – 6	
Disable	Programming Mode, Hex 7, Hex 0, Hex C, Hex 0, Hex 0, Save and Reset	Default

Code 39 Minimum and Maximum Length

Selection	Programming Tag Sequence
Format	Programming Mode, Hex 7, Hex 0, Hex F, a, vw, xy, Save and Reset where a = range (1–36) vw = c39 minimum format xy = c39 maximum format

Interleaved 2 of 5 Tone Length

Selection	Programming Tag Sequence
0 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex 0, Save and Reset
15 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex 1, Save and Reset
30 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex 2, Save and Reset
45 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex 3, Save and Reset
60 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex 4, Save and Reset
75 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex 5, Save and Reset
90 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex 6, Save and Reset
105 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex 7, Save and Reset
120 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex 8, Save and Reset
135 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex 9, Save and Reset
150 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex A, Save and Reset
165 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex B, Save and Reset
180 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex C, Save and Reset
195 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex D, Save and Reset
210 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex E, Save and Reset
225 ms	Programming Mode, Hex 7, Hex 0, Hex 6, Hex F, Save and Reset

Interleaved 2 of 5 Tone Frequency

Selection	Programming Tag Sequence	Setting
702 Hz	Programming Mode, Hex 7, Hex 0, Hex 7, Hex 0, Save and Reset	
781 Hz	Programming Mode, Hex 7, Hex 0, Hex 7, Hex 1, Save and Reset	
868 Hz	Programming Mode, Hex 7, Hex 0, Hex 7, Hex 2, Save and Reset	
961 Hz	Programming Mode, Hex 7, Hex 0, Hex 7, Hex 3, Save and Reset	
1071 Hz	Programming Mode, Hex 7, Hex 0, Hex 7, Hex 4, Save and Reset	Default
1187 Hz	Programming Mode, Hex 7, Hex 0, Hex 7, Hex 5, Save and Reset	
570 Hz	Programming Mode, Hex 7, Hex 0, Hex 7, Hex 6, Save and Reset	
633 Hz	Programming Mode, Hex 7, Hex 0, Hex 7, Hex 7, Save and Reset	

Interleaved 2 of 5 Tone

Selection	Programming Tag Sequence
Disable	Programming Mode, Hex 7, Hex 0, Hex 8, Hex 0, Save and Reset
Enable	Programming Mode, Hex 7, Hex 0, Hex 8, Hex 1, Save and Reset

Interleaved 2 of 5 CD Length1

Selection	Programming Tag Sequence	Setting
Format	Programming Mode, Hex 7, Hex 0, Hex D, x, y, Save and Reset CD Format x y = 04-58 where if x = 0, y = 4-9 x = 1, y = 0-9 x = 2, y = 0-9 x = 3, y = 0-9 x = 4, y = 0-9 x = 5, y = 0-8	
Disable	Programming Mode, Hex 7, Hex 0, Hex D, Hex 0, Hex 0, Save and Reset	Default

Interleaved 2 of 5 CD Length2

Selection	Programming Tag Sequence	Setting
Format	Programming Mode, Hex 7, Hex 0, Hex E, x, y, Save and Reset CD Format x y = 04 - 58 where if x = 0, y = 4 - 9 x = 1, y = 0 - 9 x = 2, y = 0 - 9 x = 3, y = 0 - 9 x = 4, y = 0 - 9 x = 5, y = 0 - 8	
Disable	Programming Mode, Hex 7, Hex 0, Hex E, Hex 0, Hex 0, Save and Reset	Default

Interleaved 2 of 5 Scans Required

Selection	Programming Tag Sequence	Setting
1 scan	Programming Mode, Hex 6, Hex B, Hex 5, Hex 1, Save and Reset	
2 scans	Programming Mode, Hex 6, Hex B, Hex 5, Hex 2, Save and Reset	Default
3 scans	Programming Mode, Hex 6, Hex B, Hex 5, Hex 3, Save and Reset	
4 scans	Programming Mode, Hex 6, Hex B, Hex 5, Hex 4, Save and Reset	

Note: This is an Advanced Programming Feature and should only be done under the recommendation and direction of NCR; otherwise, unexpected results may occur.

Interleaved 2 of 5 Overlaps

Selection	Programming Tag Sequence	Setting
1 overlap	Programming Mode, Hex 6, Hex B, Hex B, Hex 1, Save and Reset	Default
2 overlaps	Programming Mode, Hex 6, Hex B, Hex B, Hex 2, Save and Reset	
3 overlaps	Programming Mode, Hex 6, Hex B, Hex B, Hex 3, Save and Reset	
4 overlaps	Programming Mode, Hex 6, Hex B, Hex B, Hex 4, Save and Reset	

Note: This is an Advanced Programming Feature and should only be done under the recommendation and direction of NCR; otherwise, unexpected results may occur.

Interleaved 2 of 5 Minimum Segment Size

Selection	Programming Tag Sequence	Setting
2 segment size	Programming Mode, Hex 6, Hex B, Hex E, Hex 2, Save and Reset	
3 segment size	Programming Mode, Hex 6, Hex B, Hex E, Hex 3, Save and Reset	Default
4 segment size	Programming Mode, Hex 6, Hex B, Hex E, Hex 4, Save and Reset	
5 segment size	Programming Mode, Hex 6, Hex B, Hex E, Hex 5, Save and Reset	
6 segment size	Programming Mode, Hex 6, Hex B, Hex E, Hex 6, Save and Reset	
7 segment size	Programming Mode, Hex 6, Hex B, Hex E, Hex 7, Save and Reset	
8 segment size	Programming Mode, Hex 6, Hex B, Hex E, Hex 8, Save and Reset	
9 segment size	Programming Mode, Hex 6, Hex B, Hex E, Hex 9, Save and Reset	

Note: This is an Advanced Programming Feature and should only be done under the recommendation and direction of NCR; otherwise, unexpected results may occur.

Enable/Disable Interleaved 2 of 5 Partial

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 6, Hex C, Hex C, Save and Reset	Default
Enable	Programming Mode, Hex 6, Hex C, Hex D, Save and Reset	

Note: This is an Advanced Programming Feature and should only be done under the recommendation and direction of NCR; otherwise, unexpected results may occur.

GS1 DataBar Tone Length

Selection	Programming Tag Sequence	Setting
0 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex 0, Save and Reset	
15 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex 1, Save and Reset	
30 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex 2, Save and Reset	
45 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex 3, Save and Reset	Default
60 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex 4, Save and Reset	
75 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex 5, Save and Reset	
90 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex 6, Save and Reset	
105 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex 7, Save and Reset	
120 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex 8, Save and Reset	
135 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex 9, Save and Reset	
150 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex A, Save and Reset	
165 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex B, Save and Reset	
180 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex C, Save and Reset	
195 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex D, Save and Reset	
210 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex E, Save and Reset	
225 ms	Programming Mode, Hex 7, Hex 4, Hex 0, Hex F, Save and Reset	

GS1 DataBar Tone Frequency

Selection	Programming Tag Sequence	Setting
702 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 0, Save and Reset	
781 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 1, Save and Reset	
868 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 2, Save and Reset	
961 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 3, Save and Reset	
1071 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 4, Save and Reset	Default
1187 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 5, Save and Reset	
570 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 6, Save and Reset	
633 Hz	Programming Mode, Hex 7, Hex 4, Hex 1, Hex 7, Save and Reset	

GS1 DataBar Tone

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 7, Hex 4, Hex 2, Hex 0, Save and Reset	Default
Enable	Programming Mode, Hex 7, Hex 4, Hex 2, Hex 1, Save and Reset	

GS1 DataBar-E AI 93 to Code 39 Tag Data Conversion

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 7, Hex 0, Hex A, Hex 2, Save and Reset	Default
Enable	Programming Mode, Hex 7, Hex 0, Hex A, Hex 3, Save and Reset	

GS1 DataBar-E AI 94 to UCC-128 Tag Data Conversion

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 7, Hex 0, Hex A, Hex 4, Save and Reset	Default
Enable	Programming Mode, Hex 7, Hex 0, Hex A, Hex 5, Save and Reset	

GS1 DataBar-E AI 94 to Code-128 Tag Data Conversion

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 7, Hex 0, Hex A, Hex 6, Save and Reset	Default
Enable	Programming Mode, Hex 7, Hex 0, Hex A, Hex 7, Save and Reset	

GS1 DataBar-E AI 95 to Interleaved 2 of 5 Tag Data Conversion

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 7, Hex 0, Hex 9, Hex A, Save and Reset	Default
Enable	Programming Mode, Hex 7, Hex 0, Hex 9, Hex B, Save and Reset	

Codabar Tone Length

Selection	Programming Tag Sequence	Setting
0 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex 0, Save and Reset	
15 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex 1, Save and Reset	
30 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex 2, Save and Reset	
45 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex 3, Save and Reset	
60 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex 4, Save and Reset	
75 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex 5, Save and Reset	Default
90 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex 6, Save and Reset	
105 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex 7, Save and Reset	
120 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex 8, Save and Reset	
135 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex 9, Save and Reset	
150 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex A, Save and Reset	
165 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex B, Save and Reset	
180 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex C, Save and Reset	
195 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex D, Save and Reset	
210 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex E, Save and Reset	
225 ms	Programming Mode, Hex 7, Hex 4, Hex 3, Hex F, Save and Reset	

Codabar Tone Frequency

Selection	Programming Tag Sequence	Setting
702 Hz	Programming Mode, Hex 7, Hex 4, Hex 4, Hex 0, Save and Reset	
781 Hz	Programming Mode, Hex 7, Hex 4, Hex 4, Hex 1, Save and Reset	
868 Hz	Programming Mode, Hex 7, Hex 4, Hex 4, Hex 2, Save and Reset	
961 Hz	Programming Mode, Hex 7, Hex 4, Hex 4, Hex 3, Save and Reset	
1071 Hz	Programming Mode, Hex 7, Hex 4, Hex 4, Hex 4, Save and Reset	Default
1187 Hz	Programming Mode, Hex 7, Hex 4, Hex 4, Hex 5, Save and Reset	
570 Hz	Programming Mode, Hex 7, Hex 4, Hex 4, Hex 6, Save and Reset	
633 Hz	Programming Mode, Hex 7, Hex 4, Hex 4, Hex 7, Save and Reset	

Codabar Tone

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 7, Hex 4, Hex 5, Hex 0, Save and Reset	Default
Enable	Programming Mode, Hex 7, Hex 4, Hex 5, Hex 1, Save and Reset	

Codabar Halves

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 7, Hex 4, Hex 5, Hex 2, Save and Reset	Default
Enable	Programming Mode, Hex 7, Hex 4, Hex 5, Hex 3, Save and Reset	

Codabar Stitch

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 7, Hex 4, Hex 5, Hex 4, Save and Reset	Default
Enable	Programming Mode, Hex 7, Hex 4, Hex 5, Hex 5, Save and Reset	

Codabar Require Start/Stop Match

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 6, Hex B, Hex 2, Hex 0, Save and Reset	Default
Enable	Programming Mode, Hex 6, Hex B, Hex 2, Hex 1, Save and Reset	

Codabar Require Quiet Zones

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 6, Hex B, Hex 2, Hex 2, Save and Reset	Default
Enable	Programming Mode, Hex 6, Hex B, Hex 2, Hex 3, Save and Reset	

Note: Ensure that this sequence is set to **Enable** if Codabar is programmed to read very short tags (tags with less than 4 data characters). This programmable prevents getting a very short Codabar tag from another barcode type or from package graphics.

Codabar Start/Stop Transmission

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 6, Hex B, Hex 2, Hex 5, Save and Reset	Default
Enable	Programming Mode, Hex 6, Hex B, Hex 2, Hex 4, Save and Reset	

Selection	Programming Tag Sequence	Setting
abcd	Programming Mode, Hex 6, Hex B, Hex 1, Hex 0, Save and Reset	Default
ABCD	Programming Mode, Hex 6, Hex B, Hex 1, Hex 1, Save and Reset	
tn*e	Programming Mode, Hex 6, Hex B, Hex 1, Hex 2, Save and Reset	
TN*e	Programming Mode, Hex 6, Hex B, Hex 1, Hex 3, Save and Reset	

Codabar Hard Correlation

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 6, Hex B, Hex 2, Hex 6, Save and Reset	Default
Enable	Programming Mode, Hex 6, Hex B, Hex 2, Hex 7, Save and Reset	

Number of Codabar Overlaps Required

Selection	Programming Tag Sequence
1 overlap	Programming Mode, Hex 6, Hex B, Hex A, Hex 1, Save and Reset
2 overlaps	Programming Mode, Hex 6, Hex B, Hex A, Hex 2, Save and Reset
3 overlaps	Programming Mode, Hex 6, Hex B, Hex A, Hex 3, Save and Reset
4 overlaps	Programming Mode, Hex 6, Hex B, Hex A, Hex 4, Save and Reset

Number of Codabar Scans Required

Selection	Programming Tag Sequence	Setting
1 scan	Programming Mode, Hex 6, Hex B, Hex 6, Hex 1, Save and Reset	Default
2 scans	Programming Mode, Hex 6, Hex B, Hex 6, Hex 2, Save and Reset	
3 scans	Programming Mode, Hex 6, Hex B, Hex 6, Hex 3, Save and Reset	
4 scans	Programming Mode, Hex 6, Hex B, Hex 6, Hex 4, Save and Reset	

Number of Coupon Scans Required

Selection	Programming Tag Sequence
0 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex 0, Save and Reset
1 scan	Programming Mode, Hex 6, Hex B, Hex 0, Hex 1, Save and Reset
2 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex 2, Save and Reset
3 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex 3, Save and Reset
4 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex 4, Save and Reset
5 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex 5, Save and Reset
6 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex 6, Save and Reset
7 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex 7, Save and Reset
8 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex 8, Save and Reset
9 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex 9, Save and Reset
10 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex A, Save and Reset
11 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex B, Save and Reset
12 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex C, Save and Reset
13 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex D, Save and Reset
14 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex E, Save and Reset
15 scans	Programming Mode, Hex 6, Hex B, Hex 0, Hex F, Save and Reset

Number of UPC/EAN Scans Required

Selection	Programming Tag Sequence
1 scan	Programming Mode, Hex 6, Hex B, Hex 3, Hex 1, Save and Reset
2 scans	Programming Mode, Hex 6, Hex B, Hex 3, Hex 2, Save and Reset
3 scans	Programming Mode, Hex 6, Hex B, Hex 3, Hex 3, Save and Reset
4 scans	Programming Mode, Hex 6, Hex B, Hex 3, Hex 4, Save and Reset

Number of Code 39 Scans Required

Selection	Programming Tag Sequence
1 scan	Programming Mode, Hex 6, Hex B, Hex 4, Hex 1, Save and Reset
2 scans	Programming Mode, Hex 6, Hex B, Hex 4, Hex 2, Save and Reset
3 scans	Programming Mode, Hex 6, Hex B, Hex 4, Hex 3, Save and Reset
4 scans	Programming Mode, Hex 6, Hex B, Hex 4, Hex 4, Save and Reset

Number of Code 128 Scans Required

Selection	Programming Tag Sequence
1 scan	Programming Mode, Hex 6, Hex B, Hex 7, Hex 1, Save and Reset
2 scans	Programming Mode, Hex 6, Hex B, Hex 7, Hex 2, Save and Reset
3 scans	Programming Mode, Hex 6, Hex B, Hex 7, Hex 3, Save and Reset
4 scans	Programming Mode, Hex 6, Hex B, Hex 7, Hex 4, Save and Reset

Number of Code 39 Overlaps Required

Selection	Programming Tag Sequence
1 overlap	Programming Mode, Hex 6, Hex B, Hex 9, Hex 1, Save and Reset
2 overlaps	Programming Mode, Hex 6, Hex B, Hex 9, Hex 2, Save and Reset
3 overlaps	Programming Mode, Hex 6, Hex B, Hex 9, Hex 3, Save and Reset
4 overlaps	Programming Mode, Hex 6, Hex B, Hex 9, Hex 4, Save and Reset

Number of Minimum Code 39 Characters in Code 39 Partial

Selection	Programming Tag Sequence
2 characters	Programming Mode, Hex 6, Hex B, Hex C, Hex 2, Save and Reset
3 characters	Programming Mode, Hex 6, Hex B, Hex C, Hex 3, Save and Reset
4 characters	Programming Mode, Hex 6, Hex B, Hex C, Hex 4, Save and Reset
5 characters	Programming Mode, Hex 6, Hex B, Hex C, Hex 5, Save and Reset
6 characters	Programming Mode, Hex 6, Hex B, Hex C, Hex 6, Save and Reset
7 characters	Programming Mode, Hex 6, Hex B, Hex C, Hex 7, Save and Reset
8 characters	Programming Mode, Hex 6, Hex B, Hex C, Hex 8, Save and Reset
9 characters	Programming Mode, Hex 6, Hex B, Hex C, Hex 9, Save and Reset

Number of Code 128 Overlaps Required

Selection	Programming Tag Sequence
1 overlap	Programming Mode, Hex 6, Hex B, Hex D, Hex 1, Save and Reset
2 overlaps	Programming Mode, Hex 6, Hex B, Hex D, Hex 2, Save and Reset
3 overlaps	Programming Mode, Hex 6, Hex B, Hex D, Hex 3, Save and Reset
4 overlaps	Programming Mode, Hex 6, Hex B, Hex D, Hex 4, Save and Reset

Number of Minimum Interleaved 2 of 5 Characters in Interleaved 2 of 5 Partial

Selection	Programming Tag Sequence
2 characters	Programming Mode, Hex 6, Hex B, Hex E, Hex 2, Save and Reset
3 characters	Programming Mode, Hex 6, Hex B, Hex E, Hex 3, Save and Reset
4 characters	Programming Mode, Hex 6, Hex B, Hex E, Hex 4, Save and Reset
5 characters	Programming Mode, Hex 6, Hex B, Hex E, Hex 5, Save and Reset
6 characters	Programming Mode, Hex 6, Hex B, Hex E, Hex 6, Save and Reset
7 characters	Programming Mode, Hex 6, Hex B, Hex E, Hex 7, Save and Reset
8 characters	Programming Mode, Hex 6, Hex B, Hex E, Hex 8, Save and Reset
9 characters	Programming Mode, Hex 6, Hex B, Hex E, Hex 9, Save and Reset

Number of Minimum Code 128 Characters in Code 128 Partial

Selection	Programming Tag Sequence	Setting
4 characters	Programming Mode, Hex 6, Hex B, Hex F, Hex 4, Save and Reset	
5 characters	Programming Mode, Hex 6, Hex B, Hex F, Hex 5, Save and Reset	
6 characters	Programming Mode, Hex 6, Hex B, Hex F, Hex 6, Save and Reset	
7 characters	Programming Mode, Hex 6, Hex B, Hex F, Hex 7, Save and Reset	
8 characters	Programming Mode, Hex 6, Hex B, Hex F, Hex 8, Save and Reset	
9 characters	Programming Mode, Hex 6, Hex B, Hex F, Hex 9, Save and Reset	

Command-type Disable

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 6, Hex 7, Hex 8, Save and Reset	Default
Enable	Programming Mode, Hex 6, Hex 7, Hex 9, Save and Reset	

Ignore RS-232 Commands from Host Terminal

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 7, Hex 0, Hex A, Hex 0	Default
Enable	Programming Mode, Hex 7, Hex 0, Hex A, Hex 1	

GS1 DataBar Coupon Support

Selection	Programming Tag Sequence	Setting
Enable	Programming Mode, Hex 7, Hex 1, Hex C, Save and Reset	Default
Disable	Programming Mode, Hex 7, Hex 1, Hex D, Save and Reset	

GS1 DataBar AI 8110 coupons

GS1 DataBar 8110

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 7, Hex 1, Hex 0, Save and Reset	Default
Enable	Programming Mode, Hex 7, Hex 1, Hex 1, Save and Reset	

GS1 DataBar-E AI 8110

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 7, Hex 1, Hex 2, Save and Reset	Default
Enable	Programming Mode, Hex 7, Hex 1, Hex 3, Save and Reset	

EAN-13 98 coupons

Selection	Programming Tag Sequence	Setting
Enable	Programming Mode, Hex 7, Hex 1, Hex 8, Save and Reset	Default
Disable	Programming Mode, Hex 7, Hex 1, Hex 9, Save and Reset	

EAN-13 99 coupons

Selection	Programming Tag Sequence	Setting
Enable	Programming Mode, Hex 7, Hex 1, Hex A, Save and Reset	Default
Disable	Programming Mode, Hex 7, Hex 1, Hex B, Save and Reset	

Scanner Power-On State

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 8, Hex 0, Hex 1, Save and Reset	
Enable	Programming Mode, Hex 8, Hex 0, Hex 0, Save and Reset	Default

ASCII Code Chart

00	NULL	10	DLE	20	SP	30	0	40	@	50	P	60		70	p
01	SOH	11	DC1	21	!	31	1	41	A	51	Q	61	a	71	q
02	STX	12	DC2	22	"	32	2	42	B	52	R	62	b	72	r
03	ETX	13	DC3	23	#	33	3	43	C	53	S	63	c	73	s
04	EOT	14	DC4	24	\$	34	4	44	D	54	T	64	d	74	t
05	ENQ	15	NAK	25	%	35	5	45	E	55	U	65	e	75	u
06	ACK	16	SYN	26	&	36	6	46	F	56	V	66	f	76	v
07	BEL	17	ETB	27	'	37	7	47	G	57	W	67	g	77	w
08	BS	18	CAN	28	(38	8	48	H	58	X	68	h	78	x
09	HT	19	EM	29)	39	9	49	I	59	Y	69	i	79	y
0A	LF	1A	SUB	2A	*	3A	:	4A	J	5A	Z	6A	j	7A	z
0B	VT	1B	ESC	2B	+	3B	;	4B	K	5B	[6B	k	7B	{
0C	FF	1C	FS	2C	,	3C	<	4C	L	5C	\	6C	l	7C	
0D	CR	1D	GS	2D	-	3D	=	4D	M	5D]	6D	m	7D	}
0E	S0	1E	RS	2E	.	3E	>	4E	N	5E	^	6E	n	7E	~
0F	S1	1F	US	2F	/	3F	?	4F	O	5F	_	6F	o	7F	DEL

R0040

Special Programming

Some of the 7878 features require programming that is somewhat different than the normal programming. The following sections describe the Special Programming options.

Set Current Parameters to Default Values

The 7878 comes from the factory with specific default values already determined for the various programming parameters. Sometimes other default values are desired. This function permits the current parameter settings to be stored as soft default values. When this is done, scanning the **Default** tag sets the parameters to these values rather than the factory defined values.

Enable Soft Defaults

Scan the following sequence of programming tags.

1. **Diagnostic Mode, Hex 5, and Hex E**—sets current parameters as soft defaults
2. **Program Mode, Hex 3, Hex 4, and Hex E**—enables Soft Default option
3. **Save and Reset**—saves the program change

One of three voice messages is given.

- "Set New Default Parameter"—If any defaults were changed, followed by "Save and Reset Next"—to save the new soft default values
 - "No Default Parameter Change"—If there are no changes to the current default parameters
 - "Error Full Parameter Change Buffer"—If too many default changes are attempted. An error tone also sounds
4. **Save and Reset**—saves the new soft defaults

Disable Soft Defaults

To have the **Default** tag set program parameters to factory defined values, disable the Soft Default option. Do this by scanning the following tags.

1. **Program Mode, Hex 3, Hex 4, and Hex 0**—disable Soft Default option
2. **Save and Reset**—saves the program change
3. **Default**—sets the program to default values

Convert UPC–E Tags to EAN–13 Tags

UPC–E tags can be converted directly to EAN–13 tags. This function is only needed if UPC–A tags are not to be converted to EAN–13 tags. The default is to disable this function.

- Enable Converting UPC–E to EAN–13—**Program Mode, Hex 4, Hex 7, Hex 7, Save and Reset**
- Disable Converting UPC–E to EAN–13—**Program Mode, Hex 4, Hex 7, Hex 6, Save and Reset**

Check Digits on Price Fields

UPC–A and EAN–13 barcodes which begin with a Number System 2 and contain either a 4 or 5 digit price or weight value. To increase the security of reading a price or weight from a bar code symbol, the Check Digit for these special fields is subject to additional scrutiny and mathematical calculations in addition to the standard check digit verification performed on every UPC bar code.

The basic principle of the Check Digit calculation is that each digit position in a price or weight field is assigned a weighing factor. Weighing factors are 2–, 3, 5+, and 5–. Each weighing factor affects the particular calculation for the position concerned. The detailed calculation and method used for calculating this weighing factor is described in the GS1 General Specifications, Section 3, of Version 7.1, specifically 3.A.1.2 Check Digit Calculation for Price/Weight Fields. The scanner can be programmed to enforce this price check for 4 or 5 digit price tags.

Note: If the check digit is encoded incorrectly in the barcode, the scanner will NOT read it. It will be treated as if the bar code does not exist.

Mandatory 4 Digit Price Check

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 3, Hex 3, Hex 6, Save and Reset	Default
Enable	Programming Mode, Hex 3, Hex 3, Hex 7, Save and Reset	

Mandatory 5 Digit Price Check

Selection	Programming Tag Sequence	Setting
Disable	Programming Mode, Hex 3, Hex 3, Hex E, Save and Reset	Default
Enable	Programming Mode, Hex 3, Hex 3, Hex F, Save and Reset	

Enable/Disable Code-128 Partial


When decoding Code 128 using partial scans, sometimes a Decode error is generated. However, several conditions must occur to cause the misread. If having problems reading Code 128 bar codes, try disabling partials.

- Disable Code 128 Partial—**Program Mode, Hex 1, Hex 7, Hex F, Hex 0, and Save and Reset**
- Enable Code 128 Partial—**Program Mode, Hex 1, Hex 7, Hex F, Hex 1, and Save and Reset**

Good Read Tone

The Good Read tone is composed of three elements: volume, frequency (tone), and length. Three different presets, each with a different combination of volume, tone, and tone length settings, are available that permit the Good Read tone to be set by scanning just one sequence of Programming Tags. Preset 0 is the default for this parameter.


Preset 0
Programming Mode
Hex 4
Hex 3
Hex 0
Save and Reset

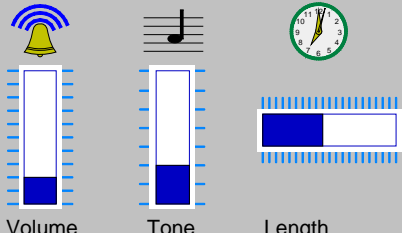

Volume Tone Length

The diagram for Preset 0 shows three settings: Volume is approximately 10% (indicated by a bell icon and a vertical bar with 10% blue fill), Tone is approximately 10% (indicated by a musical note icon and a vertical bar with 10% blue fill), and Length is approximately 10% (indicated by a clock icon and a horizontal bar with 10% blue fill).


Preset 1
Programming Mode
Hex 4
Hex 3
Hex 1
Save and Reset

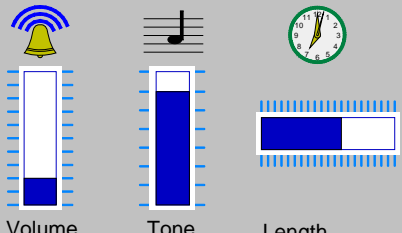

Volume Tone Length

The diagram for Preset 1 shows three settings: Volume is approximately 10% (indicated by a bell icon and a vertical bar with 10% blue fill), Tone is approximately 90% (indicated by a musical note icon and a vertical bar with 90% blue fill), and Length is approximately 10% (indicated by a clock icon and a horizontal bar with 10% blue fill).

Preset 2
Programming Mode
Hex 4
Hex 3
Hex 2
Save and Reset

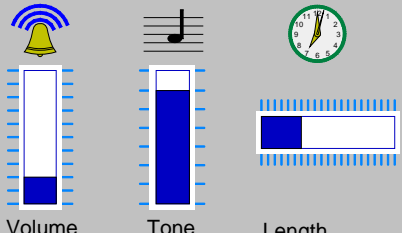

Volume Tone Length

The diagram for Preset 2 shows three settings: Volume is approximately 10% (indicated by a bell icon and a vertical bar with 10% blue fill), Tone is approximately 90% (indicated by a musical note icon and a vertical bar with 90% blue fill), and Length is approximately 10% (indicated by a clock icon and a horizontal bar with 10% blue fill).

GS1 DataBar

GS1 Databar, formerly Reduced Space Symbology (RSS) permits more data to be recorded in a smaller physical space. This is accomplished by encoding the data in large symbol characters rather than encoding each data character separately. Also, no quiet zone is required around the symbols. The 7878 can read four types of GS1 Databar barcodes.

GS1 Databar

GS1 Databar, formerly Reduced Space Symbology (RSS) permits more data to be recorded in a smaller physical space. This is accomplished by encoding the data in large symbol characters rather than encoding each data character separately. Also, no quiet zone is required around the symbols. The 7878 can read four types of GS1 Databar barcodes.


GS1 Databar-14

GS1 Databar-14 is a linear symbology that encodes 14 UCC/EAN digits. This structure provides four segments that can be scanned and decoded separately, then reconstructed. The total symbol contains 96 modules combined into 46 elements (bars and spaces).



GS1 Databar-14 Stacked

GS1 Databar-14 Stacked is a 2-row format. The bottom row is higher than the top row and the two are separated with a separator pattern. The stacked format is used when not enough linear space is available. An example use is marking produce in a grocery store.



GS1 Databar-Expanded

GS1 Databar-Expanded is a variable length linear symbology. It can encode 74 numeric or 41 alpha characters. RSS Expanded can be scanned and decoded in up to 22 segments and then reconstructed



GS1 Databar–Expanded Stacked

GS1 Databar–Expanded Stacked is similar to GS1 Databar–14 Stacked except it uses the GS1 Databar–Expanded format for creating the symbol.



0192 1234 5698 7457 3202 0000 9939 0200 296
19257

Enable/Disable GS1 DataBar

GS1 DataBar permits more data to be recorded in a smaller physical space. The 7878 can be programmed to read GS1 DataBar tags. When programming the GS1 DataBar feature, the programming tags must be the first tags scanned after applying power to the 7878.

- Enable—Program Mode, Hex 1, Hex 8, Hex A, Hex 3, Save and Reset.
- Disable—Program Mode, Hex 1, Hex 8, Hex A, Hex 0, Save and Reset.

Send GS1 DataBar–14 as EAN–13 Data

When enabled, the scanner sends the last 13 digits of the GS1 DataBar–14 data to the host terminal. The **Default** tag does not change this parameter.

- Enable—Program Mode, Hex 6, Hex 0, Hex 5, and Save and Reset.
- Disable—Program Mode, Hex 6, Hex 0, Hex 4, and Save and Reset.

Terminal Coupon Interface Parameters

Certain parameters must be set to permit the unit to transmit coupon data to the host terminal. These are in addition to the general parameters that are required for other scanner/scale functions.

Note: Selection of optional Add–On bar codes may require additional programming.

To set the Coupon Interface Parameters, perform a series of steps in a designated order. First, set the Terminal Coupon Select 1 parameters, and then set the Terminal Coupon Select 2 parameters. Select one of the parameters below to display the procedure.

Terminal Coupon Select 1

1. Scan the **Program Mode** tag.
2. Scan the **Hex 3** and **Hex 8** tags to select this parameter.
3. Scan a **Hex 0** through **Hex F** tag to set a Coupon Select 1 parameter.

Coupon Select 1 Parameter	Disable	Enable
Coupon with P5 optional	Hex 0	Hex 1
Coupon with 128 Add-On optional	Hex 2	Hex 3
Coupon with 128 Add-On mandatory	Hex 4	Hex 5

4. Scan the **Save and Reset** tag to save the program (required).

Note: Repeat steps 1 through 4 to set the second Coupon Select 1 parameter.

Suggested Programming Sequence

- Program Mode
- Hex 3 and Hex 8
- Hex 1
- Save and Reset
- Program Mode
- Hex 3 and Hex 8
- Hex 3

Scan **Program Mode, Hex 1, Hex 7, Hex F, Hex 0,** and **Save and Reset** tags to complete the programming function.

Note: Scanning the **Default** tag resets all options.

Terminal Coupon Select 2

1. Scan the **Program Mode** tag.
2. Scan the **Hex 3** and **Hex D** tags to select this parameter.
3. Scan a **Hex 0** through **Hex 7** tag to set a Coupon Select 2 parameter:

Coupon Select 2 Parameter	Disable	Enable
Coupon and P5 or 128 optional (EAN-99)	Hex 0	Hex 1
Coupon and 128 mandatory (EAN-99)	Hex 2	Hex 3
Markdown Tone	Hex 4	Hex 5
Early Tone for Optional Add-On	Hex 6	Hex 7

4. Scan the **Save and Reset** tag to save the program.

Note: Repeat steps 1 through 4 to set the other option, if needed.

5. Scan **Program Mode, Hex 1, Hex 7, Hex F, Hex 0,** and **Save and Reset** tags to complete the programming function.

Note: Scanning the **Default** tag resets all options.

Voice Messages—Enable/Disable

The 7878 uses voice messages for diagnostics, scale calibration, and clerk messages. If voice messages are enabled, they are heard at the appropriate time; if they are disabled, the beep tones are heard instead. When voice messages are disabled, the 7878 uses the scale display to indicate error conditions. To enable or disable voice messages, scan the following sequence of programming tags. These tags must be the first tags scanned after applying power to the unit.

All Voice Messages Off/On

1. **Program Mode**
2. **Hex 3**
3. **Hex 3**
4. **Hex D**
5. **Save and Reset**

Clerk Messages On

1. **Program Mode**
2. **Hex 3**
3. **Hex 3**
4. **Hex 1**
5. **Save and Reset**

Clerk Messages Off

1. **Program Mode**
2. **Hex 3**
3. **Hex 3**
4. **Hex 0**
5. **Save and Reset**

Note: Because the clerk messages are a subset of the Voice Messages, disabling all voice messages disables the clerk messages also. All Voice Messages must be enabled for the Clerk Messages to be enabled.

Following are the three clerk messages.

- Scale failed, clean under scale deck
- Scale failed, code 5, clean under scale deck
 - Next, do scale calibration
 - Next, change scale
- Scale failed, code 4
 - Stop checkstand mechanical vibration
 - Next, change scale

Voice Volume

To change the volume of the voice (speech) on the 7878, scan the following tags.

- **Program Mode, Hex 5, Hex 7, Hex 0, Save and Reset**—Maximum voice volume
- **Program Mode, Hex 5, Hex 7, Hex 1, Save and Reset**—High voice volume
- **Program Mode, Hex 5, Hex 7, Hex 2, Save and Reset**—Medium voice volume
- **Program Mode, Hex 5, Hex 7, Hex 3, Save and Reset**—Minimum voice volume

Volume Adjust Button

The Volume Adjust Button on the Operator Display Panel changes the Good Read tone volume and frequency (tone). This button can be programmed to work in various ways.

Volume Levels

There are eight standard volume settings in the 7878. However, there is a programming sequence which activates eleven. This gives the operator greater flexibility in selecting the appropriate volume of the Good read Tone. This parameter does not have a default value, however, the 7878 is shipped from the factory with this parameter disabled. The default setting of the 7878 is eight volume levels.

- Enable—**Program Mode, Hex 4, Hex 2, Hex 5, and Save and Reset**
- Disable—**Program Mode, Hex 4, Hex 2, Hex 4, and Save and Reset**

Enable/Disable Volume Adjust Button

Through programming, the Volume Adjust button can be enabled or disabled. If disabled, the Good Read tone volume and tone are set using the various programming tags; and pressing the button does not change the Good Read tone. If the Volume Adjust Button is disabled, be sure to set the volume, tone, and tone length to the desired settings first.

Note: Scanning the **Default** tag enables the Volume Adjust Button.

- Enable—**Program Mode, Hex 3, Hex E, Hex 1, and Save and Reset**
- Disable—**Program Mode, Hex 3, Hex E, Hex 0, and Save and Reset**

Enable Volume Adjust Button

To enable the Volume Adjust button, scan the following sequence of programming tags. These tags must be scanned first after applying power to the 7878.

1. **Program Mode**—puts scanner in the programming mode
2. **Hex 3, Hex E, Hex 1**—enables the Volume Adjust button
3. **Save and Reset**—stores the enabled setting, and then resets the scanner

Disable Volume Adjust Button

If you are happy with the current volume, frequency and tone length, then power cycle the scanner, scan the Program Mode barcode, and go to step 5, below.

Otherwise, scan the following barcodes to change the desired parameter(s):

1. Program Mode – starts the scanner in the programming mode
 - Hex 1, Hex 1 – go to mode for changing Good Tone parameters
 - Hex A, Hex 1 – turns on Good Read tone if was previously turned off.
 (Scanner enters base program mode here).
2. Hex 1, Hex 1 – go to mode for changing Good Tone parameters
 - Hex B – repeatedly scan this tag until you reach the desired tone frequency
 - END – goes back to base program mode
3. Hex 1, Hex 1 – go to mode for changing Good Tone parameters.
 - Hex C – repeatedly scan this tag until you reach the desired tone length
 - END – goes back to base program mode
4. Hex 1, Hex 1 – go to mode for changing Good Tone parameters.
 - Hex D – repeatedly scan this tag until you reach the desired tone volume
 - END – go back to base program mode
5. Hex 3, Hex E, Hex 0 – Disables the volume adjust button
6. Save & Reset tag – Stores the Good Tone parameters and the Volume adjust settings.

Scanner then performs a reset after that.

Single Volume Adjust Barcode

There is a single Volume Adjustment barcode in the Programming Tag booklet, NCR Scanner Programming Tags (BST0-2121-74) available at <http://www.ncr.com>. (The tags are also included in Appendix A of this document.). This barcode functions exactly in the same manner as pressing the volume adjust button, except the disable Volume Adjust Button sequence has no effect when reading this barcode. The volume obtained by using this barcode is temporary. That is, if used outside a Program Mode/Save & Reset sequence, the original programmed volume level will return when the scanner is power cycled. But if the Volume Adjustment barcode is scanned within a Program Mode/Save&Reset sequence, or the Reset barcode from the booklet is scanned, the volume is saved as if it had been changed by using Worksheet 11.

Window Maintenance Indicator

The Window Maintenance Indicator can be set to flash or not flash when lit. Scan the following sequence of Programming Tags to set this parameter; the default setting is to flash. These must be the first tags scanned after applying power to the 7878.

- Enable Flashing—**Program Mode, Hex 4, Hex 0, Hex A, and Save and Reset**
- Disable Flashing—**Program Mode, Hex 4, Hex 0, Hex B, and Save and Reset**

PACESETTER Functions

The PACESETTER function increases the performance of the 7878. It can also identify and fix certain bar code problems. Two versions of PACESETTER are available. PACESETTER III is a standard feature on the 7878.

PACESETTER III

The PACESETTER III feature of the 7878 Scanner performs many functions that improve the efficiency of the scanner. It determines what is wrong with a bar code and then fixes it. It also keeps track of problems found.

PACESETTER III also detects, corrects, and reports errors discovered in UPC Number System Two and Number System Four labels. These two label types are printed in the store and account for a significant number of unreadable labels due to failures of the in-store printing mechanism. PACESETTER III looks for errors in these labels and learns from each attempted scan. After seeing a particular printing error a number of times, PACESETTER III may determine that an error is present in the label and that the error may be correctable. If the correction capability of PACESETTER III is enabled, the scanner attempts an error-free correction of the label and passes the results to the host terminal. Whenever an error-free correction is not possible, PACESETTER III does not pass label data to the host terminal.

Firmware Flashing

Firmware flashing permits updates to be installed to the scanner firmware without replacing the actual chip on the Digital Board. The 7878 must be connected to a PC through an RS-232 cable or USB cable. Also, the PC must contain the NCR RealScan Scanner Tool Suite and the new scanner firmware file.

Obtaining the Utility and New Firmware

New firmware for the 7878 is available on the NCR web site. It is flashed to the 7878 using the NCR RealScan Scanner Tool Suite. No version of the 7878 scanner will use the older EasyFlash utility.

Acquiring and Installing the RealScan Scanner Flash Tool for Windows

1. Go to <http://www.ncr.com> (Support→Drivers and Patches→Retail Support Files→NCR RealScan and NCR SelfServ Peripherals→Scanners/Scale.
2. Download the items under the RealScan Scanner FLASH Tool for Windows (all SA and PXA Scanners) and put the downloaded items in a temporary directory on your hard drive, or you can install the tool directly from the website.

Note: If you run the installer from website, a message will display saying “The publisher could not be verified. Are you sure you want to run this software”, Select **Run** to continue.

3. Run the NCR Flash Tool installer.

A GUI install wizard will display. Follow the Next button, and accept the User Agreement. Allow for a FULL install (default), and select Next, then select Install to start the installation.

Select Exit when installation is finished.

Note: The NCR Flash Tool and all its components will be located at C:\Program Files\NCR\RealScan\NCRRSFlash directory, and a shortcut to the Flash Tool application will be placed on your desktop.

Acquiring Firmware

Download the desired firmware from the same website. There will be a list of the currently released firmware and several older versions. The following is an example.

PXA Scanner Firmware

(7874-xxxx/4xxxx/5xxxx) (7878-xxxx/2xxxx) (7884-xxxx) (7893-xxxx)

Current Firmware for the 7893 (PXA) Scanner

IMPORTANT! --> Do not use a 7892 power brick on a 7893! <--IMPORTANT!



Part Number	Release Date	Download
497-0474868	18 September 2012	0474868.zip

For previous versions of 7893 firmware, click [HERE](#)

Current Firmware for the 7874 (PXA) Scanner



Part Number	Release Date	Download
497-0475101	24 January 2012	0475101.zip Reminder...cannot backflash MINIMUM FIRMWARE VERSION FOR K-150 SUPPORT

For previous versions of 7874 firmware, click [HERE](#)

Download the desired firmware version into the C:\Program Files\NCR\RealScan\NCRRSFlash directory and extract the file to the same directory.

Note: The file extracted will be the actual firmware file with a .bin extension. This is the file that is flashed into the scanner. You cannot flash a .zip file into any scanner.


Identifying Firmware Version

To identify the firmware already in the scanner, scan the **Diagnostic Mode, Hex 4**, and **Hex A** programming tags. These must be the first tags scanned after applying power to the unit. The 7878 gives a voice message containing the 497-xxxxxxx number of its firmware.

Firmware Flashing Procedure


Perform the following procedure to flash firmware on the 7878:

1. Apply power to the 7878.
2. Connect the scanner to the host terminal using an RS-232 cable or USB cable appropriate for 7878 scanner. The RS232 cable is part number 497-0300422 (1416-C019-004), and the USB cable is 497-0445079 (1432-C158-0040).

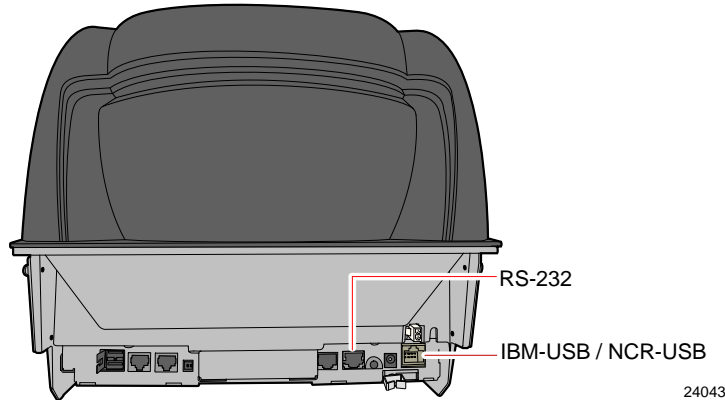


24043


3. Run Flash Tool by double-clicking on the NCR Flash Tool icon on the desktop.
4. Port settings must be configured first before flashing firmware to the scanner. Select **Port Settings** in the main window and select the **Modify INI** button.

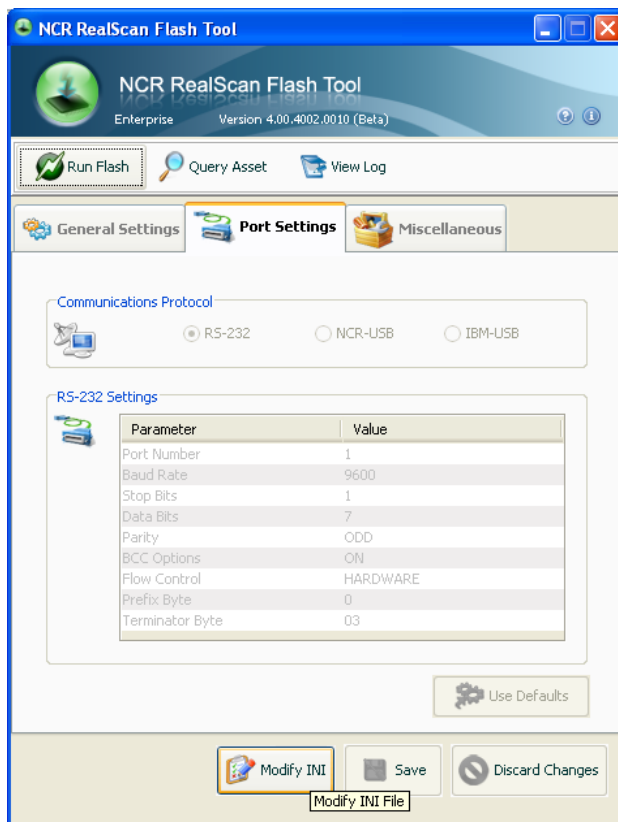


5. Select one of the radio buttons under the Communications Protocol Group within the Port Settings tab. For RS-232 communication protocol, you can configure more settings under the RS-232 Settings group. Right-click on one of the cells in the table to either change the parameter value or restore it to its default value.

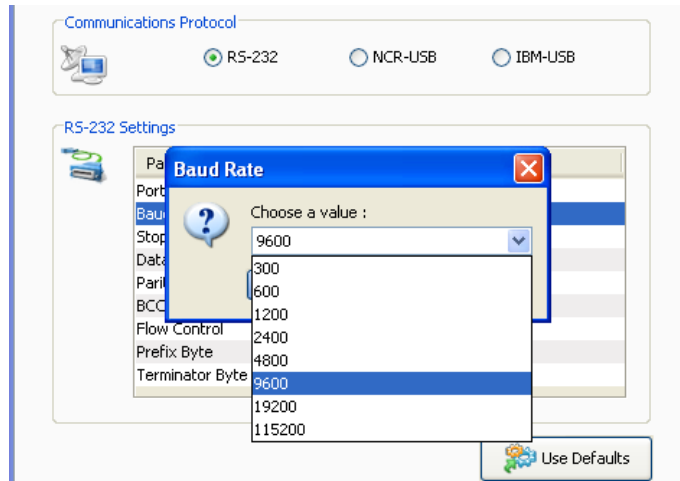


6. Select **Save** after making changes to the settings.




7. Select **Use Defaults** if default settings are preferred. A message box will display informing that all settings will be set to default. Select **Yes** to confirm.



- After configuring the necessary port settings, choose the scanner you want to flash the firmware to.

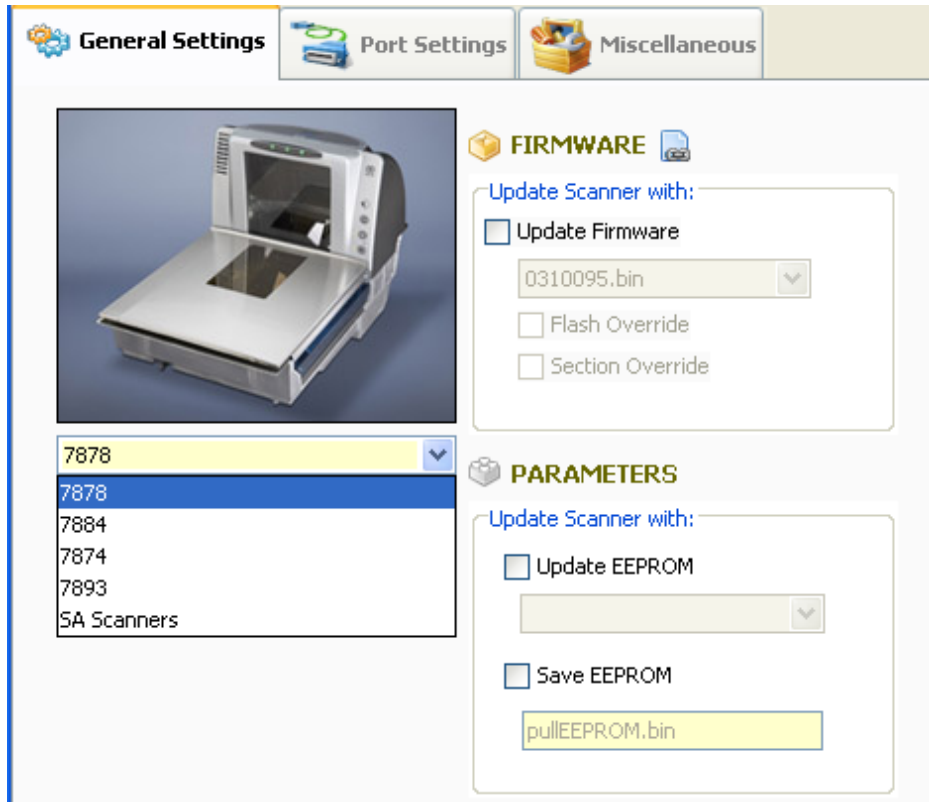


- Select **Modify INI** after a scanner model has been chosen. Select the **Update Firmware** checkbox and choose the firmware BIN file you want to flash to the scanner. For your preference you may enable Flash Override and Section Override by selecting their checkboxes. Select **Save** to save and apply these settings.

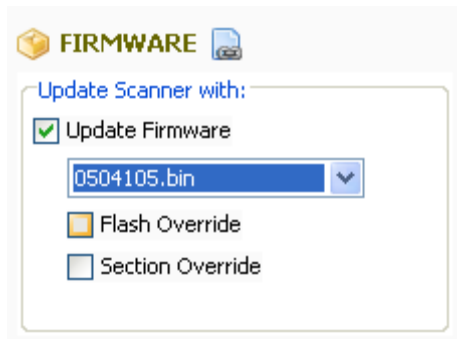

- Select **Run Flash** from the main toolbar to start flashing the firmware to the scanner.



11. The application will initialize communication with the scanner in the port you have specified in the settings. When initialization is successful, the following window will display and show the progress of the flashing process.

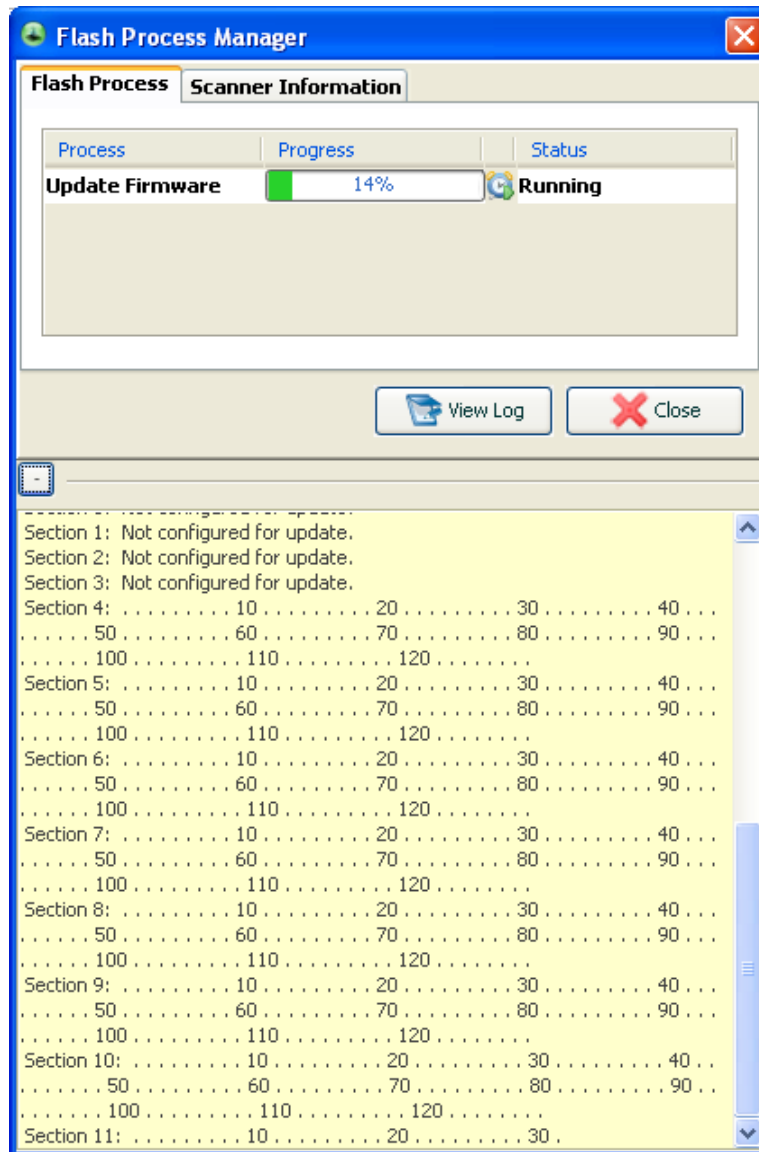

12. Exit the NCR Flash Tool application and disconnect the scanner from the host terminal once firmware flashing is finished.

NCR RealScan Scanner Flash Drive Support

The 7878 supports a flash drive to provide convenient and economic means of scanner service upgrades and initial installations. The flash drive support capabilities are similar to the capabilities currently provided by the scanner remote flash update and configuration tools NCR RealScan Scanner Flash Tool. The major difference being that the required scanner support files will exist on the flash drive rather than on a PC, laptop, or back office controller which requires a transfer to the scanner over a cable.

Servicing or installing a scanner by flash drive is not a remote operation. A technician will be needed on-site to attach the flash drive to the scanner. A flash drive firmware upgrade is the fastest available means for upgrading the firmware of a scanner.

The scanner flash drive support files includes an INI file (created by the NCR RealScan Scanner Flash Drive Prep Tool) that informs the scanner what tasks are to be performed, a firmware flash file for upgrading a scanner to a particular version, and a configuration file to configure a scanner for a particular end-user.

The scanner flash drive support files will be downloaded to the flash drive using the internet at the site currently used to download flash update files and tools (excluding the configuration file which is customer specific).

The following are the brands of flash drives (memory sticks, thumb drives, flash keys, jump drives) that have been tested by NCR.

Service Tool: Imation 1 GB, 603-9014783

Other Drives tested (but not guaranteed) by NCR:

- Memorex USB 2.0 Traveldrive 512MB
- Memorex USB 2.0 Traveldrive 1GB
- Lexar Jumpdrive JDS128 128 MB
- SanDisk Cruzer Micro 2 GB
- SanDisk Titanium 4 GB
- Kingston DataTraveler 1 GB
- Transcend JetFlash 2 GB
- Imation 1GB
- SanDisk Cruzer Micro 2 GB
- NCR 603-9014783 Flash drive (1GB, Imation Pivot model 18408)
- PQI 2GB
- Kingston DataTraveler 1GB
- Transcend JetFlash 2GB
- Kingston MicroSD w/ adapter 512MB

NCR RealScan Scanner Flash Drive Prep Tool

In order to minimize the need for a PC at the scanner site, The Flash Drive Prep Tool preps a flash drive so that the scanner could understand its contents and performs the tasks defined inside the device prepared by the host terminal software. This flash drive could then be taken to each scanner to perform its tasks without changing anything on the flash drive in between scanners.

All of the processes involved in setting communication parameters and running applications is replaced by a single flash drive properly configured by the NCR Flash Drive Manager application. The application provides a user interface that displays the options the user can select for their scanners and then prepare the flash drive accordingly.

For more information on how to use the NCR RealScan Scanner Flash Drive Prep Tool, refer to the *NCR RealScan Scanner Tool Suite Guide (B005-0000-1883)* documentation.

Scanner Cloning using Programming Tags

The scanner provides some programming sequences that permit you to clone a unit if the RealScan Scanner Flash Drive Prep Tool was not run before going to the installation site. This requires programming tags.

To clone the scanner parameters with programming tags, perform these steps:

1. Bring a flash drive before going to the site.
2. Select the scanner you want to clone.
3. Perform power cycle on the scanner.

OR

Scan the RESET programming tag.

4. To set up the flash drive, use any of the three sequences:
 - PROGRAM MODE->HEX 7->HEX F->HEX C
 - This sequence clones the firmware and parameters.
 - PROGRAM MODE->HEX 7->HEX F->HEX D
 - This sequence clones Firmware only.
 - PROGRAM MODE->HEX 7->HEX F->HEX E
 - This sequence clones Parameters only.

5. When the scanner says "Insert USB flash drive", insert the flash drive to the USB port of the scanner. The scanner confirms and says "Load program in 3 seconds... 2... 1...0."

If the scanner says "Program tag error", either of these errors occurred:

- Flash drive was not inserted within the time interval.
 - Scanner does not recognize your flash drive. Check the following:
 - Make sure flash drive is in FAT32 or FAT16 format.
 - Make sure the write protect switch of the flash drive is not engaged.
6. The scanner then copies the requested clone data to the flash drive. Wait until it finishes.
 7. When the scanner's LEDs stop flashing violet, wait for five seconds until the beeping sounds stop. Then, remove the flash drive.
 8. Insert the flash drive to the target scanner you want to clone.

The above clone functionality requires the following minimum scanner firmware revision numbers:

- 7884: 497-0460386
- 7878: 497-0461765
- 7874: 497-0459952
- 7893: any

For more information on how to use the NCR RealScan Scanner Flash Drive Prep Tool, refer to the *NCR RealScan Scanner Tool Suite Guide (B005-0000-1883)* documentation.

Chapter 6: Troubleshooting

This chapter contains troubleshooting charts that are designed for locating and correcting certain problems without the aid of a trained technician. If the problem cannot be corrected using these charts, a trained technician can use Scan Doctor to help identify a faulty component.

7878 Diagnostics and Troubleshooting

There are two kinds of diagnostics that run on each scanner unit. The Level 0 Diagnostics run every time the scanner unit is powered up. This determines if the unit is operational. The Operational Diagnostics continuously check laser diode, spinner motor, communications, and barcode reading.

Note: LED 1 may be on the right or the left hand side of your scanner, depending on the scanner model and customer mounting configuration. When asking a remote user for the diagnostic code, consider that they may be reading the code backwards. The codes have been designed so that it is not possible to misinterpret the code when reversed.

Scale Diagnostics

Scale Level 0 Diagnostics are performed on power-up to ensure the scale is operating normally. An error code is displayed on the RealScan 25 Remote Display or Light Bar identifies the problem.

The following table lists the error codes and problems that may be detected by the Level 0 or operational diagnostics:

Note: The scale error code is also displayed on the Remote Scale Display, if one is present.

Scale Troubleshooting Codes

Error Code	Possible Cause	Corrective Action	Light Bar Patterns
1--- 2--- 3---	Out of range calibration error	<ol style="list-style-type: none"> 1. Calibrate scale. 2. If error code persists, check: Scale cables and Power Supply Digital Board Scale Assembly 	Code 1: LED 1 = blue LED 2 = orange LED 3 = orange Code 2: LED 1 = blue LED 2 = orange LED 3 = orange LED 4 = orange Code 3: LED 1 = blue LED 2 = orange LED 3 = orange LED 4 = orange LED 5 = orange
4---	Calibration Switch is pressed for more than 3 seconds	<ol style="list-style-type: none"> 1. Check for objects that interfere with the Calibration Switch. 2. Calibrate scale. 3. If error code persists, have scanner repaired. 	LED 1 = blue LED 2 = red
4---	Possible scale error Internal scale connection problem or unit does not have scale	<ol style="list-style-type: none"> 1. Press Scale Zero button and retry. 2. Verify unit is a scanner/scale. 3. If unit does not have a scale, program for scanner only (Program Mode, Hex 3, Hex 0, Hex 4, & Save and Reset) 4. If error code persists, have scanner repaired. 	LED 1 = blue LED 2 = red
5---	Scale drift	<ol style="list-style-type: none"> 1. Verify that nothing is on the Top Plate. 2. Lift the Top Plate and verify that there are no objects under it. 3. Verify that nothing interferes with the Produce Guard. 4. Press the Scale Zero button. 5. If error code persists, have scanner repaired. 	LED 1 = blue LED 2 = red LED 3 = red
6---	Failure to update program parameters in EEPROM	<ol style="list-style-type: none"> 1. Reset scanner. 2. Calibrate scale. 3. If error code persists, have scanner repaired. 	LED 1 = blue LED 2 = red LED 3 = red LED 4 = red
7---	Error reading program parameters from EEPROM	<ol style="list-style-type: none"> 1. Calibrate scale. 2. If error code persists, have scanner repaired. 	LED 1 = blue LED 2 = red LED 3 = red LED 4 = red LED 5 = red
8---	Scale not exercised properly	<ol style="list-style-type: none"> 1. Press on the scale during calibration process. 2. Keep pressing on the scale until all red LEDs turn to blue. 3. Repeat procedure. 	LED 1 = blue LED 2 = green
9---	Linearity problem	<ol style="list-style-type: none"> 1. Calibrate scale. 2. If error code persists, have scanner repaired. 	LED 1 = blue LED 2 = green LED 3 = green
Scale display is blank	Top Plate or Produce Guard has possible obstruction	<ol style="list-style-type: none"> 1. Press Scale Zero button. 2. Remove interference around edge of Top Plate or Produce Guard and Front Bezel. 3. Remove any foreign objects from under the Top Plate. 	

Scanner Diagnostic Codes

Level 0 diagnostics are run every time the 7878 is powered up. This diagnostic determines if the unit is operational. Level 0 diagnostics are also run when the unit is in Base Programming Mode and when the **Default**, **Save and Reset**, or **Abort** tag is read. Refer to chapter 5 for more information.

Note: LED1 may be on the right or the left hand side of your scanner, depending on the scanner model and customer mounting configuration. When asking a remote user for the diagnostic code, consider that they may be reading the code backwards. The codes have been designed so that it is not possible to misinterpret the code when reversed.

The following table lists the scanner error codes and problems that may be found by the Level 0 or operational diagnostics:

Error Codes	Problem	Suspect Component/s	Light Bar Patterns
2	RAM - Write/Read failure	Digital Board	LED 1 = red LED 2 = orange LED 3 = orange LED 4 = orange
5	Motor - Not running at proper speed	Optics Engine	LED 1 = red LED 2 = blue LED 3 = blue
6	EEPROM - Cannot load contents into memory	Digital Board	LED 1 = red LED 2 = blue LED 3 = blue LED 4 = blue
9	IBM mode - scanner does not detect POS terminal TRMPWR voltage, scanner may still scan or weigh	Cable not connected from Scanner to POS POS not turned on IBM Port problem	LED 1 = red LED 2 = green LED 3 = green
11	Laser - Not turned on	Digital Board Optics Engine	LED 1 = red LED 2 = green LED 3 = green LED 4 = green LED 5 = green
12	ROM - Sum check failure	Digital Board	LED 1 = red LED 2 = red
13	FPGA Failure (missing/failed part)	Digital Board	LED 1 = red LED 2 = red LED 3 = red

Isolating Sensormatic® Problems


Problem	Possible Cause	Corrective Action
Does not deactivate tags	Sensormatic® ScanMax™ Pro Controller not turned on	Check the On/Off switch on the ScanMax™ Pro Controller if it is turned on.
Does not deactivate tags	Faulty Sensormatic® Interlock Cable	Replace Sensormatic® Interlock Cable.
Does not deactivate tags	Faulty Sensormatic® ScanMax™ Antenna or Antenna Cable	Replace Sensormatic® ScanMax™ Antenna or Antenna Cable.
Does not deactivate tags	Faulty Controller	Replace Sensormatic® ScanMax™ Pro Controller.
Red Status Indicator flashes rapidly	Sensormatic® ScanMax™ Pro Controller not turned on	Check the On/Off switch on the ScanMax™ Pro Controller if it is turned on.

Appendix A: Imaging Assembly (K150) Kit

Introduction

This Imaging Assembly (7878–K150) provides imaging capabilities for the NCR RealScan™ 78 Bi–Optic Scanner/Scale (7878).

This chapter explains how to install and program the kit on the scanner.

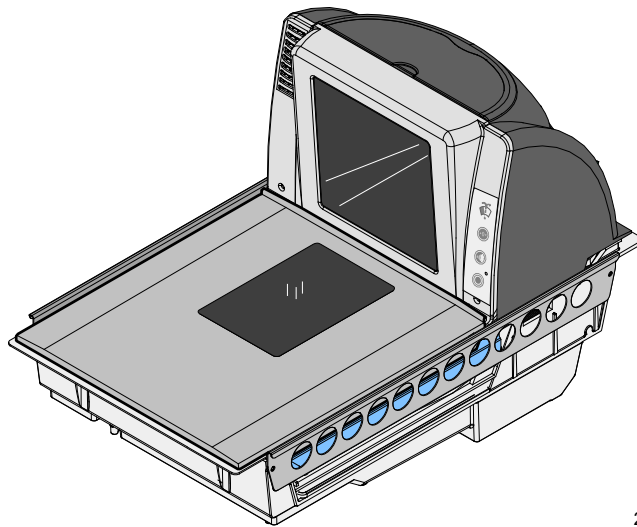


23953

Note: The Imager module used in this kit is the OEM version N56XX Decoded Engine. For more information on the engine, see: *NCR K150/F150 Imaging Module Programming Guide* (B005–0000–2166) at <http://info.ncr.com>.

Kit Components

The 7878–K150 kit provides the following components:

- Imaging Kit Assembly

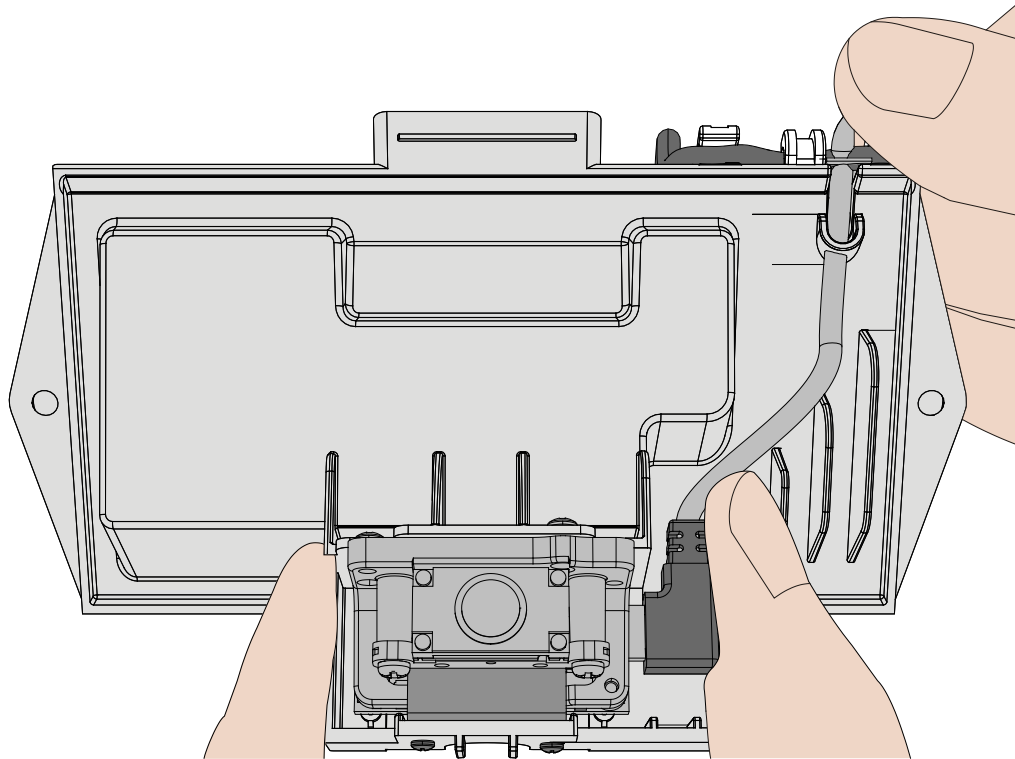

29601

- Static Shielding Bag – 5"x10", Open End
- Instructions–Kit (Reference Sheet) — 497–0423108
- 2 Screws – #6–19 x 3/8" long Plastite Phillips Flat Head — these are spare parts
- Front Bezel, Hybrid

Installation Tools Needed

- Phillips Screw Driver #2
- USB Flash Drive

Software Tools Needed

- Firmware — 497–0472618 or later versions
- NCR Scanner Flash Drive Prep Tool or NCR Scanner Flash Tool

These tools are available for download at the NCR scanner website:

http://www5.ncr.com/support/support_drivers_patches.asp?Class=retail_RealScan

Installation Procedures

Warning: Disconnect the AC power cord before disassembling the Scanner.

Remove External Components (Optics Assembly)


Remove the 7878 components in the following sequence:

1. Top Plate
2. Front Bezel
3. Tower Cover

Note: Refer to the removal procedures of each component found in this document.


Install the Imaging Assembly

1. Remove another cover of the Optics Assembly just behind the Tower Cover by removing the two screws

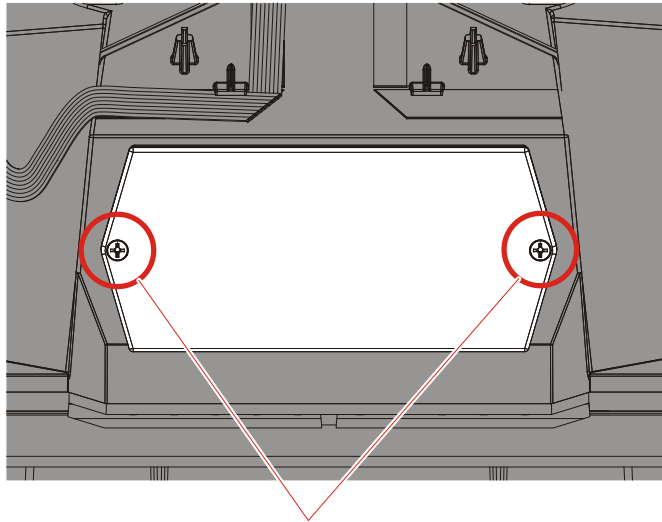


29603

2. Remove and discard the cover.
3. Set aside the screws as you need these upon installation of the Imager Scanner.
4. Holding the Imager, route the Scanner USB Cable along the cable retaining frame.
5. Lock the cable on the top notch. There is a foam gasket that covers the slot; the foam breaks as you press the cable on it.

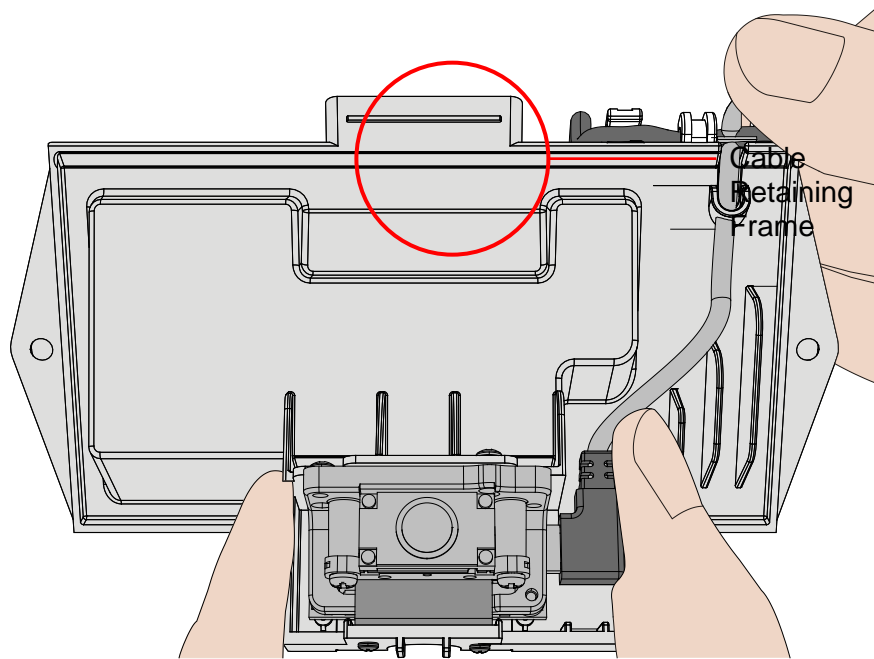


29601

6. Insert the Imager Mount on the Optics Assembly starting with the bottom part of the mount.

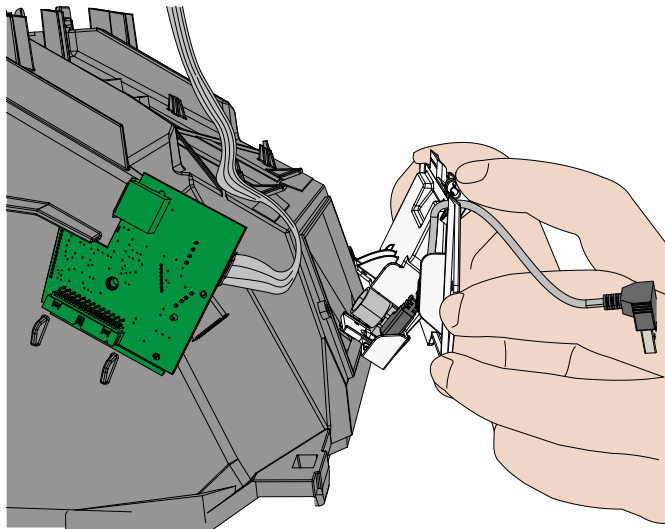


29604

7. Align the holes of the Imager mount with the Optics Assembly mounting holes.

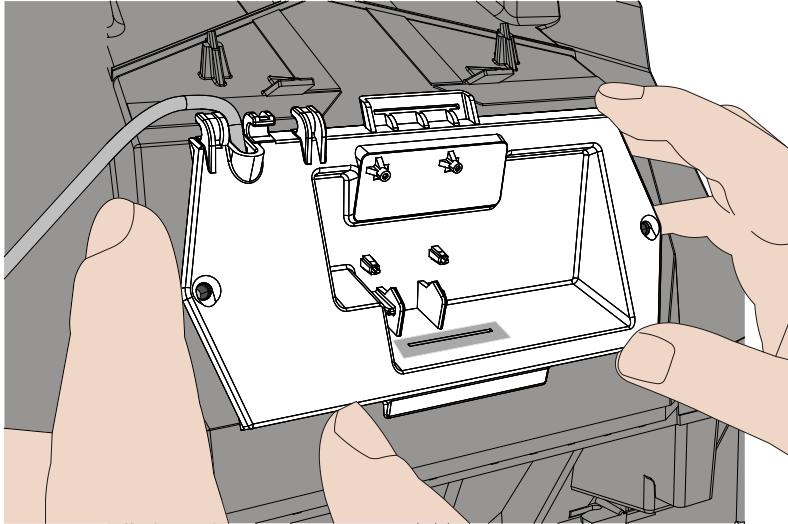


29605

8. Insert the pan head screw to the right mounting hole. Do not tighten yet.

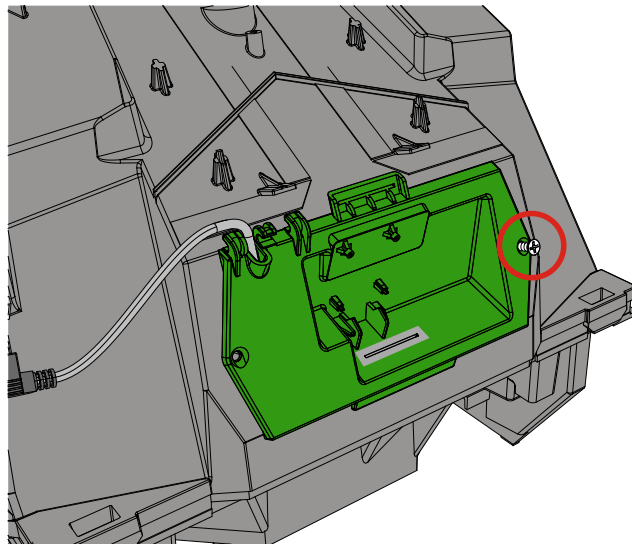


30137

9. Lift the Imager Mount to align its left mounting hole and the Optics Assembly.

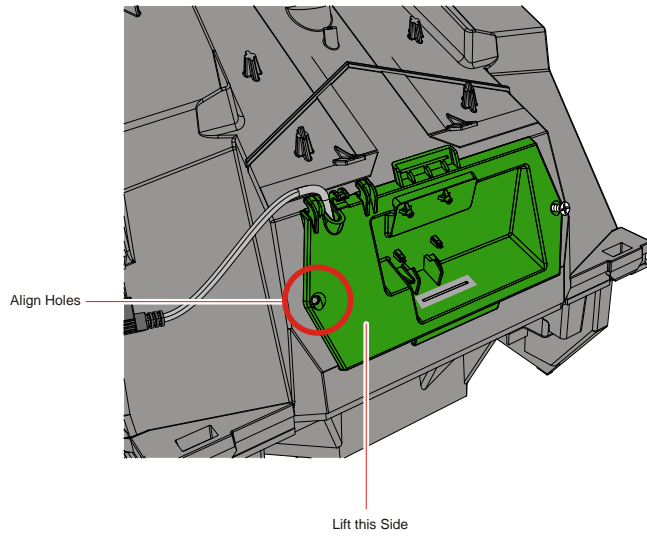


30138

10. Insert the second pan head screw to the left mounting hole.

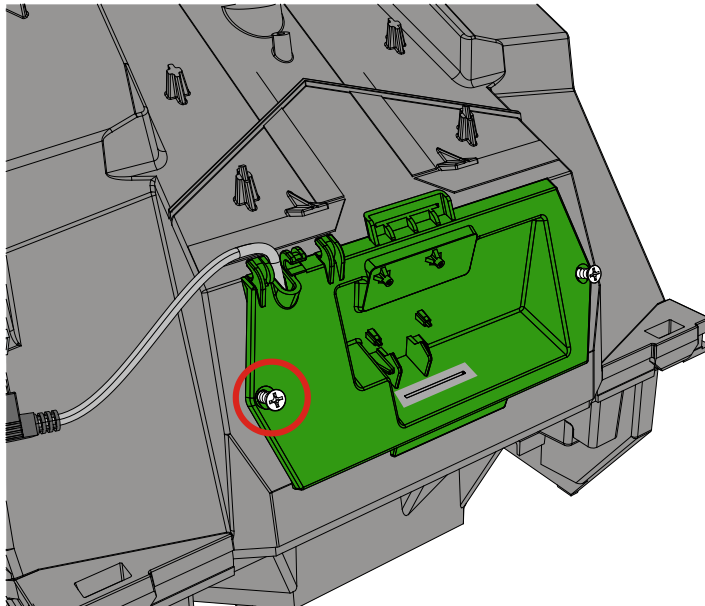

30139


11. Tighten both screws to 6.25 lbs-in.

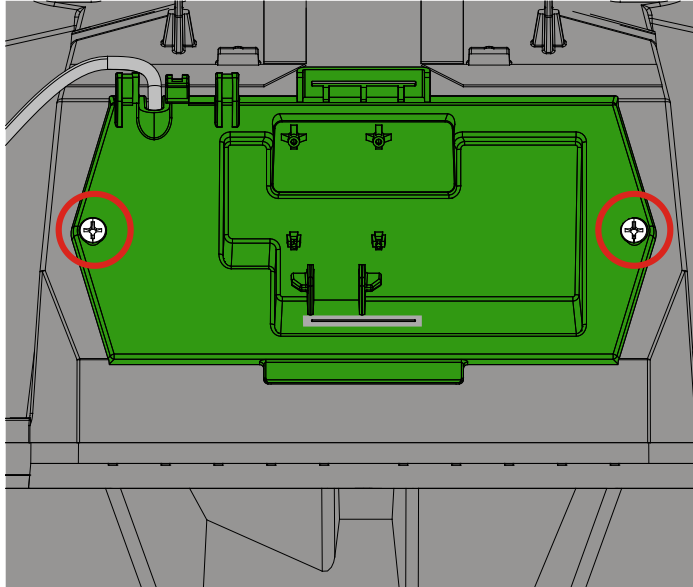

30140

Note: Do not overtighten the screws to avoid breaking the mount. Maintain a space between the mount and the 7878 Optics Assembly; the space also provides a route for the USB cable out of the mount.

12. Connect the scanner USB cable into the lower rear-facing tower USB peripheral port on the Tower Board. Make sure the Imager and its mount are secured to the Optics Assembly.

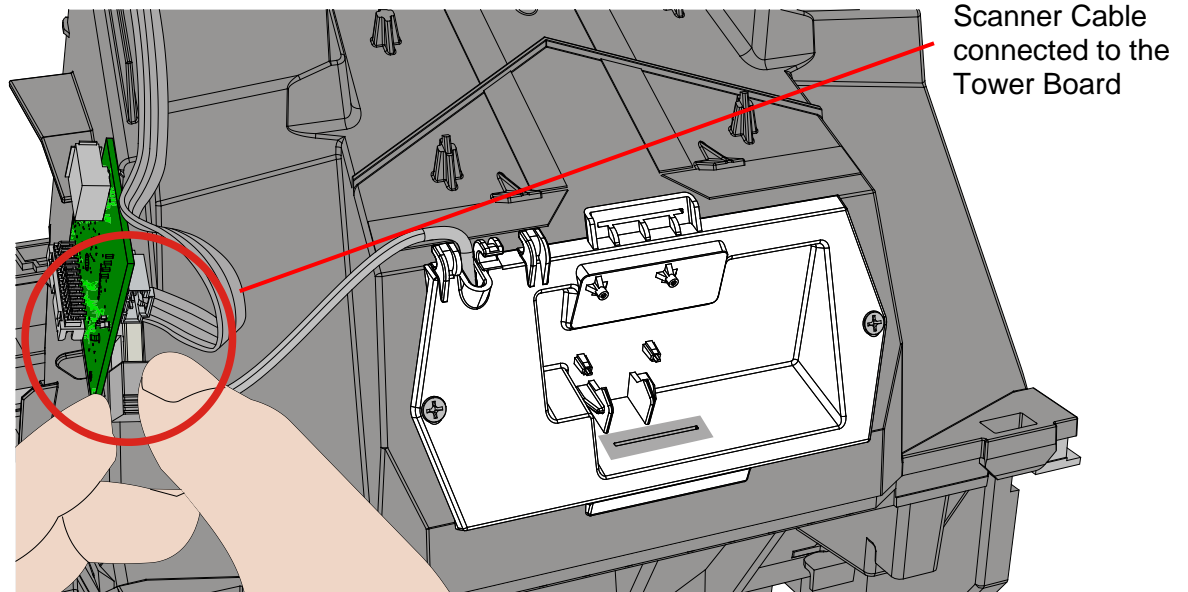

29606

13. Re-install the 7878 components in the following sequence:

- a. Tower Cover
- b. Front Bezel—new Hybrid Front Bezel comes with the K150 package
- c. Top Plate

Note: Refer to the installation procedures of each component found in this document.

Programming Instructions

Imager Module (K150) Firmware Functionalities

The cashier-facing Imager Module (K150) of the 7878 scanner provides several functionalities to interact well with the 7878.

Imager Interlock

The Imager Interlock is a feature of the Imager (K150) that activates whenever both the imager and the laser see the same bar code at the same one time. Only one bar code is sent to the POS by the scanner. This feature must not be confused with the EAS Interlock or Same Item Lockout.

Laser Gate Control

The Laser Gate Control is a configurable feature of the Imager (K150) in which the laser does not enable or activate the imager unless the laser sees activity in the laser scan field.

Note: In the 7878 scanner, this feature is enabled at factory default.

Firmware Requirements

Note: The minimum firmware version is **497-0472618**. Before performing any programming procedures:

1. Make sure to identify the firmware version of your 7878.
2. If the firmware installed on your scanner is not the required version, re-flash the required firmware to the scanner,
 - using a PC or a host terminal — requires Flash Tool
 - using a USB flash drive — requires Flash Drive Prep Tool

For more information, *see* section “Firmware Flashing” in Chapter 5.

Program the 7878 for the Imager Module

The 7878 scanner must be programmed so it can perform the following:

- Beep whenever 7878 receives valid bar code data from the Imager module through the USB host port; by default, the scanner does not beep when the Imager receives bar codes.
- Permit the pass-through of 2D data to the POS
- Enable K150 mode

I M P O R T A N T

The following 7878 programming instructions are ONLY meant to enable the newly installed imager module.

They are NOT intended to be a substitute for the customer's already-programmed parameters.

Do NOT scan the NCR 7878 DEFAULT barcode at any time when installing the Imager Module or the Customer's original parameters will be lost and their scanners will stop working.

To program the 7878 Scanner for the Imager Module, scan the following bar codes:

Programming Mode




Activate Beep sounds during HH input

Hex 4



R0052

Hex 0

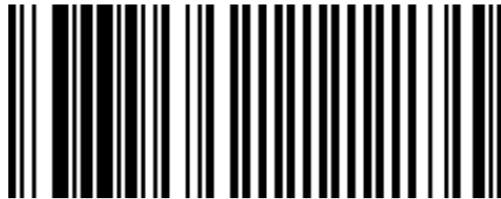

R0048


Hex 5



R0053


Enable 2D Bar Codes Pass-Through

Hex 7

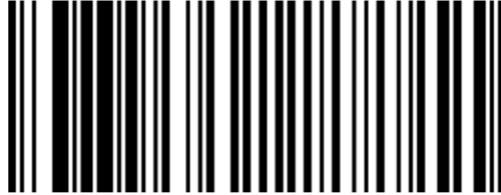

R0055

Hex F

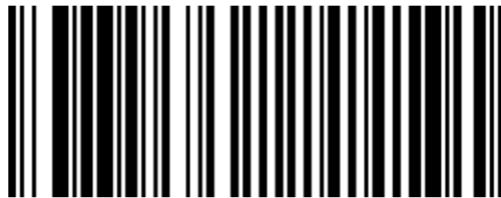

R0063

Hex 9



R0057


Enable the Imager Kit K150

Hex 8



R0056

Hex B

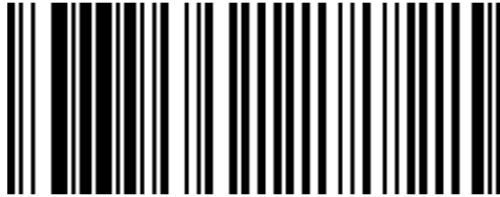

R0059

Hex 1




R0049

Enable 2D Pass-Through Function of all 2D types

Note: The passed-through PDF data is transmitted in ASCII format when RS232 Serial or NCR USB is used. This data format is required by NCR OPOS for 2D barcodes.

Save and Reset

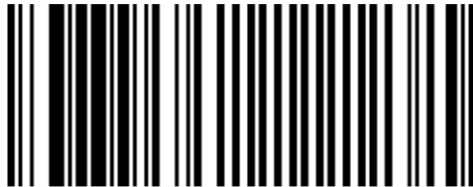

R0044

Program the Imager Module

The Imager only provides a limited number of symbologies enabled from the factory which includes the following:

- **UPC-A**
- **UPC-E**
- **EAN-8**
- **EAN-13**
- **PDF417**
- **GS1 Databar 14 (RSS-14)**
- **GS1 Databar Expanded (RSS-14 Expanded)**
- **GS1 Databar Coupons**

To enable other symbologies, you need to scan the corresponding bar codes in the following pages. Take note of the following reminders when scanning the bar codes.


- Scan the bar codes to the VERTICAL window of the 7878 so that the Imager can see and read them.
- You might need to print and fold these pages in such a way that only one bar code shows per page.
- You do not need to scan all these bar codes, scan the only ones you need.
- There is **NO** audible feedback (beep) when the imager reads the bar code, so hold the programming bar code in front of the 7878 window for a couple of seconds.

- To know if the symbologies are successfully read, scan the sample bar codes found in the section “Sample 2D Symbologies”.


Note: For advanced configurations, see *NCR K150/F150 Imaging Module Programming Guide* (B005-0000-2166) on <http://info.ncr.com>.

Enable other Bar Code Symbologies


Enable DataMatrix

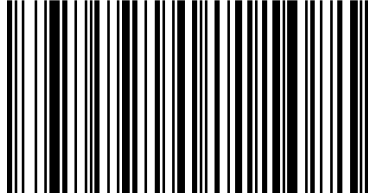

Enable Aztec

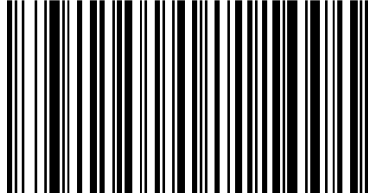


Enable QR Code

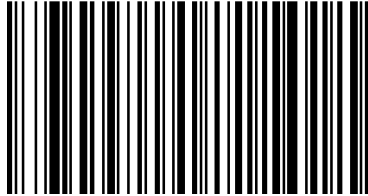


Note: This bar code also enables MicroQR.


Enable MaxiCode

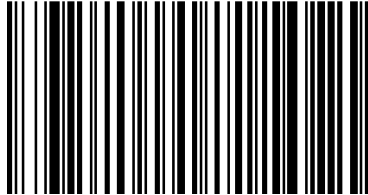


Enable Code 128

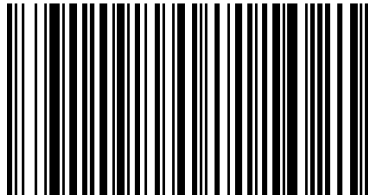


Enable UCC/EAN-128

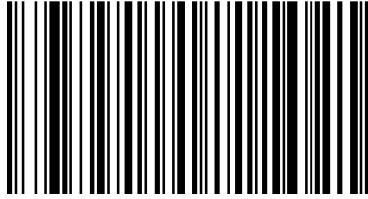

Enable Code 39

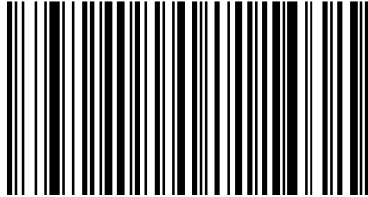

Enable ITF

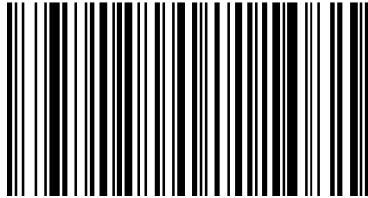

Sample 2D Bar Codes

Sample Aztec
Sample Aztec




Sample DataMatrix
Sample DataMatrix



Sample QR Code




Sample Maxi Code

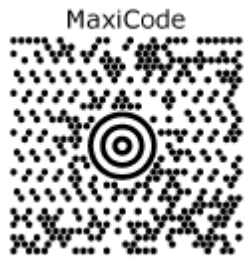

Appendix B: NCR Scanner Programming Tags

Scanner Programming Tags

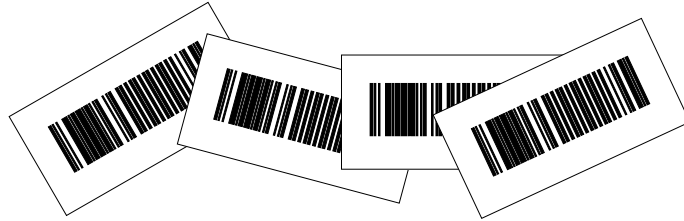

BST0-2121-74 Release O

27064

Volume Adjustment



11817

Reset



11818

Default




R0046

Programming Mode



R0042

End

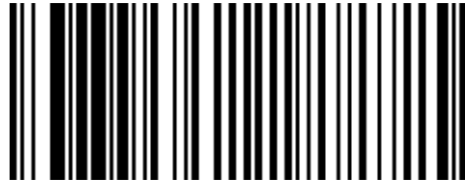

R0043

Save and Reset



R0044

Abort



R0045

Diagnostic Mode



R0041

Speak Scanner Serial Number



Available with firmware version 497 - 0433606 or later.

2278

Speak Barcodes Currently Enabled



Available with firmware version 497 - 0433606 or later.

2276

Mode 1



Slot Scanner (PACESETTER Plus)

11500

Mode 2



Slot Scanner (PACESETTER Plus)

11501

Reset Tallies



Slot Scanner (PACESETTER Plus)

11502


Firmware Flashing



Super ASIC and PXA Models

27581

Hex 0

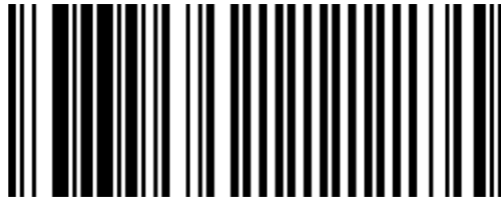


R0048

Hex 1



R0049

Hex 2

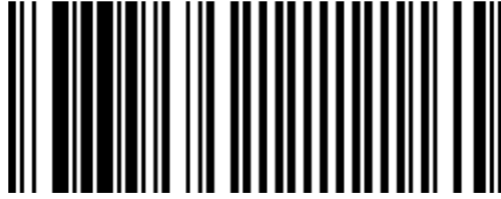


R0050

Hex 3



R0051

Hex 4

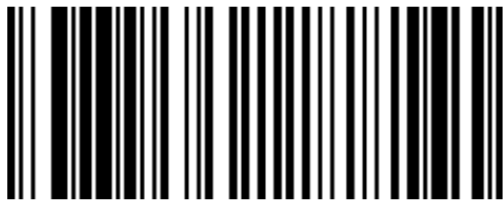

R0052

Hex 5



R0053

Hex 6




R0054

Hex 7




R0055

Hex 8

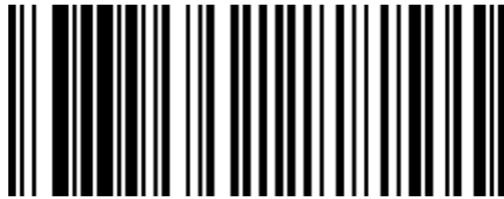


R0056

Hex 9

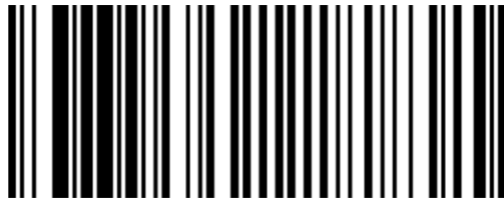

R0057

Hex A

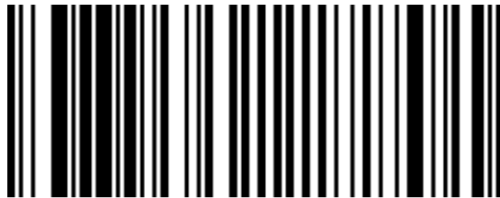

R0058

Hex B




R0059

Hex C



R0060

Hex D

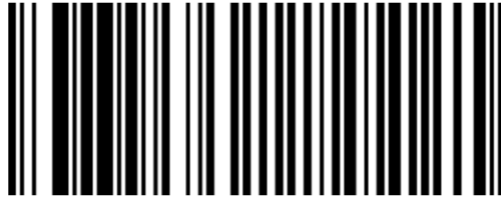

R0061

Hex E



R0062

Hex F



R0063

ASCII Code Chart															
00	NULL	10	DLE	20	SP	30	0	40	@	50	P	60		70	p
01	SOH	11	DC1	21	!	31	1	41	A	51	Q	61	a	71	q
02	STX	12	DC2	22	"	32	2	42	B	52	R	62	b	72	r
03	ETX	13	DC3	23	#	33	3	43	C	53	S	63	c	73	s
04	EOT	14	DC4	24	\$	34	4	44	D	54	T	64	d	74	t
05	ENQ	15	NAK	25	%	35	5	45	E	55	U	65	e	75	u
06	ACK	16	SYN	26	&	36	6	46	F	56	V	66	f	76	v
07	BEL	17	ETB	27	'	37	7	47	G	57	W	67	g	77	w
08	BS	18	CAN	28	(38	8	48	H	58	X	68	h	78	x
09	HT	19	EM	29)	39	9	49	I	59	Y	69	i	79	y
0A	LF	1A	SUB	2A	*	3A	:	4A	J	5A	Z	6A	j	7A	z
0B	VT	1B	ESC	2B	+	3B	;	4B	K	5B	[6B	k	7B	{
0C	FF	1C	FS	2C	,	3C	<	4C	L	5C	\	6C	l	7C	
0D	CR	1D	GS	2D	-	3D	=	4D	M	5D]	6D	m	7D	}
0E	S0	1E	RS	2E	.	3E	>	4E	N	5E	^	6E	n	7E	~
0F	S1	1F	US	2F	/	3F	?	4F	O	5F	_	6F	o	7F	DEL

R0040

Appendix C: Additional Diagnostic Functions

Scale

Note: The following diagnostic functions are available only for SuperASIC firmware dated AFTER January 2007.

DM-4-3 Speak Weight

To enable the scanner to speak the weight shown in the display, scan the **Diagnostic Mode, Hex 4**, and **Hex 3** programming tags. If it is not valid or there is no scale, the scanner will speak "Not Scale".

DM-4-B Speak and Display Calibration Date

Scan the **Diagnostic Mode, Hex 4**, and **Hex B** programming tags to take the calibration date (which must have been previously set by a command) and enable the scanner to speak and display the date in 'C MM.DD.YY' format.

Scanner Service Diagnostics

Service Diagnostics provide tests that are not available in the Power-On Wellness Check or On-Going Wellness Check diagnostics. To access Service Diagnostics, scan the **Diagnostic Mode** tag as the first tag after applying power to the 7878. This causes the 7878 to enter the Base Diagnostic State where specific diagnostic tests are available. Scan the appropriate Hex tags to select a diagnostic test. To end Service Diagnostics, remove power from the 7878.

Note: If the 7878 is connected to a host terminal, the host terminal must be turned off or the interface cable disconnected. The 7878 Status Indicator flashes Red when the 7878 is offline.

The following table identifies the Service Diagnostic tests.

Base Diagnostic State	Hex 3	Communication Protocol
	Hex 4 Hex A	Display Firmware Version
	Hex 2	RS-232 Turnaround
	Hex 1	Toad Test
	Hex 4 Hex 1	Vibration Check

24175

Communication Protocol

Perform the following procedure to determine the communications protocol programmed in your 7878.

1. Scan the **Diagnostic Mode** tag to enter Base Diagnostic state—this must be the first tag scanned after applying power to the 7878.
2. Scan the **Hex 3** tag. The Good Read tone for this tag sounds (three beeps). If the 7878 has the Voice feature enabled, the scanner will speak its communications protocol type.
 - RS-232
 - RS-232 USB
 - IBM 4A
 - IBM 4A USB

Display Firmware Version

This routine displays the version level of the firmware on the 7878 Digital Board. There are no pass/fail points for this routine; it can only be used to read information. Perform the following procedure.

1. Scan the **Diagnostic Mode** tag to enter the Base Diagnostic state—this must be the first tag scanned after applying power to the 7878.
2. Scan the **Hex 4** tag, then the **Hex A** tag to read the firmware version level.
3. At this point, the scanner will begin speaking the firmware version. It will also display this information on a Scale Remote Display, if on is attached. The Scanner will speak “Version Two Scanner 4 9 7 x x x x x x”, where the ‘x x x x x x’ refers to the firmware release number.
4. After taking a note of the firmware version, the scanner must power cycle (power off, then power on) to put it back into operational state.

RS-232 Turnaround

The RS-232 Turnaround test checks the RS-232 interface in the 7878. An RS-232 turnaround plug is needed to run this test.

1. Remove power from the 7878.
2. Install the turnaround plug.
 - Lift the 7878 out of the checkstand and disconnect the Interface cable.
 - Install turnaround plug into the connector where you removed the interface cable.
3. Supply power to the 7878.
4. Scan the **Diagnostic Mode** tag to enter the Base Diagnostic state – must be the first tag scanned after applying power to the 7878.
5. Scan the **Hex 2** tag to start the RS-232 Turnaround test.
 - Test Passes – a Good Read tone is emitted, the scanner will speak “RS232 Passed”, and “232 232” will appear on the remote display
 - Test Fails – no activity
6. Repeat steps 4 and 5 to repeat the test.
7. Remove power from the 7878.
8. Disconnect the turnaround plug.
 - Connect interface cable to connector where you removed the turnaround plug.
 - Set the 7878 into the hole in the checkstand and install the Top Plate.
9. Supply power the 7878.

Possible Bad Component

- Digital Board

Toad Test

The Toad test checks the scanner's ability to read UPC bar codes in various parts of the scan pattern. The test repeats until ended by removing power from the 7878.

1. Scan the **Diagnostic Mode** tag to enter the Base Diagnostic state—must be the first tag scanned after applying power to the 7878.
2. Scan the **Hex 1** tag to enter the Toad test mode.
3. Position a good UPC or EAN tag within the scan pattern.
 - a. The green status Indicator displays and the Good Read tone sounds if the scanner can read the bar code.
 - b. The red status Indicator displays if the scanner cannot read the bar code.
4. Repeat Step 3 for various areas of the scan pattern.
5. Remove power from the 7878 to end this test.

Possible Bad Components

- Optics Engine
- Digital Board

Vibration Check

The Vibration Check tests the level of vibration or movement in the checkstand and scanner/scale. There is no pass/fail point for this test; it can only be used as a diagnostic tool. Perform the following procedure.

1. Remove power from the 7878.
2. If the 7878 does not have a RealScan 25 Remote Customer Display, remove the Tower Cabinet and connect the Field Service Calibration Display to the Scale Display Port on the Digital Board.
3. Apply power to the 7878.
4. Scan the **Diagnostic Mode** tag to enter the Base Diagnostic state—must be first tag scanned after applying power to the 7878.
5. Scan the **Hex 4** tag, then the **Hex 1** tag to enter the Vibration Check test.
6. Place a small weight on the scale (for example, a medium size coin).
7. Watch the display for 10 to 15 seconds and note the range of readings.
8. If the readings vary more than ± 0.001 kg (± 0.004 lb), there may be a problem.

9. If possible, move the 7878 to a known stable location (like the floor) and take measurements again.
 - a. If the readings vary less than they did in the checkstand, the vibration is probably in the checkstand. This could be the result of belt motors, ventilation fans, and so forth.
 - b. If the readings are about the same, the problem could be in the 7878. If you need assistance resolving this problem, contact the Retail Global Support Center.
10. After using this diagnostic check, remove power from the 7878 to end the test.
11. If a Field Service Calibration Display is used, disconnect it and install the Tower Cabinet.

Appendix D: Checkpoint Antenna (K940) Kit

Introduction

The K940 kit contains the Checkpoint® Antenna and Cable, which are installed on the 7878 and 7874 scanners for security purposes.

This kit also includes a washer, which is installed on all 7878 and 7874 scales because of grounding issues.

Kit Components

The table below describes the components that are included in the kit.


Part Number	Description
497-0445250	Assembly –Checkpoint Antenna
497-0439269	Checkpoint Antenna Cable
006-8616045	Metric Zinc-Plated Steel Large-Dia Flat Washer M4 Screw Size, 12mm OD, .9mm-1.1mm Thick

Assembly-Checkpoint® Antenna



32437

Checkpoint® Antenna Cable

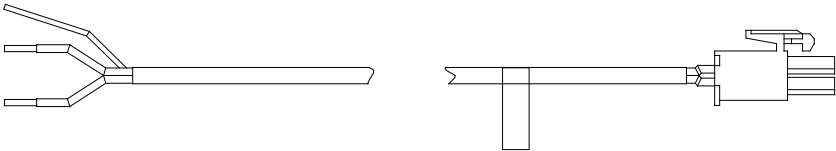

24021

Tools required

- 7878–K940–V005 Checkpoint Cable kit or FRO kit 603–5023408
- #2 Phillips Screwdriver
- Electrical tape (optional)


7878 Checkpoint® Installation Procedure

Warning: Disconnect the AC power cord before disassembling the scanner.

The Checkpoint antenna is installed underneath the front bezel of the 7878 scanner.

Remove the Top Plate


1. Hold the front edge of the Top Plate until your fingers are underneath it .
2. Lift the Top Plate to remove it from the 7878.

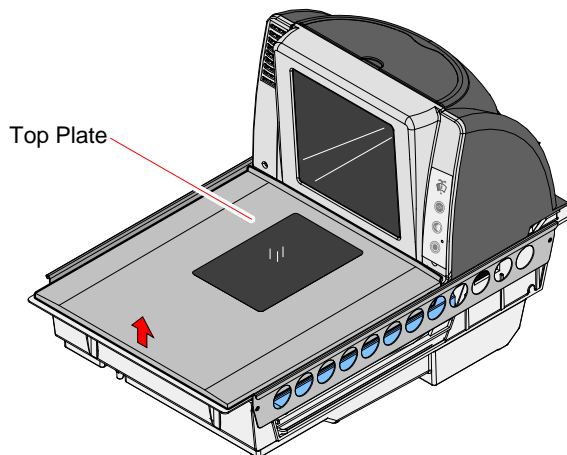

23794


Remove the Front Bezel

1. Place one hand and slightly apply pressure on the top corner of the Bezel and use the other hand to pull the snap features at the bottom.

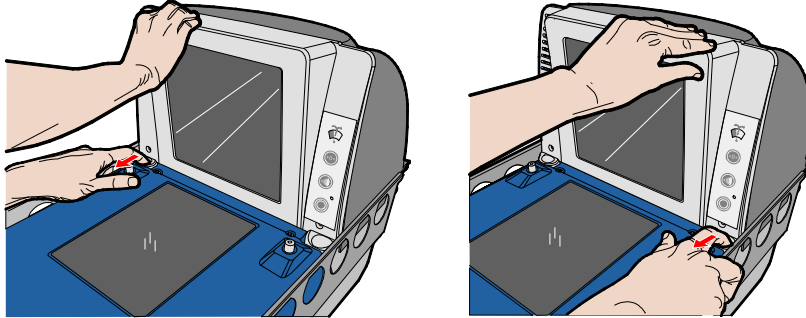

24976


2. Lift the Bezel straight up to remove it from the Inner Tower.

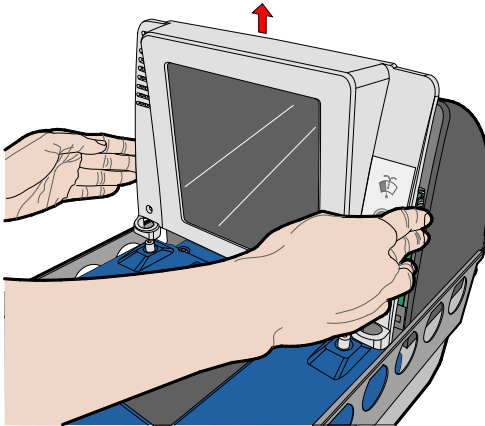

24055


Remove the Tower Cover

1. Depress the two tabs at the top of the Tower Cover to disengage the snap features.

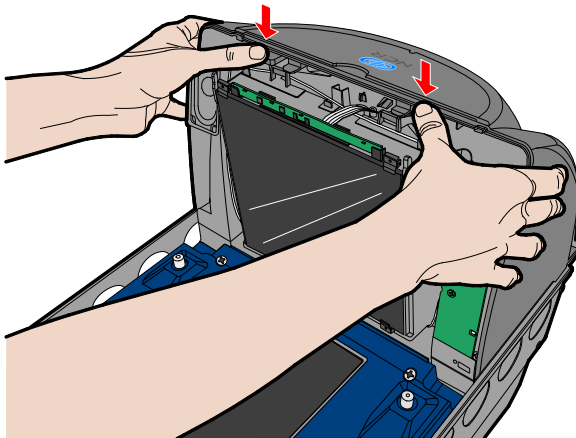

24050

2. Slide the Tower Cover towards the rear then lift it up until it is detached.

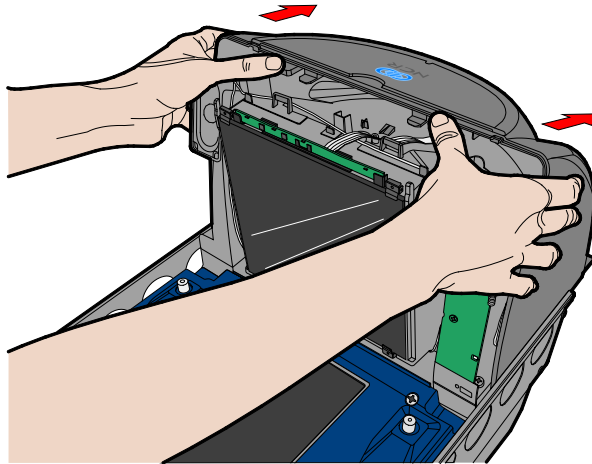


24049

Remove the Bottom Electronics Cover

1. Disconnect all external cables from the scanner.
2. Turn over the Scanner.

Note: For scanners with plastic base, skip to the "Install the Checkpoint Antenna" section after turning over the Scanner.

3. For scanners with metal base, remove the six mounting screws.
4. Carefully remove the Bottom Electronics Cover, ensuring that it does not catch on the Digital Board external connectors.

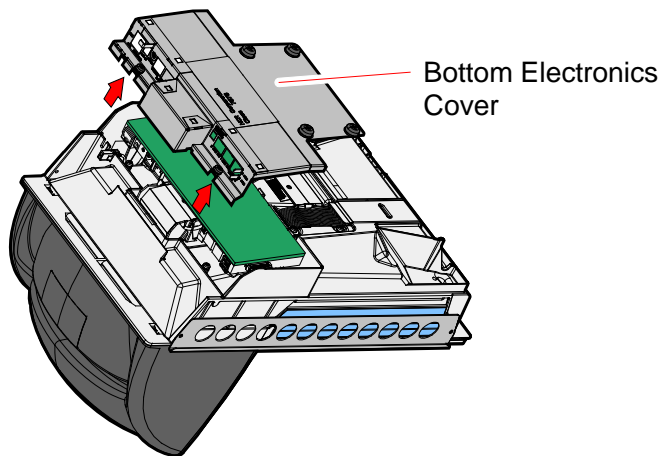


24469

Caution: Damage may occur to the Digital Board and external connectors if the Bottom Electronics Cover is forcibly removed while caught on the external connectors.


Install the Checkpoint Antenna

1. Insert the white connector into the slot as shown.
 - a. For scanners with metal base, seat the white connector in the notch at the base, and insert the loop end of the antenna through the hole as shown below.

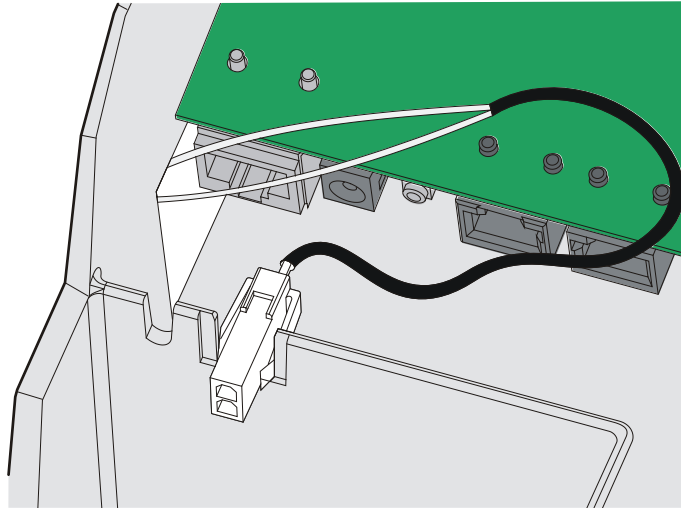


32433

- b. For scanners with plastic base, thread the antenna through the channel at the base, and insert the loop end of the antenna through the hole as shown below.

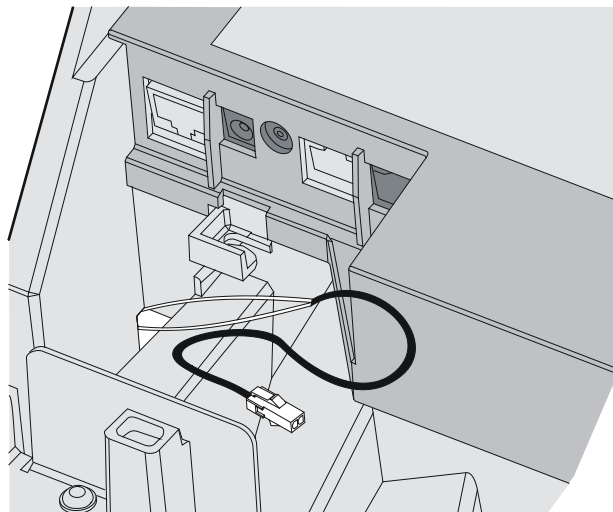

32434

2. Pull the loop end of the antenna through the hole at the left side of the scanner.

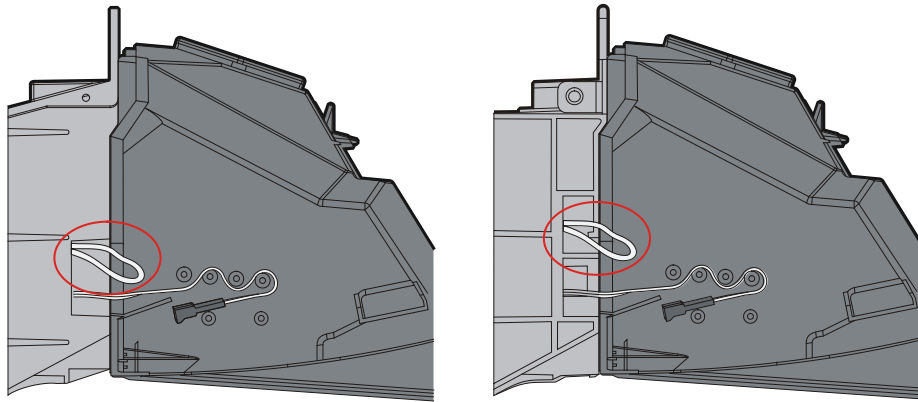


Metal Base

Plastic Base

32432


3. For scanners with metal base, reinstall the bottom electronics cover.
 - a. Position the Bottom Electronics Cover to its proper location on the bottom of the unit and install Bottom Electronics Cover, ensuring that it does not catch on the Digital Board external connectors.

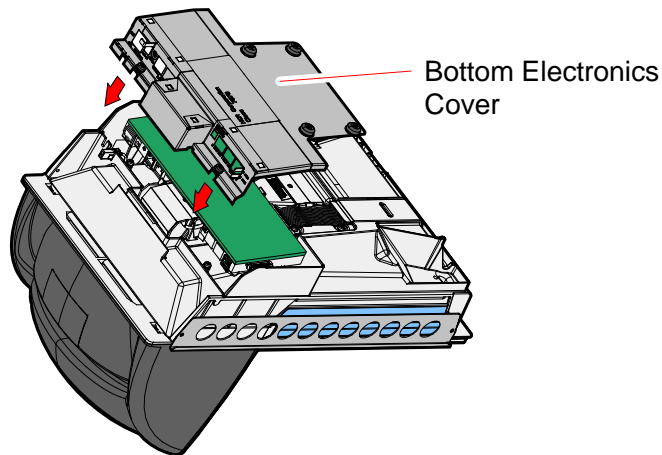

24470

- b. Install the six mounting screws.
- Caution:** Damage may occur to the Digital Board and external connectors if the Bottom Electronics Cover is forcibly installed while caught on the external connectors.
4. Turn over the Scanner.


5. Route the cable through the strain reliefs on the left side of the scanner.

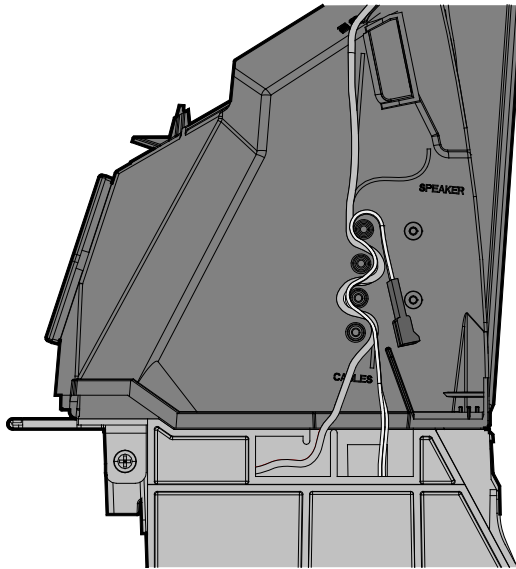


27785

6. Route the antenna with the loop as shown below. Ensure to use the strain relief on the top left side.

Place wire here, just before the shrink tubing. Pull tight after install.

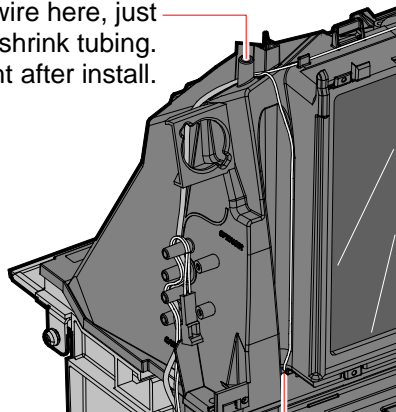

There is a small bump that the wire goes behind.

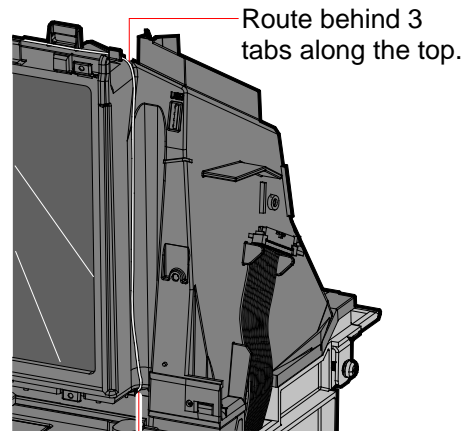


Route behind bump.

27798

Install the Washer


The scale assembly needs to be removed to check if it already has a washer under the right-hand screw.

1. Remove the Debris Guard.
 - a. Remove the four screws securing the Debris Guard.
 - b. Raise the front edge of the Debris Guard using the handle.
 - c. Lift up the Debris Guard and remove it from the unit.

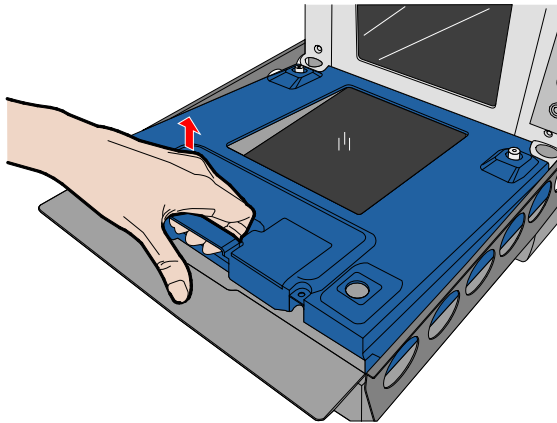

24057


2. Remove the Scale.
 - a. Remove the eight screws securing the Scale.
 - b. From the indicators on the metal bracket, pull the Scale Assembly upward.

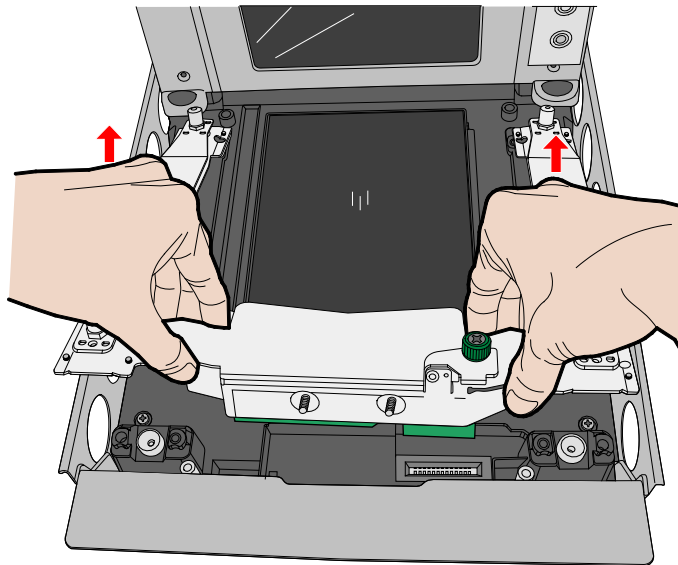

24061


Caution: Avoid pulling the Scale Assembly from the ends closest to the Tower Assembly. Doing so may damage the mating connector and the Scale Board.

3. Verify if the washer is already installed. If it is, re-install the Scale and the Debris Guard.

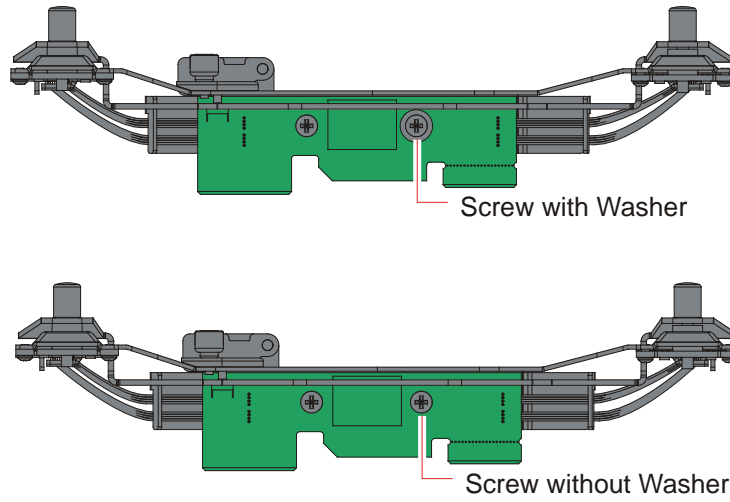


32599

4. If the washer is not yet installed, do the following:
 - a. Remove the screw on the right side.

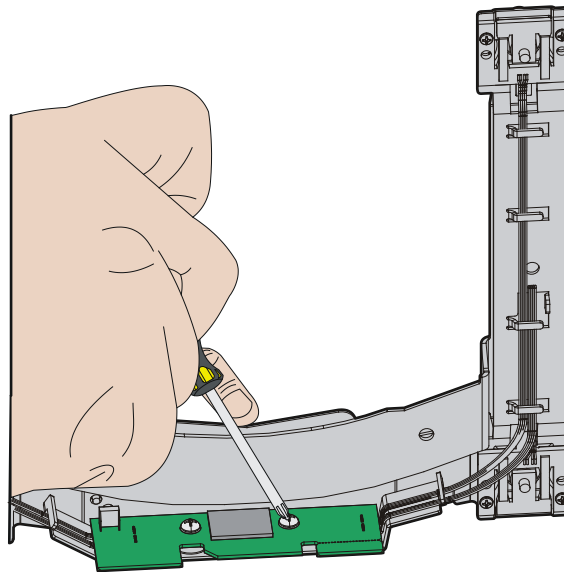

32440


- b. Install the washer, replace the screw on top of the washer, and tighten the screw until snug.

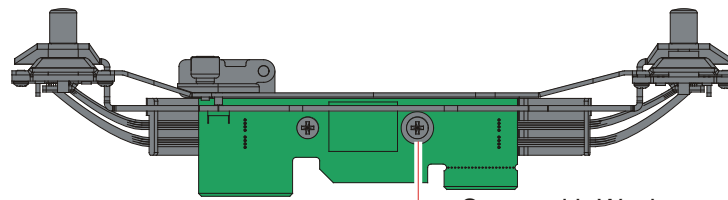

Screw with Washer 32436

Caution: To avoid stripping the screw and nut when installing, first rotate the screw counter-clockwise until it drops into the nut threads and then, rotate clockwise until snug. Also, screwdriver should be aligned vertically when tightening to avoid cross threading or damaging the screw and nut.

- 5. Install the Scale.
 - a. Align the Scale Board with the mating connector and insert the Scale carefully.

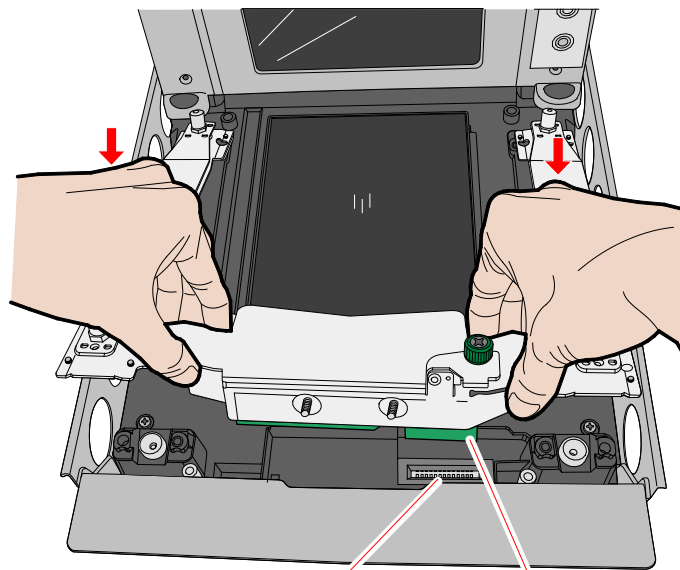


Mating Connector Scale Board

24063

- b. Replace the eight screws to secure the Scale.
- 6. Install the Debris Guard.
 - a. Slip the back lip of the Debris Guard under the Bezel.

- b. Lower down the front of the Debris Guard onto the unit.

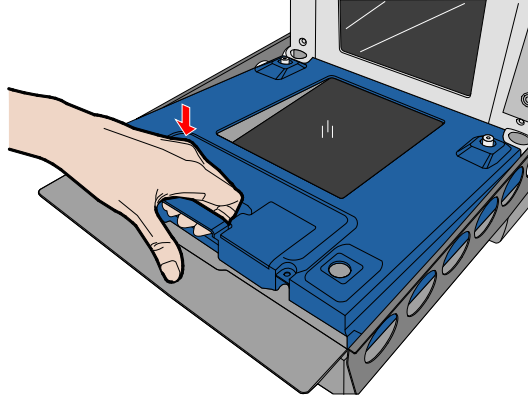


24058

- c. Install the four screws to secure the Debris Guard.
7. Calibrate the scale.

Note: For instructions on how to calibrate the scale, refer to the "Scale Calibration-Full Instructions" chapter of the *NCR RealScan 78 Bi-Optic Scanner/Scale (7878) Hardware Service Guide (B005-0000-1725)*.


Install the Tower Cover

1. Place the Tower Cover down onto the Inner Tower. Ensure no wires or cables are pinched between the Tower Cover and the unit.

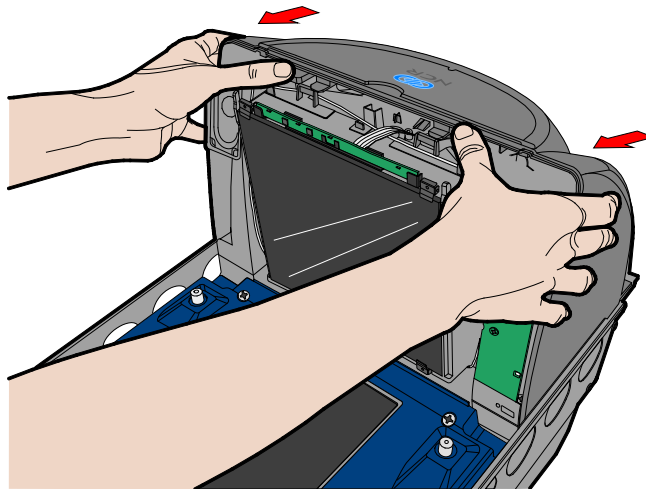

24050


2. Slide the Tower Cover until the two tabs snaps in.

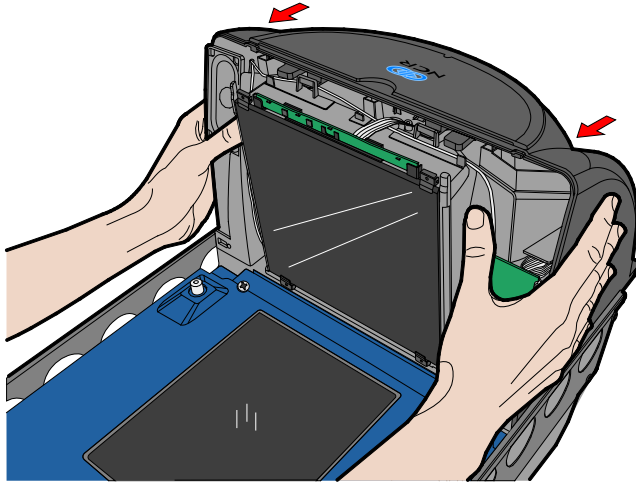

24056


Install the Front Bezel

1. Align the top edge of the Tower Cabinet with the top edge of the Front Bezel.

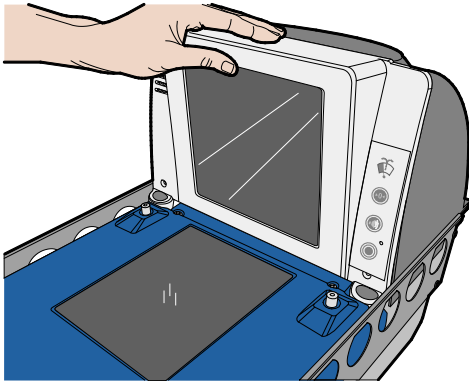

24051


2. Apply pressure on the bottom-left and bottom-right corners of the Front Bezel to latch it in place.

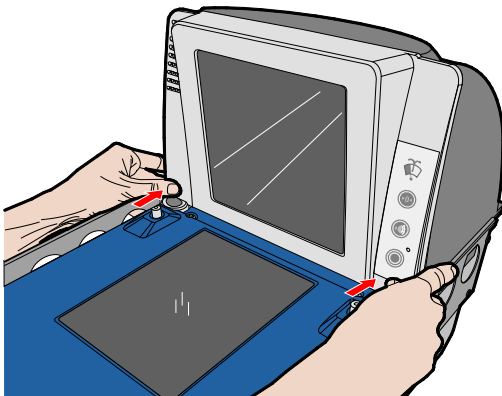

24052

Install the Top Plate

1. Lower the back edge of the Top Plate onto the two back Support Posts on the 7878.
2. Holding the front edge, lower the front of the Top Plate onto the two front Support Posts.

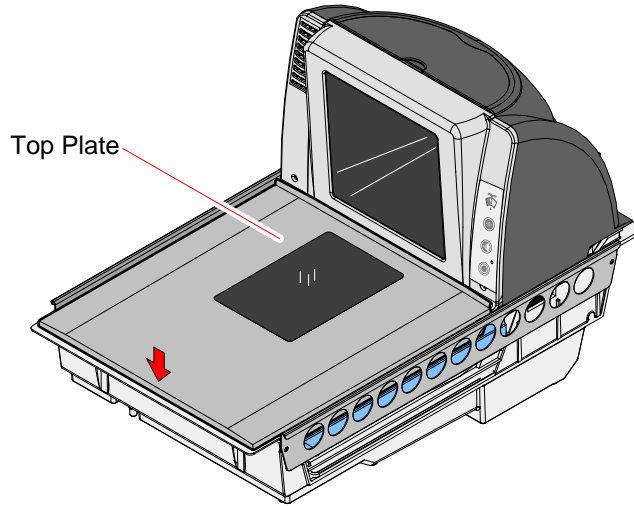


23795

Install the Checkpoint Cable

Connect the white connector of the cable to the Checkpoint Interlock Port at the back of the 7878.

Note: The other end of the cable is connected to the Checkpoint box.

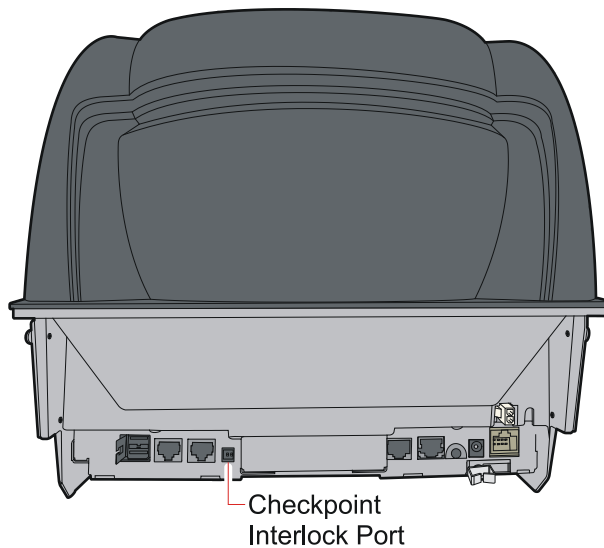

32435