KIT INSTRUCTIONS

SelfServ™ 90 Wall Mount (Dark White)

NCR

7709-K431

Issue A

Revision Record

Issue	Date	Remarks
A	Apr 2016	First Issue

Wall Mount (Dark White Color)

Introduction

This kit provides the components to add a wall mount to the NCR SelfServ™ 90 Kiosk.

Kit Contents

(4) Screw, M8x16, Socket Cap, Flanged
006-8624161

Wall Mount Bracket (Dark White)
795-0216801

Bottom Cover
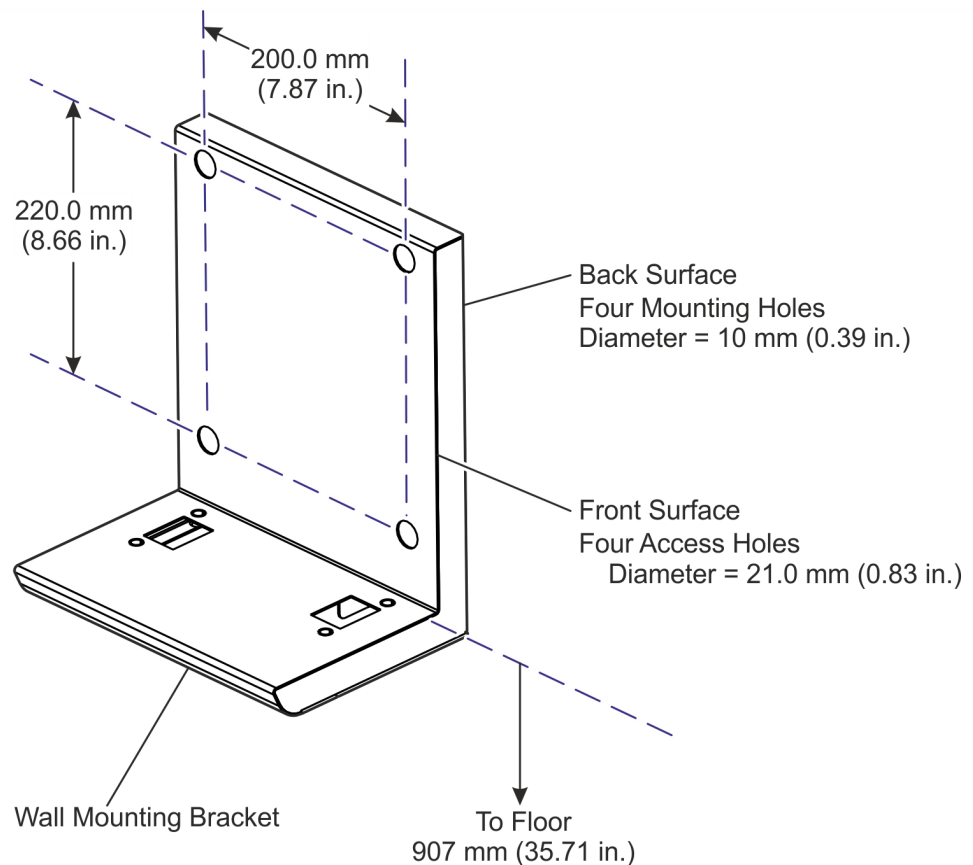795-0216401

(5) Screw, M3 x 0.5, 8mm, Philips, FH
006-8604919

60874
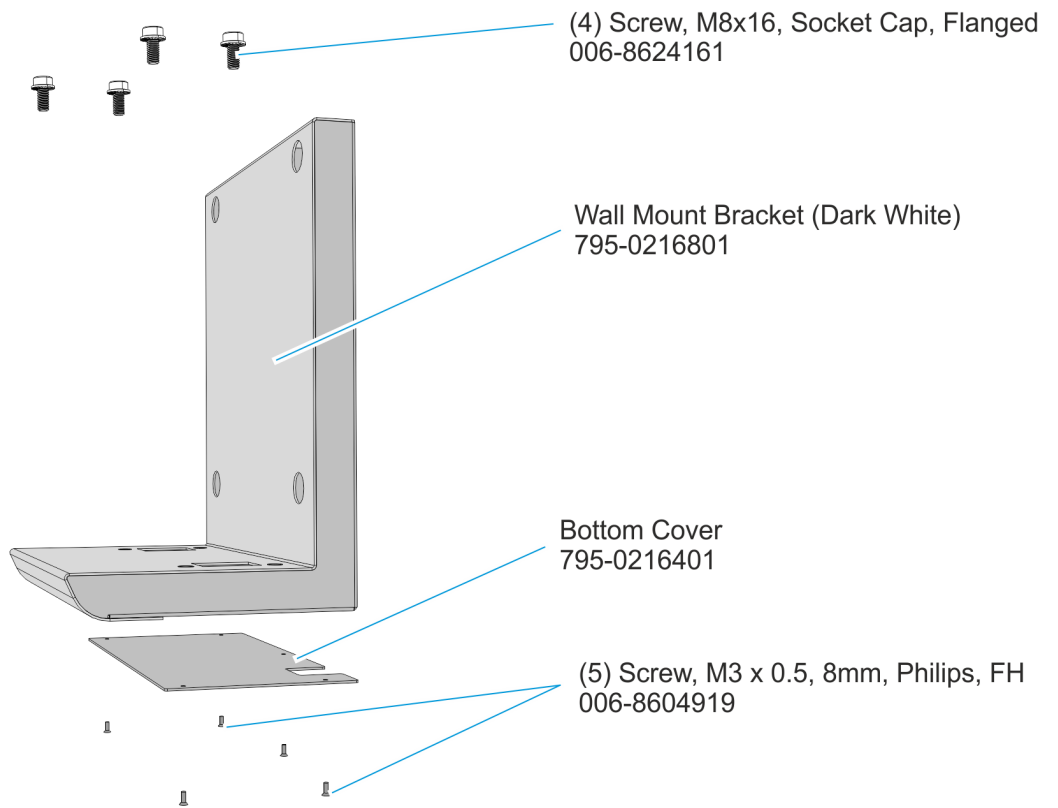
Installation Procedure

The wall mount bracket is first fastened to the wall then the kiosk is fastened to the wall mount bracket. The AC Power Cord and the LAN Cable go through a hole in the bottom of the kiosk and into the mount bracket; the cables feed toward the back of the bracket and out a hole in the bottom of it.

1.   Install the Wall Mount Bracket.

200.0 mm
(7.87 in.)

220.0 mm
(8.66 in.)

Back Surface
Four Mounting Holes
Diameter = 10 mm (0.39 in.)

Front Surface
Four Access Holes
    Diameter = 21.0 mm (0.83 in.)

Wall Mounting Bracket

To Floor
907 mm (35.71 in.)

Note: Use 5/16-inch (M8) bolts to secure the Wall Mount Bracket to the wall.   60878

NCR recommends locating the wall mount bracket so that the base of the bracket is 907 mm (35.71 in.) above the floor. Be sure that the mounting is adequate to support the weight of the kiosk: 23.2 kg (51.1 lbs). Also, be sure that the location provides adequate access and service clearance for the kiosk as identified in the *NCR SelfServ™ 90 (7709) Site Preparation Guide*.

2. Install the Mounting Screws (3) on the right side of the bracket. Do not tighten the Mounting Screws, leave room for the kiosk cabinet to slide under the screw heads or lock–washers.
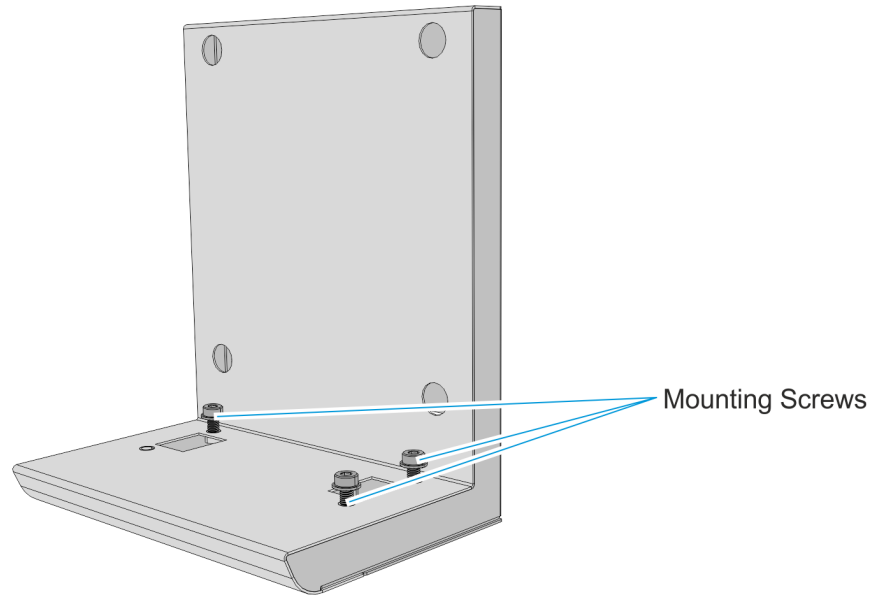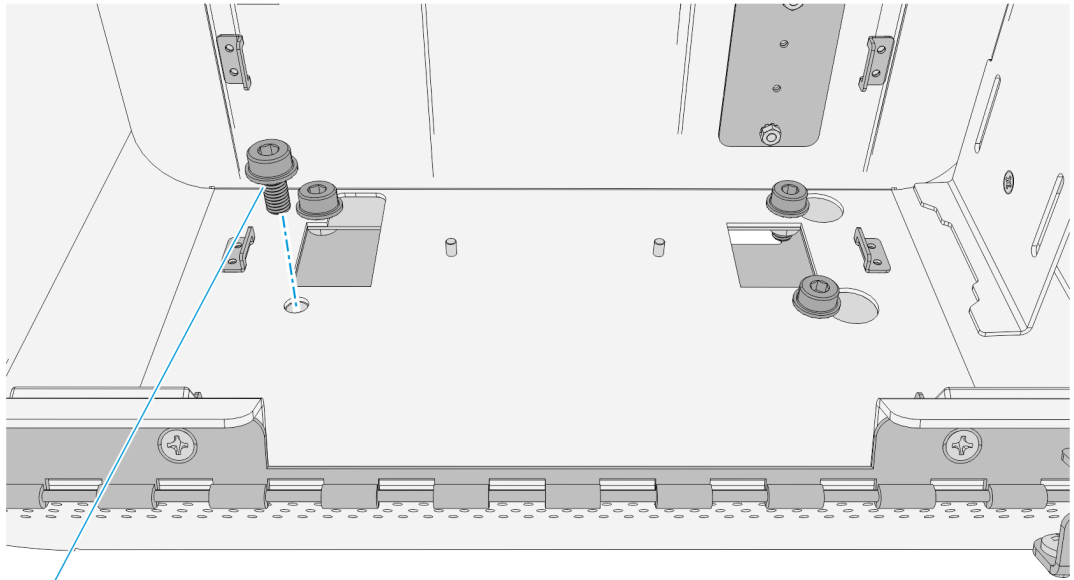

Mounting Screws

60877

3. Position the kiosk on the bracket with the Mounting Screws (3) extending up through the keyholes in the bottom of the kiosk cabinet. Slide the kiosk to the right.
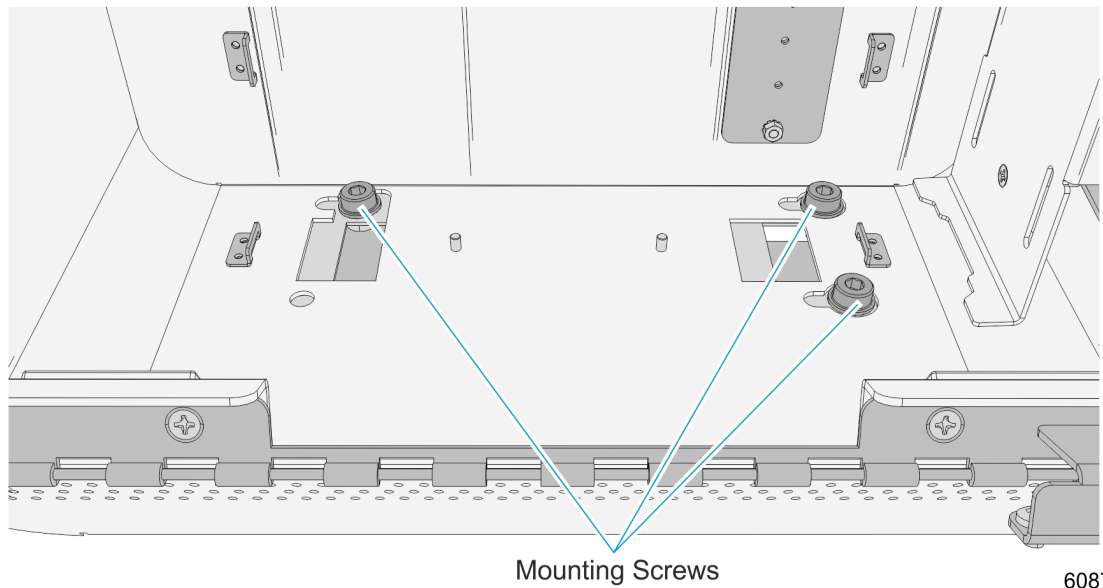
Mounting Screws

60876

4. Install the Mounting Screws (1) through the remaining mounting hole. Tighten all mounting screws.

Mounting Screw

60875