

7409-K602

Bezel Logo Lens (ITG)

Kit Instructions



Issue A

Revision Record


Issue	Date	Remarks
A	June 2010	First issue

Introduction

Use these instructions to replace the standard NCR logo lens with a custom Integrated Technology Group lens.

Installation Procedures


The Cosmetic Bezel is held on by screws and plastic tabs on the bezel.

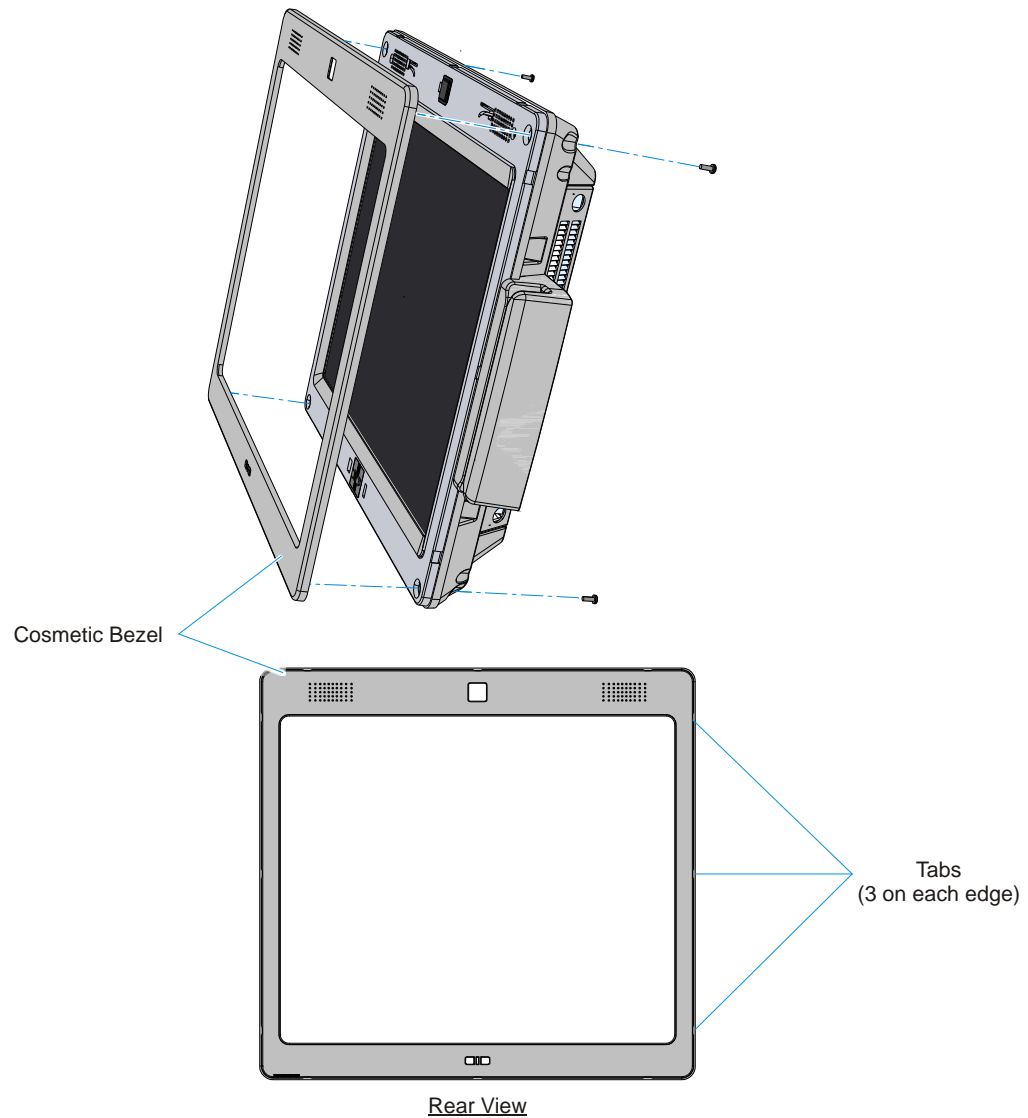

1. Remove the screws (4) from the rear of the unit.

- Using a flat blade screwdriver gently pry open the bezel from the cabinet at the plastic tab locations.


Caution: Prying the bezel open can mar the plastic. Perform this action starting at the lower center of the bezel, which will reduce the visibility of any scratches.

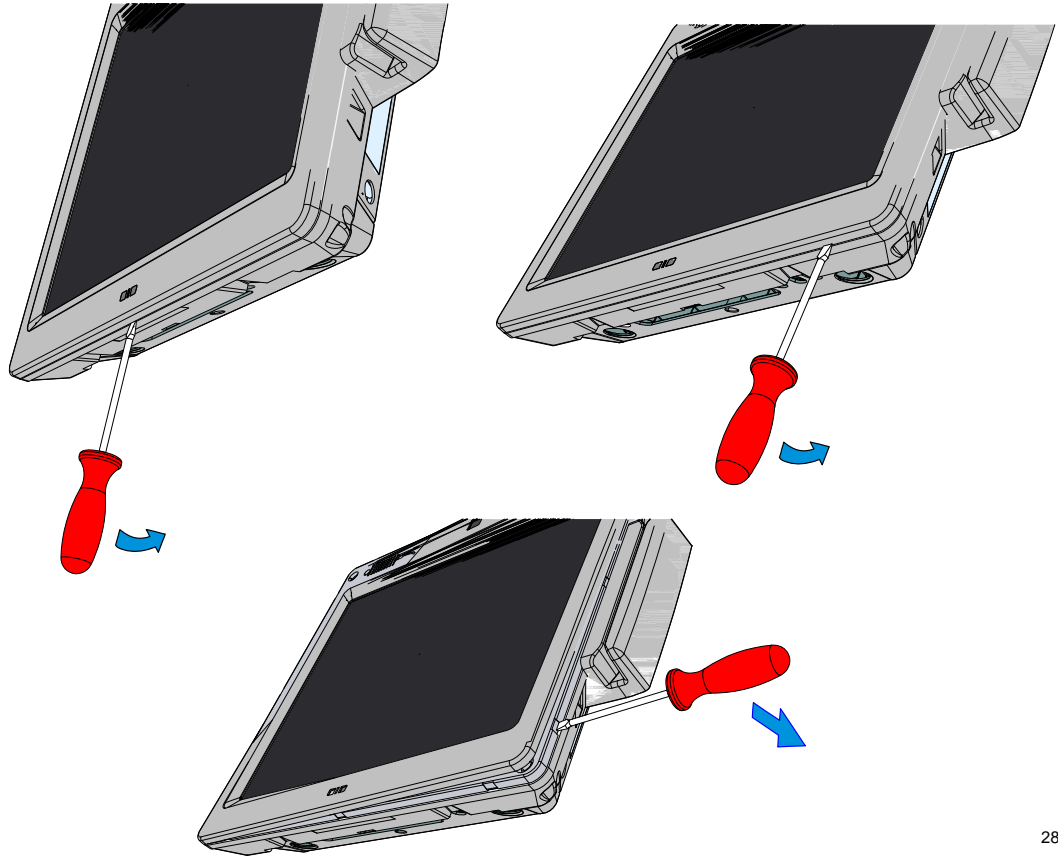

28516

After releasing the center latch repeat the procedure for the two latches holding the lower corner. By then you can get your fingers under the bezel and release the remainder of the latches by hand.

3. Remove the NCR Logo Lens and replace it with the new proprietary Logo Lens.

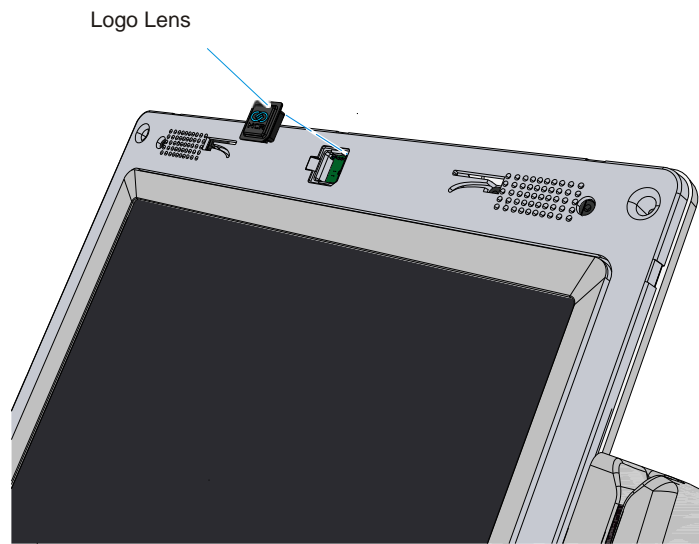

28514a

4. Install the Cosmetic Bezel, making sure all 12 tabs are snapped into place.
5. Secure the bezel with screws (4).