



Front Filler

Kit Instructions

7895-K750

Issue B

Copyright and Trademark Information

The product described in this document is a licensed product of NCR Voyix Corporation.

Product names mentioned in this publication may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Where creation of derivative works, modifications or copies of this NCR copyrighted documentation is permitted under the terms and conditions of an agreement you have with NCR, NCR's copyright notice must be included.

Disclaimer:

It is the policy of NCR Voyix Corporation to improve products as technology, components, software and firmware become available. NCR Voyix therefore reserves the right to change specifications without prior notice.

All features, functions and operations described herein may not be marketed by NCR Voyix in all parts of the world. In some instances, photographs are of equipment prototypes.

Therefore, before using this document, consult with your NCR Voyix representative or NCR Voyix office for information that is applicable and current.

© 2021

By NCR Voyix Corporation

Atlanta, Georgia, USA

All Rights Reserved


Revision Record

Issue	Date	Remarks
A	Dec 2021	First Issue
B	Nov 2024	Converted to Voyix template

Front Filler

The Front Filler kit is applicable to NCR 7895 midsize scanner/scale models that are using the full-size chassis. This publication provides procedures for installing the Front Filler kit to Common Product Name.

Kit Contents

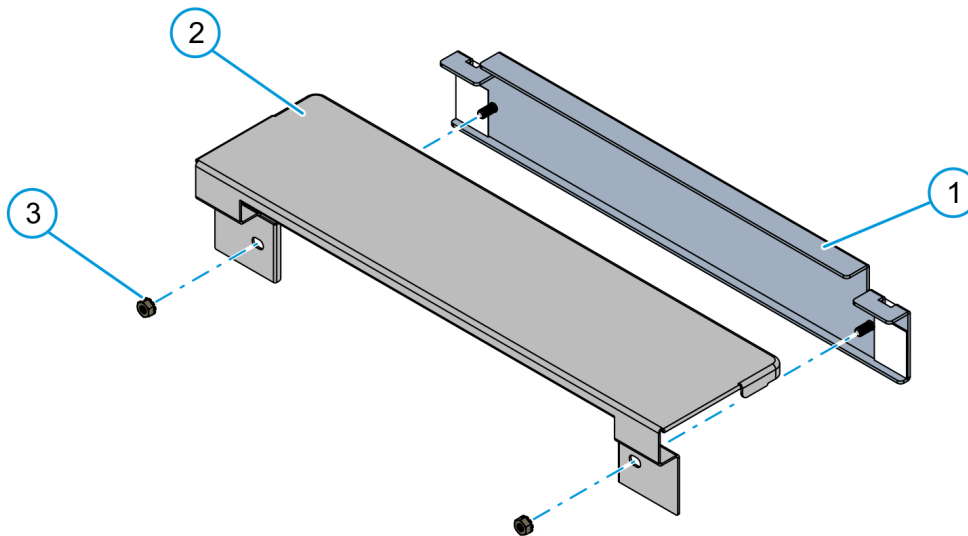

CCP-81788


Part Number		Description
497-0531937		7895-K750 Front Filler
1	497-0531906	Filler Bracket - 7895 Chassis
2	497-0531834	Filler Plate - 7895 Chassis
3	006-8611847	Nut, M4 Keps (2 pcs)
4*	497-0423108	Instructions Kit (Reference Sheet)

* Items marked with an asterisk are not called out on the image.

Installation Procedure


To install the Front Filler kit, follow these steps:

1. To remove the Top Plate, hold the front edge and the top of the Top Plate, and then lift the Top Plate off the scanner.

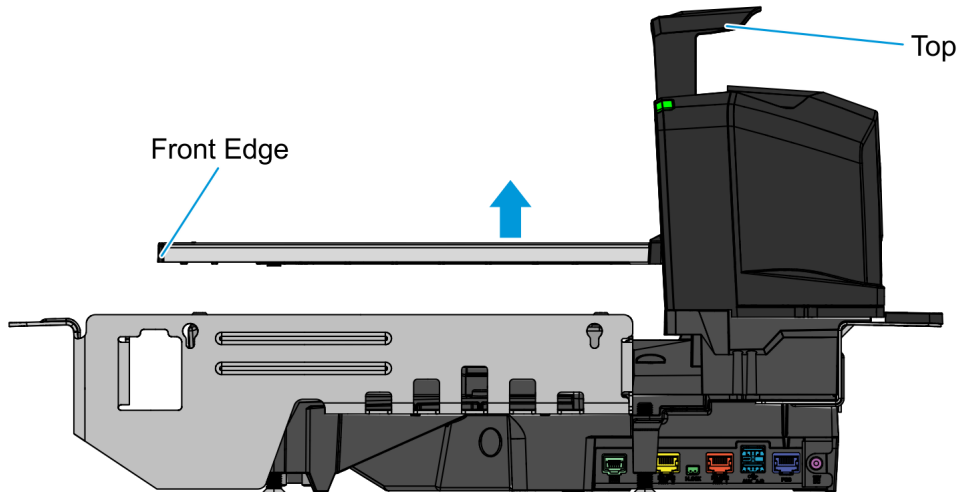


CCP-81787

2. Install the Filler Bracket.
 - a. Remove the weld tape release liners on the filler bracket.

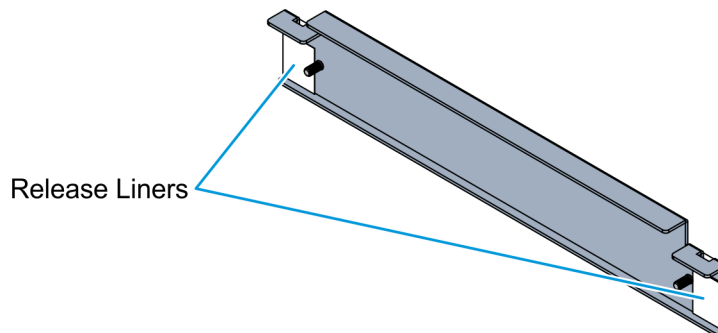


CCP-81790

- b. At an angle, lower the Filler Bracket onto the metal frame. Use the top of the tabs on the metal frame as locators.

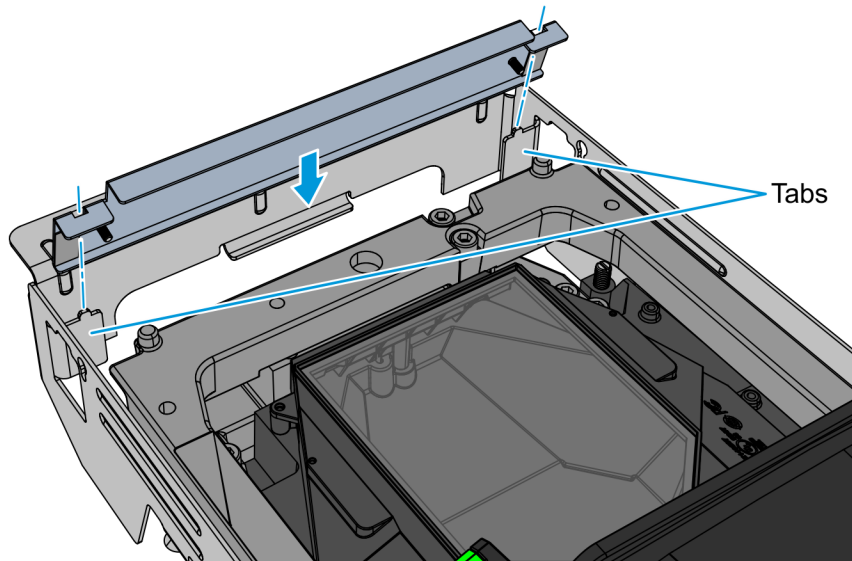

CCP-81789

- c. Pivot the Filler Bracket into position and press to securely adhere the weld tapes to the tabs.

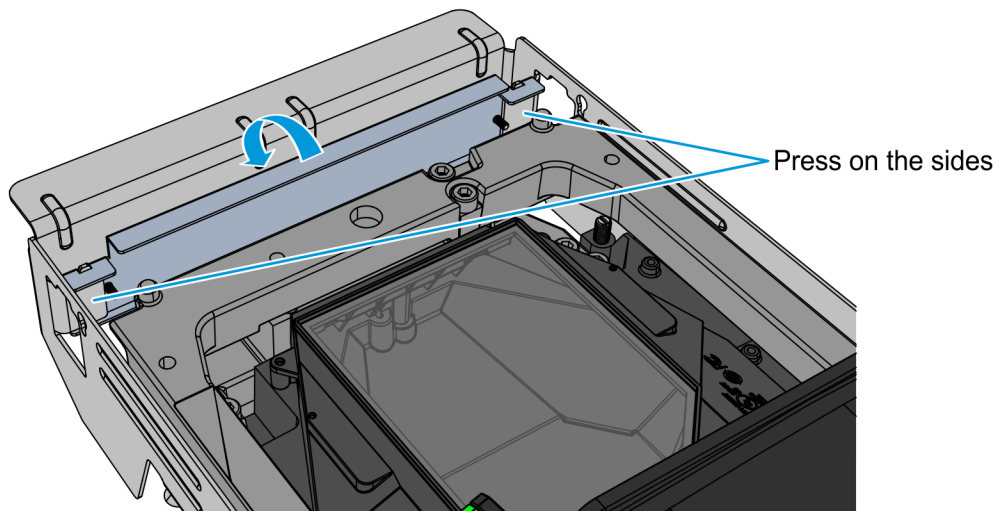

CCP-81786


3. Install the Filler Plate.

- a. Without removing the release liners, fold them in half.




Note

Ensure that the edges of the liners extend beyond the front edge of the Filler Plate. This makes it easy to remove the release liners later in the process.

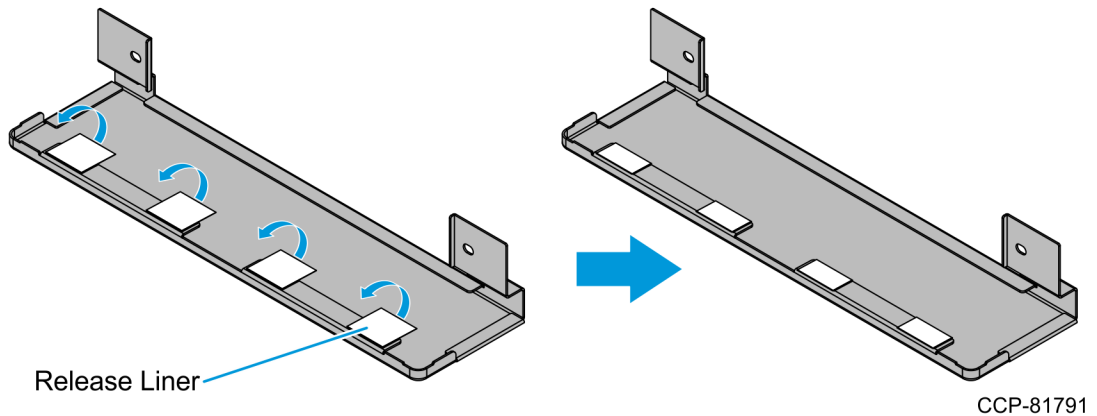


- b. Mount the Filler Plate onto the metal frame, inserting the mounting studs on the Filler Bracket into the mounting holes on the Filler Plate.

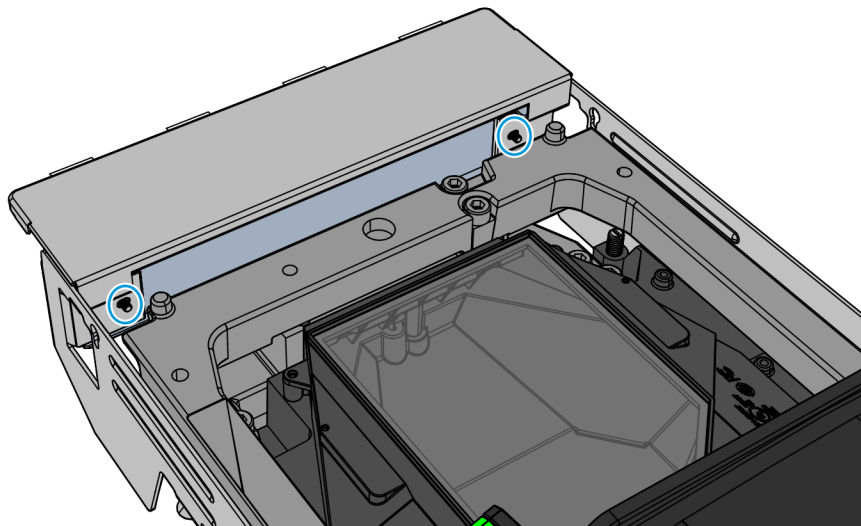

- c. Accessing from the bottom of the scanner, install the two nuts to secure the Filler Plate to the Filler Bracket.


Note

Before fully tightening the nuts, ensure that the Filler Plate is centered.

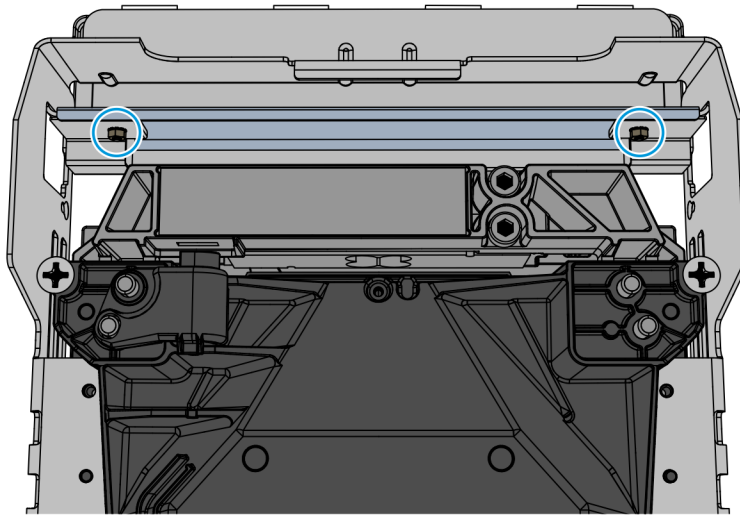


CCP-81793

- d. Pull the release liners away from the Filler Plate.

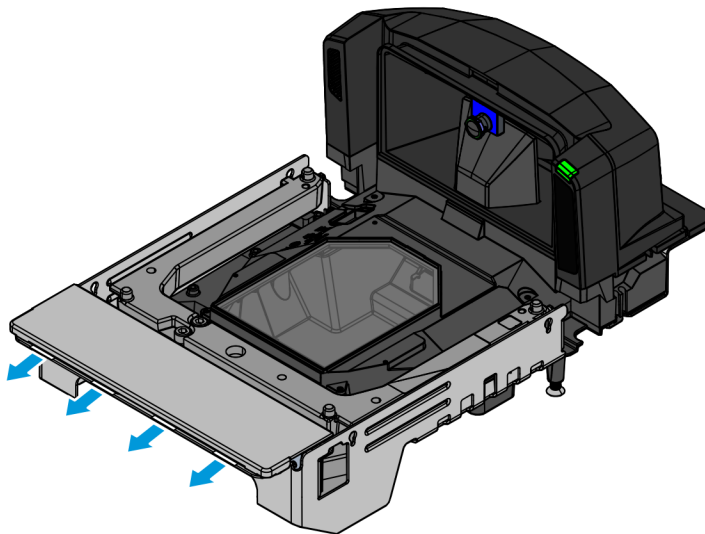


CCP-81794

- e. Press the Filler Plate onto the metal frame to securely adhere the tapes to the frame.

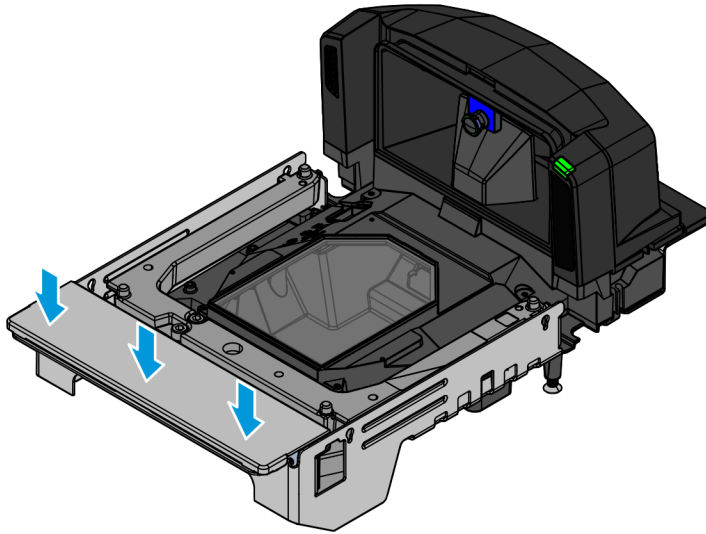

CCP-81784

4. To re-install the Top Plate, hold the front edge and the top of the Top Plate, and then lower the Top Plate onto the scanner until it rests securely on the supporting studs of the scale.

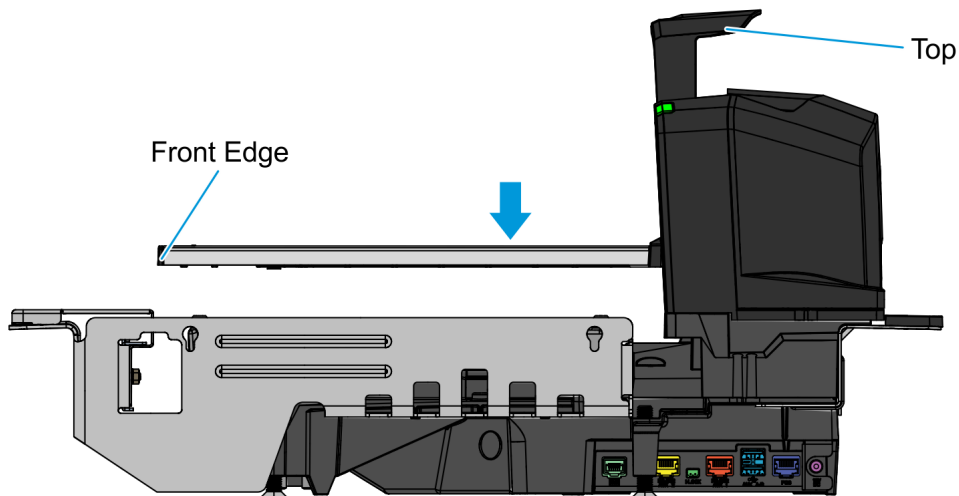

CCP-81785